

Contents

The following Help Topics are available :

[Basic setup parameters configuration](#)

[Presets](#)

Basic setup parameters configuration

This screen allows you to define the Solution-Pac 97 WAN basic parameters.

Automatic startup

Check this box to automatically start Solution-Pac 97 WAN at computer startup.

Serial port

Select the serial port on which the UPS is connected.

Agent IP Address

Enter the agent IP Address on which Solution-Pac 97 WAN will be connected.

Delay before shutdown

Enter the maximum delay (in minutes) before Solution-Pac 97 WAN starts the automatic shutdown procedure during utility failure.

Shutdown duration

Enter the approximate duration (in seconds) necessary for a complete computer stop.

Ok

Saves parameters and closes the program.

Cancel

Closes the program without saving parameters.

Help

Displays this help panel.

Preset

Open the window allowing you to select a predefined configuration according to your UPS.

Presets

This window allows you to select a predefined configuration according to your UPS.

Select a predefined configuration by clicking on it.

Ok

Saves your choice and goes back to the main window.

Cancel

Goes back to the main window without saving your choice.

Help

Displays this help panel.

