

## About Alter Resolution Explanation

### Items

[Resolution](#)  
[Scan](#)  
[Big\\_Screen](#)  
[Shortcut](#)  
[Colors](#)  
[Font Size](#)  
[Restart](#)  
[Change](#)  
[Test](#)  
[Shortcut List](#)

Changes display (Windows) resolution , number of colors, and mode. Any changes made will not be in effect until clicking (Windows) restart button.

## Resolution

Selects a display resolution.

1600 x 1200	(60Hz)	Ni
1600 x 1200	(96Hz)	i
1280 x 1024	(60Hz)	Ni
1280 x 1024	(70Hz)	NiFF
1280 x 1024	(87Hz)	i
1152 x 864	(60Hz)	Ni
1152 x 864	(70Hz)	NiFF
1152 x 864	(75Hz)	NiFF
1024 x 768	(60Hz)	Ni
1024 x 768	(70Hz)	NiFF
1024 x 768	(75Hz)	NiFF
1024 x 768	(87Hz)	i
800 x 600	(56Hz)	Ni
800 x 600	(60Hz)	Ni
800 x 600	(75Hz)	NiFF
640 x 480	(60Hz)	Ni
640 x 480	(75Hz)	NiFF

**Scan**

Selects a refresh rate.

## Big Screen

Selects a virtual desktop size.

	4MB Card	2MB Card	
256 colors		1600 x 1200	1600 x 1200
64K colors		1280 x 1024	1024 x 768
16M colors(24)	1152 x 864		800 x 600
16M colors(32)	1024 x 768		800 x 600

Big Screen size should be greater than or equal to Resolution size.

**Shortcut**

Selects a shortcut key.

## Colors

Selects color depths of 256,64K and 16M colors.

Resolution	4MB Card	2MB Card
1600 x 1200	256	256
1280 x 1024	256/64K	256
1152 x 864	256/64K/16M(24)	256
1024 x 768	256/64K/16M(24)/16M(32)	256/64K
800 x 600	256/64K/16M(24)/16M(32)	256/64K/16M(24)/16M(32)
640 x 480	256/64K/16M(24)/16M(32)	256/64K/16M(24)/16M(32)

**Font Size**

Selects font size of small and large.



## **Restart**

Restarts Windows.

## **Change**

Shows dynamic resolution changes.

**Test**

Automatically switches your monitor to display the selected mode without exiting this control panel, press ESC key or Cancel button to end test.

## **Shortcut List**

Lists shortcut keys.