

NAME

as2650 – cross assembler for microcomputers

SYNOPSIS

as2650 [-p cpu] [-l listfile] [-o hexfile] [-d] [-s symbolfile] input

DESCRIPTION

The as2650 command assembles the input file into a text output file representing the program memory for a microcomputer.

Options

-p cpu Ignored by this program.

-l listfile

Output a file formatted with the memory address, data, and source input lines.

-o hexfile

Output the memory data image in a form accepted by most prom programmers.

-h hexfile

Same as -o.

-d Save the intermediate data file (see FILE) and abort the execution at the end of processing.

-s symbolfile

Print the symbol table values and names, one per line in the specified file.

FILES

/usr/tmp/frtXXXXXX

SEE ALSO

Frankenstein Cross Assemblers Users Manual (file base.doc) Appendix for as2650 Frankenstein Assembler (file as2650.doc)

NOTES

There is only one input file.