

PWR128 On-Line Manual Contents

in the taskbar.

2. Click on the color depth (and resolution) you want.

in the taskbar.

2. Click on the resolution (and color depth) you want.

Setting Your Cursor Color

in the taskbar.

2. Go to Refresh Frequency and click on a new refresh rate.
3. Your screen will go black, and your desktop will change to the selected refresh rate.

near the top of the remote. A dialog box will appear to set the capture parameters, including frame rate, capture time, file name, etc.

8. Click **OK** to begin capture.

selector at the top of the remote and set it to **File**.

2. Click **Open** to bring up the **Open File dialog** box.

3. Locate the file, and click **Open** to bring up a display window and begin playing.

Playing Video and Audio CDs

to load the CD, and begin playback from the first track.

4. You can now use the keypad to select a track to play, or use the **EDIT** command to create a pre-programmed play list.

Creating a Program

