

Please check your system to identify that the fan really exists or check the **Fan speed limit** to make sure it is in **proper range** (recommend to use the default limits.) or change the fan.

[See more information...](#)

