

***SUPER
SWEEPY***

USER MANUAL



Introduction

Congratulations on the purchase of your new Super Sweepy - the lean, mean, cleaning machine.

It is very important for you to read this manual carefully before you assemble and install your Super Sweepy correctly.

Correctly installed in an effectively operating pool system, Super Sweepy will give you years of satisfaction.


The Super Sweepy automatic swimming pool cleaner is a hydraulically operated machine. Throughout its life in the pool the Super Sweepy will give you excellent service, cleaning and removing dirt and deposits thereby reducing chemical demand.

If you wish to take the machine out of the water while swimming, detach the Super Sweepy from the hose and place in the shade - never leave the machine or the hoses in the sun. Also remember to keep the hose in a straight line.



Component Checklist

- 1....Cleaner assembly
- 2....Footpad
- 3....Suction seal
- 4....Bumper assembly
- 5....Hose adaptor
- 6....Hose weight (2)
- 7....Adaptor cuff
- 8....Regulator valve
- 9....Scoop
- 10..Float assembly
- 11..6 x 1.2m hoses (kombi pack)

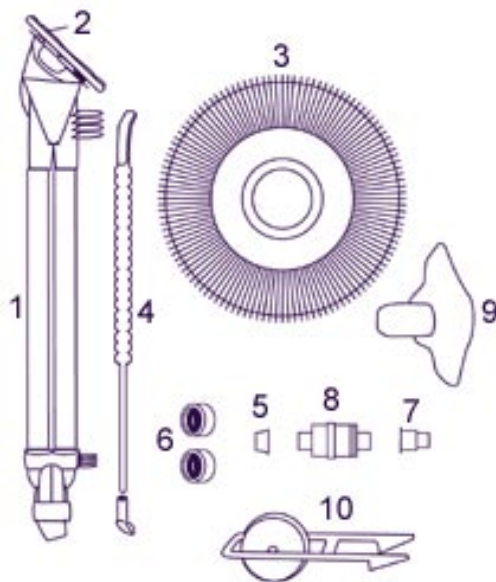

Fitting the Seal


Slide the seal over the top of the swivel head and down over the main body as illustrated in Figure 1. The seal should sit in the groove just above the footpad.

Once in place, the seal should rotate and turn freely about the base of the main body.

The seal should be placed with the pleats facing upwards.

IMPORTANT:

Please note that the footpad and seal are wearing items and are not covered by the warranty. In order to prevent damage to the Super Sweepy main body they must be replaced when worn.

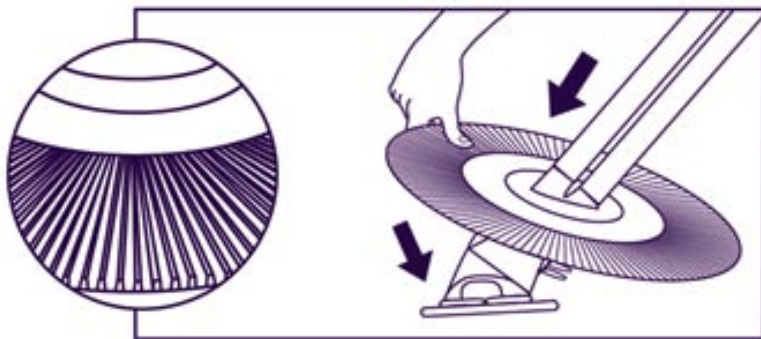

Note: Damage to the main body due to foot pad wear invalidates the warranty.


The pleated seal is suitable for plastered, vinyl, fibreglass and chip-tile swimming pools.

Fitting the Skirt

Position the skirt so the straps wrap into the grooves on the sides of the main body and away from you. Pull the left T-shaped end of the strap so it slides into the last slot on the back of the main body. Repeat these steps for the right strap.


IMPORTANT:

For the proper fit of the skirt, the left strap must be fitted first.

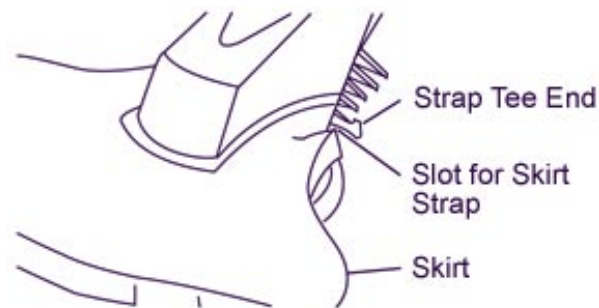


Fitting the Bumper Strap

Insert the bottom end of the bumper strap (end closest to the bumper beads) into the slot provided on the main body. Insert the top end of the bumper into the slot provided in the swivel head.

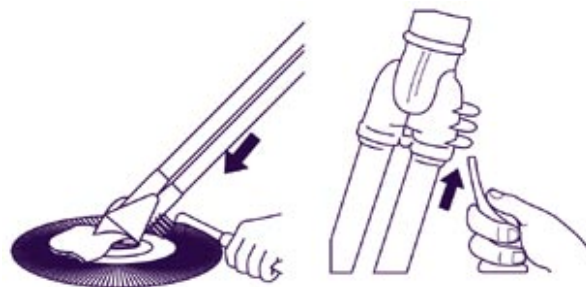

Fitting the Dive Float

Super Sweepy's float fits into the slots on the top of the main housing. Start off by sliding the tip of each triangular end into the opening of each respective slot. Keep pushing the triangular ends into the slots until the notches on the bottom of the triangular ends slip into place. [See picture] Insert the top end of the bumper into the slot provided in the swivel head.

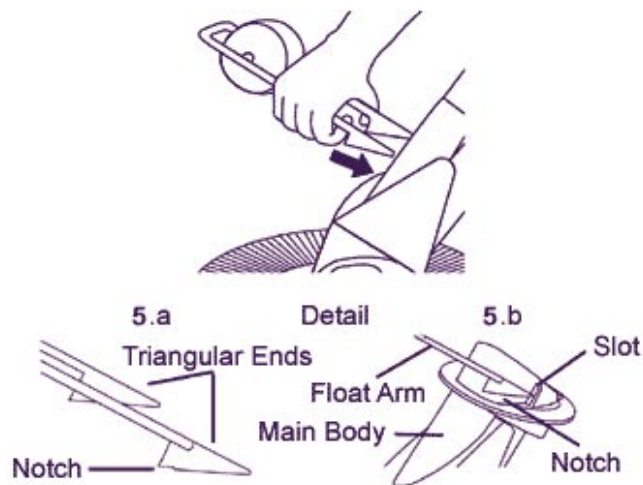

Hose Assembly


The Super Sweepy hose comes in sections which must be assembled. Each section has a male and a female end. Shove the male end of a hose section into the female end of the swivel head. Then shove the male end of the next section into the female end of the previous section. It is made easier by damping the hose ends with water (below). Finally assemble a female hose end to the automatic skim valve. See to it that the skim valve is installed in the right direction (as shown on the skim valve).



For optimum performance of your Super Sweepy use genuine Kreepy Krauly hoses. Use of other hoses invalidates the warranty.

Correct length:


The length of your hose is vital for all over cleaning of the pool. The hose must reach the farthest corner of the pool from the skimmer and to allow for curves in the hose, make sure you have at least one extra hose length.

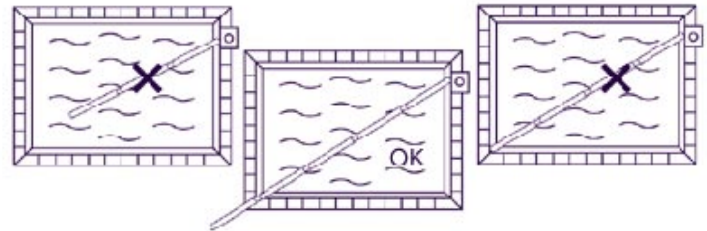

**SUPER
SWEEPY**

Installation


Thoroughly clean and backwash the filter to ensure it is free from dirt and debris otherwise your New Super Sweepy will not work.

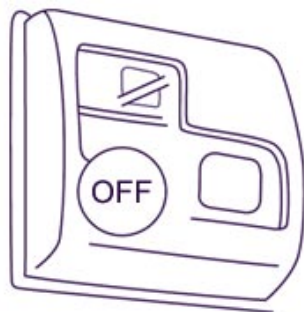


A: Switch the pump off



B: Clean skimmer and leaf strainer. Put it back.

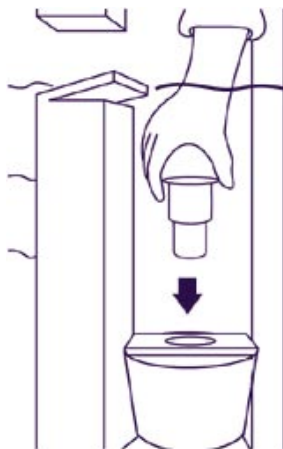


C: Place valve adaptor cuff into vacuum lid.

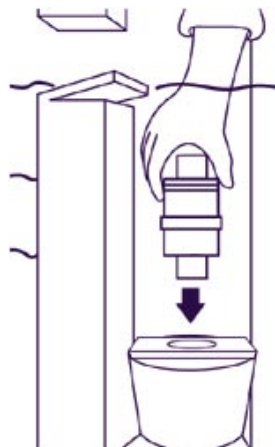


D: Place Auto-Skim Valve into valve adaptor cuff.

**SUPER
SWEEPY**

Installation continued

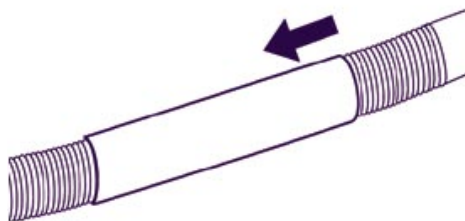

E: Slide hose protector over hose.

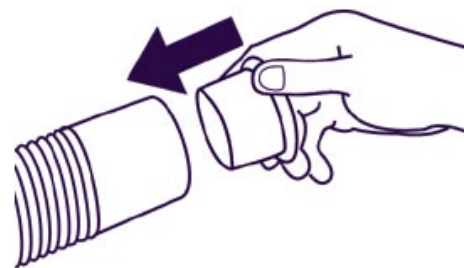

F: Place hose adaptor into hose.



G: Place the New Super Sweepy into the pool and allow it to sink to the floor. Feed the hose down into the pool until it is completely filled with water.

No air must be in the hose when it is fitted into the valve adaptor cuff.





H: Switch pump on.
Your fully-assembled New Super Sweepy will start pulsating immediately.

**SUPER
SWEEPY**

Balancing the Hose

You must always have 2 hose weights on the hose. The weights are designed to balance the Super Sweepy correctly. The first weight should be in the middle of the length nearest to your Super Sweepy. This controls the movement in the shallow end of your pool. To control the movement in the deep end, the second weight should be placed halfway up the second length of hose.

The balance between the first and second weights regulate the movement around the pool. If your hose is too light, your Super Sweepy will float. All weights should be adjusted slightly closer to your machine. If your hose is too heavy, your Super Sweepy will sit on its bumper strap. In this case move the weights further away from your machine.

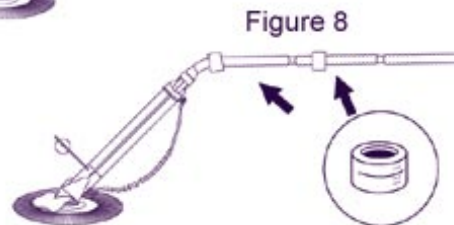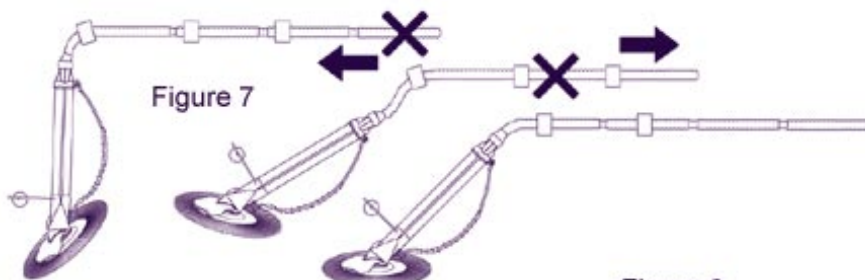

**SUPER
SWEEPY**

Troubleshooting 1 of 5

Because of the individual characteristics of your pool, some additional adjustments may be required to get the best performance from your Super Sweepy.

If there seems to be a problem, check the common causes of cleaner problems. If you still need help, call your nearest pool professional.

- Is the filter clean? Clean filter
- Is pump strainer basket clean? Clean basket
- Is debris blocking the bottom of the cleaner? Remove debris
- Are there any leaks in the hose? Replace leaky section
- Is auto-skim valve free of debris? Clean valve

If Super Sweepy slows or stops and air bubbles enter the pool at the return line:

- Find and correct the air leak that is causing the pump to lose its prime (pressure):
- Check the hose to ensure there are no leaks.
- Check the vacuum connection. It should be submerged so no air enters the system.
- Check the pump basket lid for looseness, cracks, worn or missing O-rings.

If you need assistance, contact your nearest pool professional.



Troubleshooting 2 of 5

If Super Sweepy is neither moving nor pulsating:

- Check for debris in the filter or pump basket.
- Check for debris in the cleaner's flapper.
- Pool pump and filter system may be too small (incapable of providing 60 litres per minute of water flow). Consult your pool professional.

If Super Sweepy stays in one end of the pool:

- Check the return line water flow and re-direct as necessary downwards.
- Check that the hose is long enough to reach to the end of the pool.

If Super Sweepy stays at the steps at the shallow end:

- Check the return line water flow and re-direct as necessary downwards.
- Check the automatic regulator valve to make sure it is correctly installed and not filled with debris.

Accessory

If the problem continues, it is advisable to install the Super Sweepy Guidewheel as it will push the machine away from the steps and allow it to continue cleaning.



Troubleshooting 3 of 5

If Super Sweep tracks in a repetitive pattern:

- Check the swivel on the top of the cleaner. It should turn freely.
- Check the return line water flow and re-direct as necessary downwards.
- Check the hose to ensure it has not become bent or kinked. It only takes one bent or kinked hose section to hinder the cleaning coverage. One way to check for kinks in your hose is to lay each section flat on your pool's deck (or other flat surface). The hose should be perfectly straight and flat.
- Do not coil the hose when taking your cleaner out of the pool because it will retain the coil shape, forming a bend or kink.
- Check the position of the dive float. It must be lined up with the centre of the main body and swivel head. out of the pool, then fit an Extended Dive Float Restrictor, as indicated in bottom diagram.




Troubleshooting 4 of 5

HOW TO REMOVE DEBRIS FROM THE FLAPPER.

IMPORTANT: The pool pump must be turned off before removing the cleaner from the pool.


- Sometimes debris may clog the bottom of the cleaner and prevent flapper movement or restrict water flow. The flapper is located inside the main body and must move freely at all times.
- You can see the flapper through the opening in the baffle plate when you turn the cleaner upside down, as shown in the diagram below. Jiggle the flapper with your finger or flush the cavity with a hose to force out any debris lodged inside the main body.

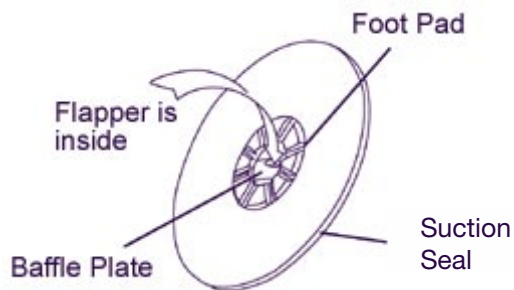

**SUPER
SWEEP**

Troubleshooting 5 of 5

- If debris is still lodged inside, you must remove the flapper. First lift up the lip of the foot pad and insert a flat-headed screwdriver along side one of the two tabs found on either side of the baffle plate. (See Figure b) Push the tab inward with the screwdriver until the baffle plate releases. Place a finger into the centre opening of the baffle plate and pops out. Then pull the flapper out. Note: You should be able to do this without taking the foot pad off.
- Once the debris is dislodged, insert the flapper back into the main body and snap the baffle plate back into position. Be sure that it is securely in place. (See Figure d)

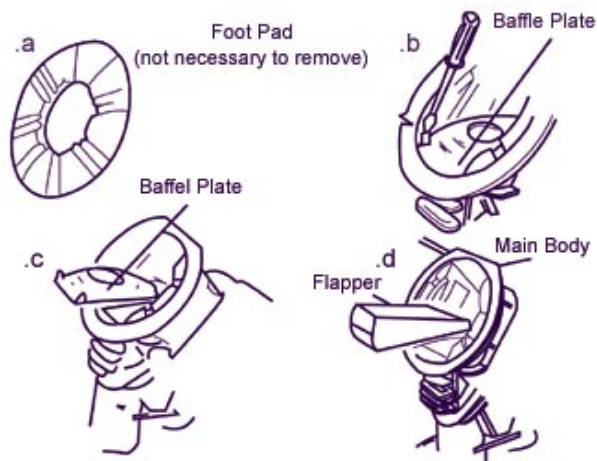

Warranty

We warrant your new pool cleaner machine unit to be free from defects in material and workmanship for 2 YEARS from date of purchase, subject to our standard conditions of sale. Please return the attached reply card to ensure your warranty is recorded.

Standard Conditions of Sale.

The WARRANTY excludes:

- Defects in the hose. (Genuine Super Sweep hoses are warranted for three years against manufactured defects.)
- Super Sweep warranty terms and conditions apply.
- Normal wear and tear of the Footpad and Suction seal. These must be checked monthly and replaced when worn.
- Damage due to abnormal use, lack of care, negligence, undue exposure to sun, heat, and all such acts or omissions beyond our control.
- Damage caused by an incorrect chemical balance in the swimming pool.
- Any obligation other than the obligation to repair or replace defective parts.
- Discolouration of parts. (Your Super Sweep may become discoloured as a result of being subjected to use in your swimming pool. Such discolouration, however, shall in no way affect the cleaner's operating ability.) The Super Sweep Warranty is given in place of all warranties, guarantees, express or implied, of merchantability, fitness for particular purpose, or otherwise.
- The warranty is not transferable

