

# nView Setting Guide


## A. EQUIPMENT

1. System: Windows ME
2. Model: SP7100/64M B1
3. BIOS: 4.17.00.24
4. Driver: V27.xx or later
5. Two monitor


\*TV and Panel is option.

## B. HOW TO CHANGE DISPLAY TO TV


1. Right click mouse button on desktop, select **properties**.
2. Select **settings**.
3. Select primary monitor and click **advanced**.

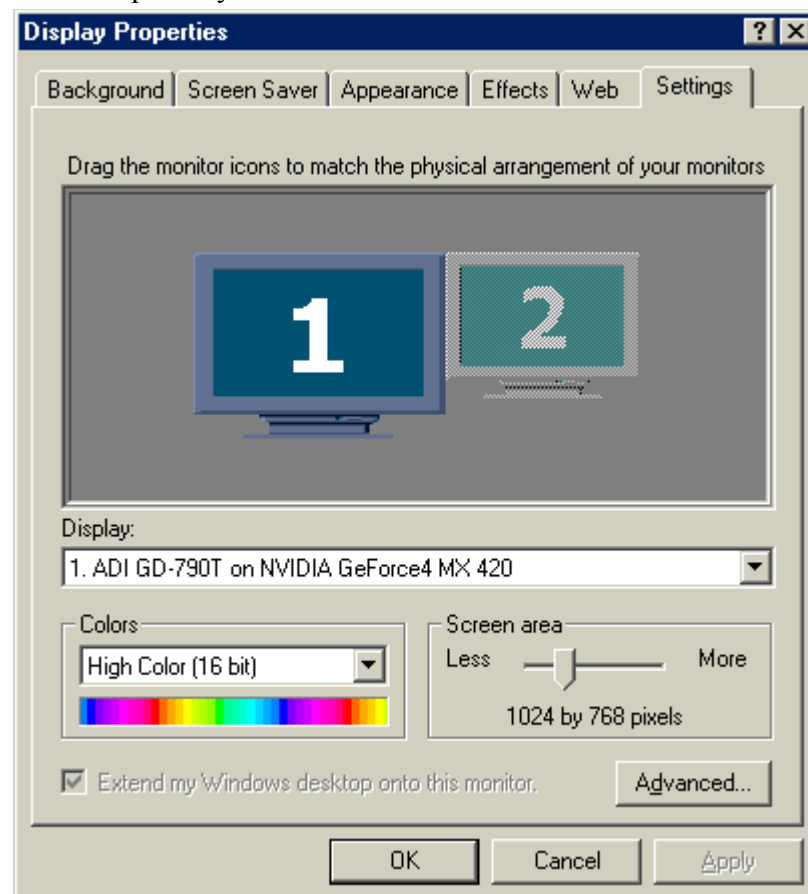

4. Select **nView**.

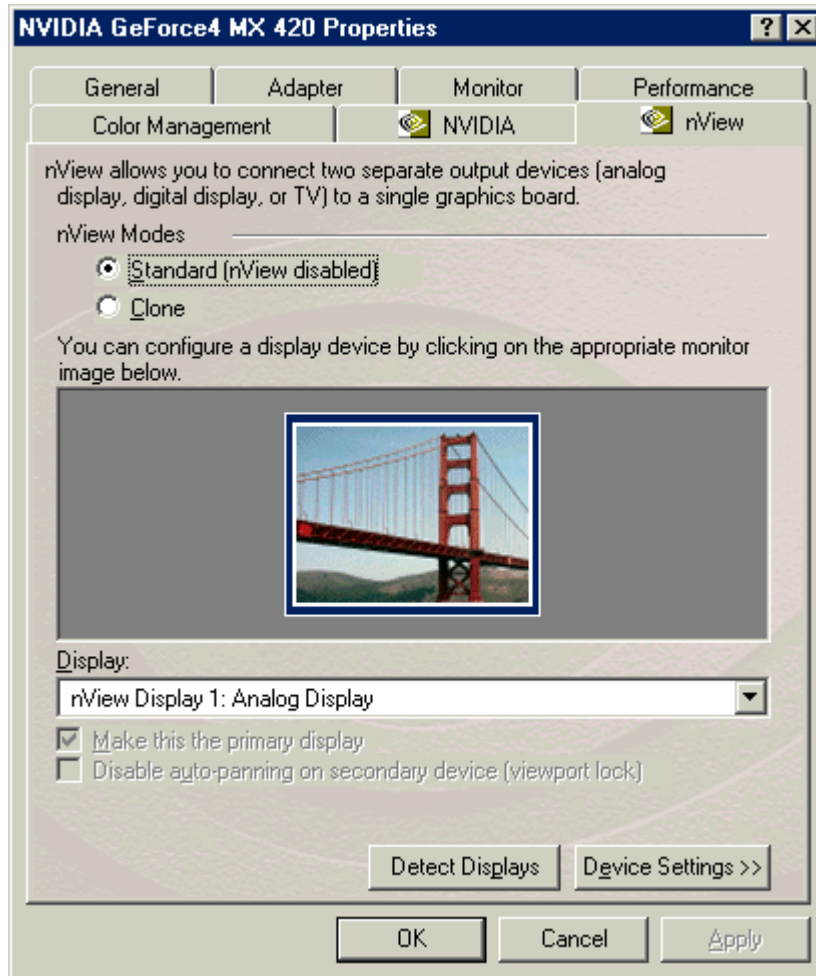

5. Select **Device Settings**, then you can choose output device to show your display.

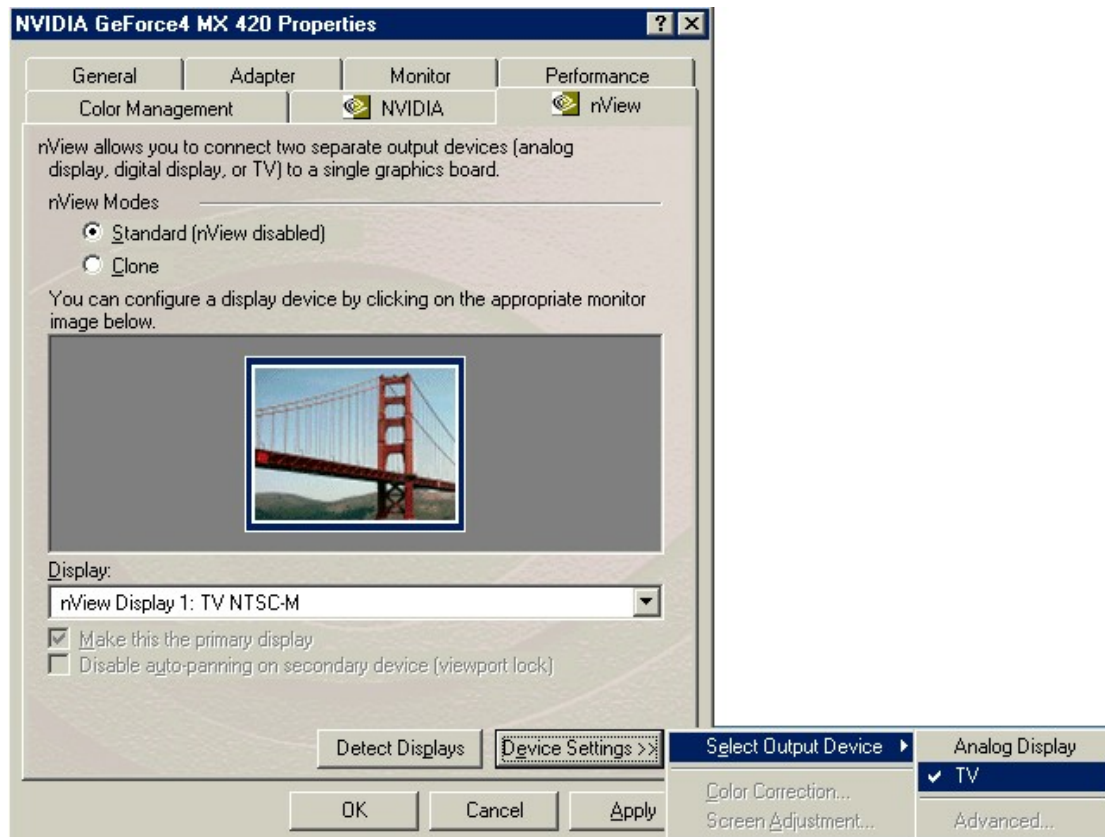


## C. HOW TO USE TWINVIEW

### 1. CLONE MODE


1.1 Right click mouse button on desktop, select **properties**.

1.2 Select **settings**.

1.3 Select primary monitor and click **advanced**.

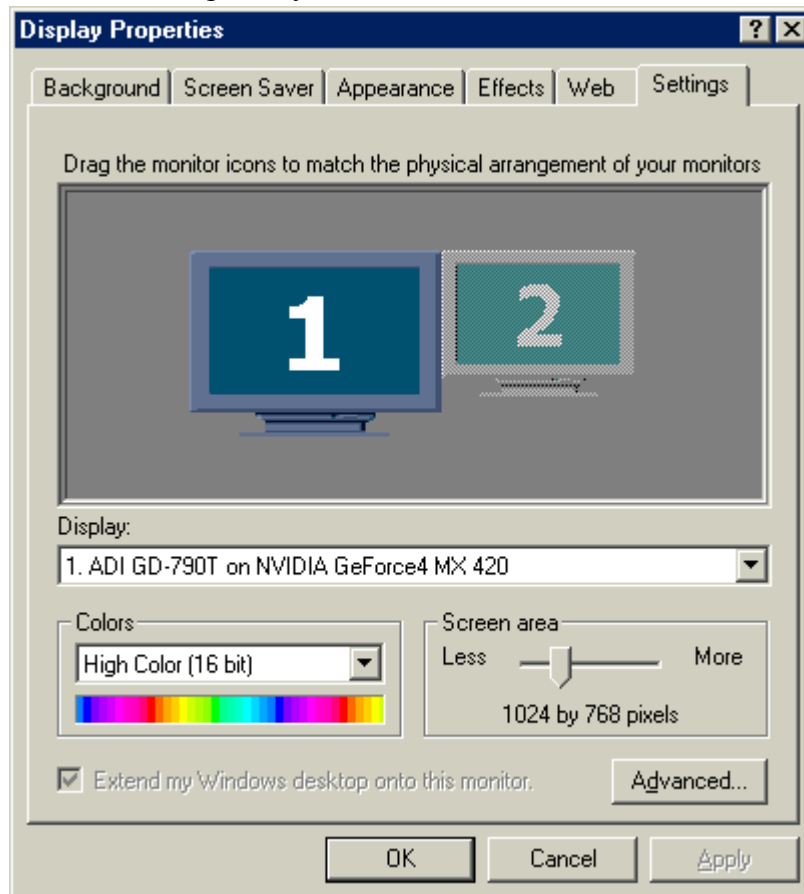

1.4 Select **nView**.

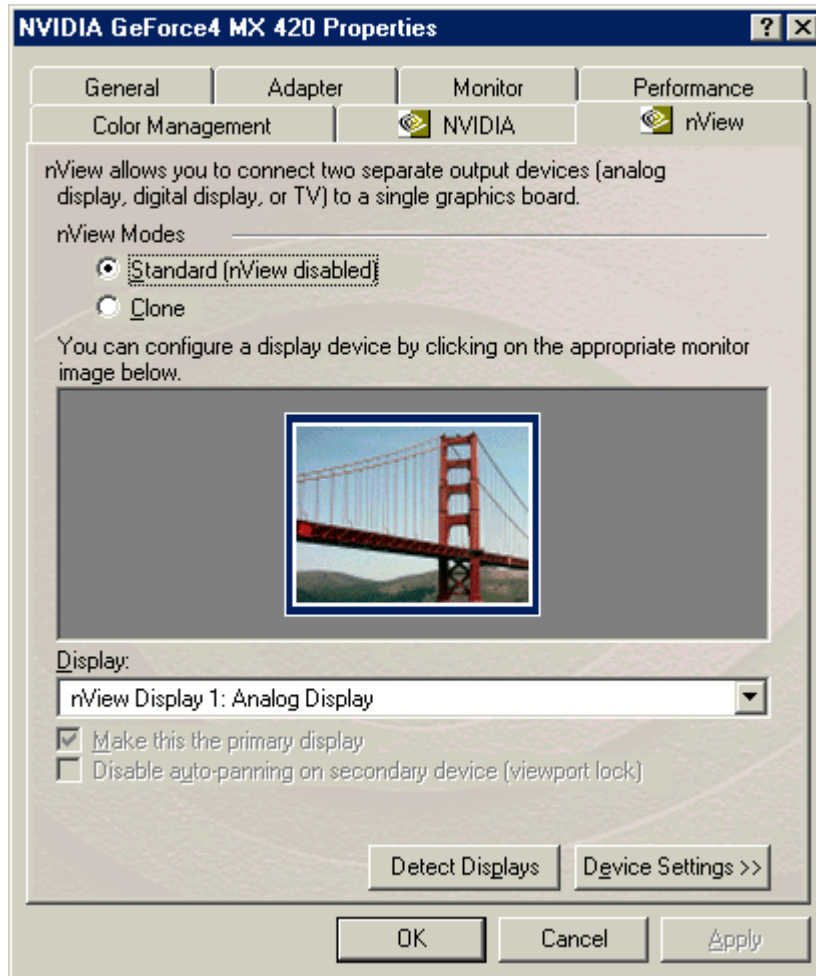

1.5 Then select **Clone** and click **Apply**.





## 2. EXTENDED MODE


2.1 Right click mouse button on desktop, select **properties**.

2.2 Select **settings**.

2.3 Select second monitor and click **Yes**, then click **Apply**.

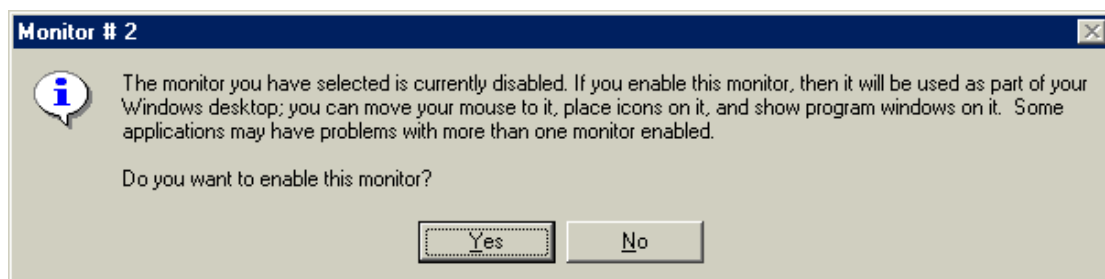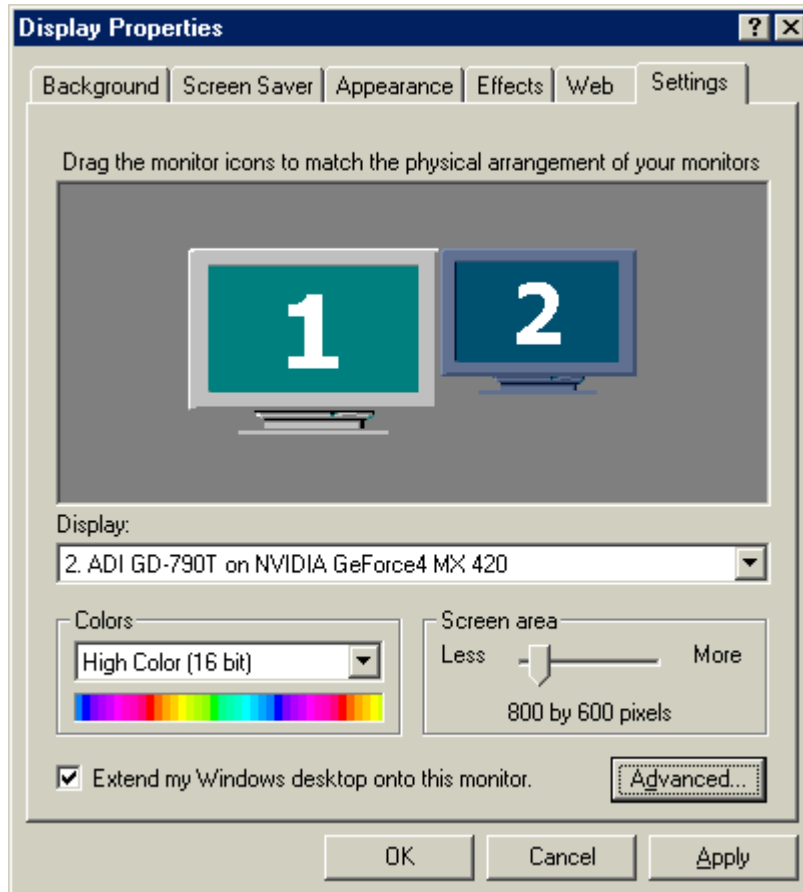


### 2.3-1 You can change your Extended Modes.

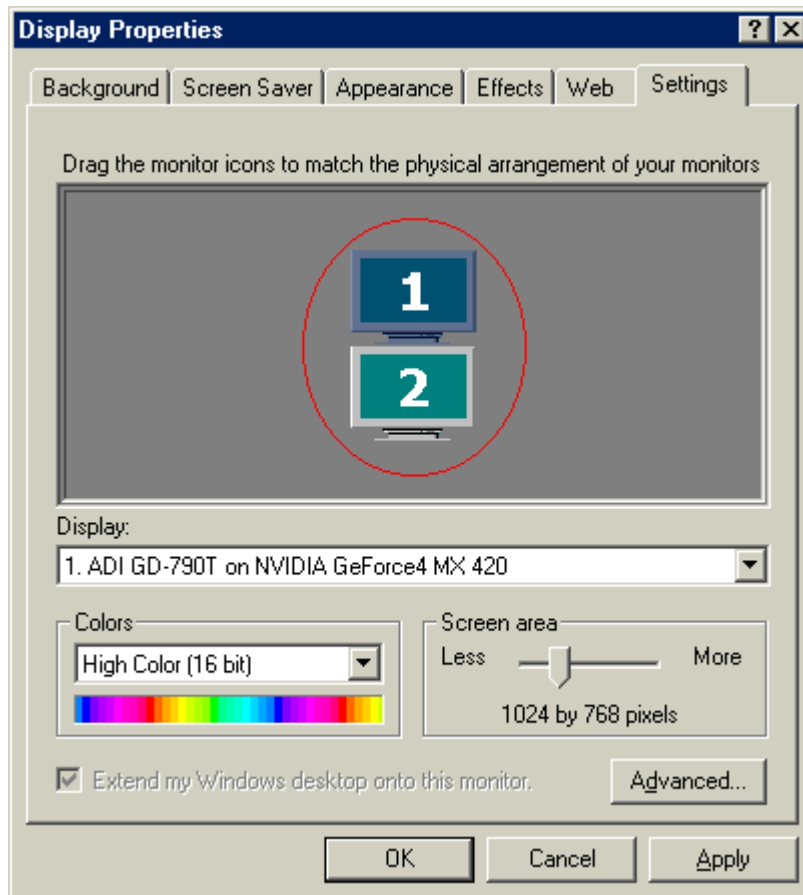



#### 2.4 Click **Advanced**, then select **Output Device**.

If you connect to analog monitor or panel, you can select your output device.

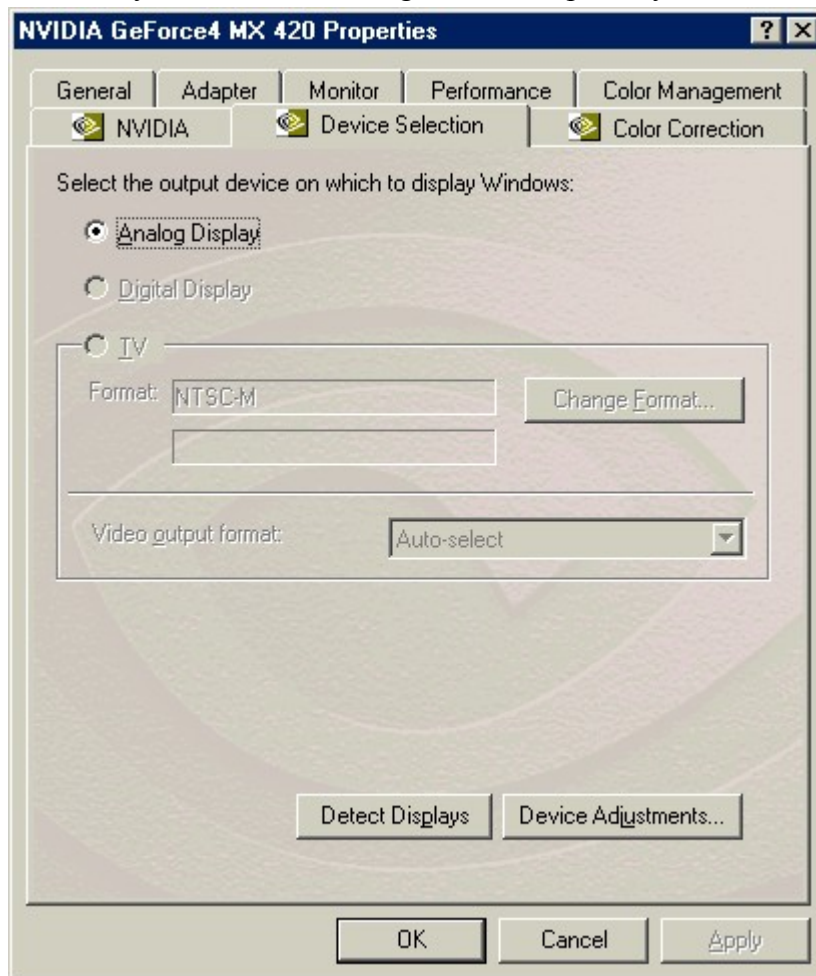


## 2.5 How to disable Extended Mode

2.5-1 Right click mouse button on desktop, select **properties**.

2.5-2 Select **settings**.

2.5-3 Do not select “**Extend my Windows desktop onto this monitor**”, then click **Apply**.

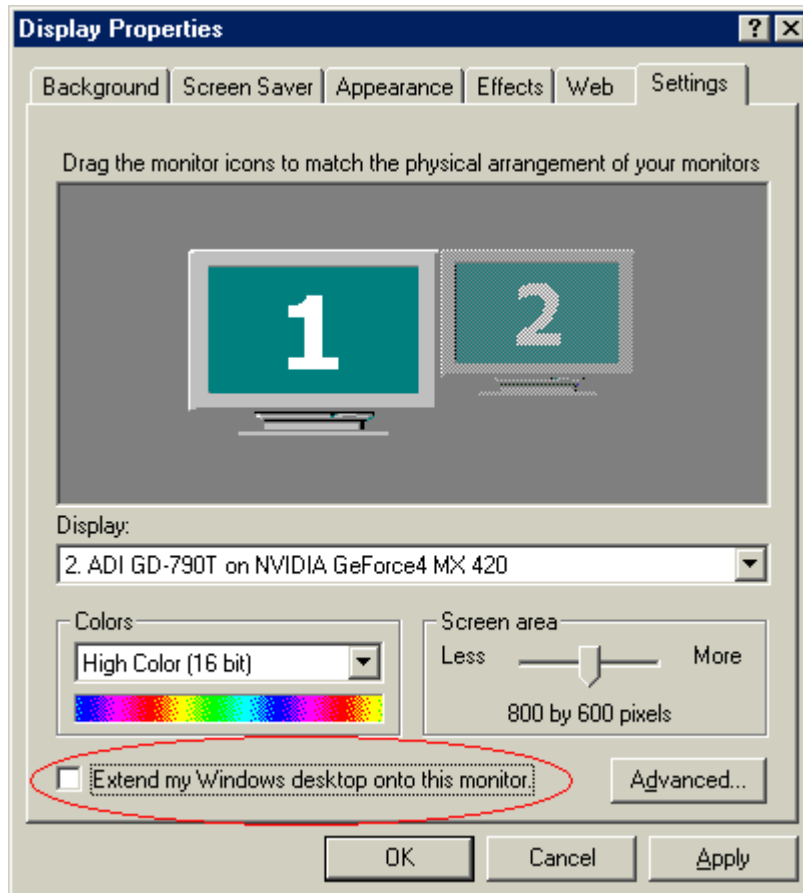

## Trademark Acknowledgments

All brand names and trademarks are the property of their owners.