


SMC 8000 Ethernet Family Adapter Setup

Use this dialog box to configure settings for the SMC8000 Ethernet Family adapter cards. For more information click on a field in the dialog box displayed below or press <TAB> to move to the field and then press <ENTER>...

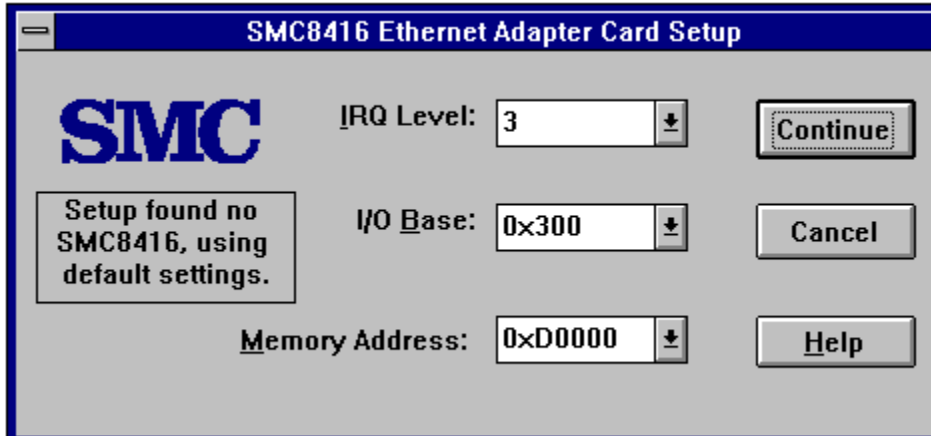

The image shows a Windows-style dialog box titled "SMC8416 Ethernet Adapter Card Setup". The dialog has a blue title bar and a grey body. In the top-left corner, there is a small box containing the SMC logo and the text "Setup found no SMC8416, using default settings." The main area of the dialog contains three configuration fields, each with a label, a text input box, and a small downward-pointing arrow button. The first field is labeled "IRQ Level:" and has the value "3". The second field is labeled "I/O Base:" and has the value "0x300". The third field is labeled "Memory Address:" and has the value "0xD0000". To the right of these fields are three buttons: "Continue", "Cancel", and "Help".

Field	Value
IRQ Level:	3
I/O Base:	0x300
Memory Address:	0xD0000

IRQ Level

Select an interrupt level for this adapter card. [IRQ3](#) is the default setting.

I/O Base

Select an I/O Port for this adapter card. [0x0300](#) is the default setting.

RAM Address

Select the RAM base address for this adapter card. The default is [0xD0000](#).

Detection Information

This information box gives information on whether an SMC adapter was detected or not. When one is detected, its settings are displayed in the dialogue as the defaults. If no adapter is detected, the default setting are: Interrupt 3, I/O base 0x0300, and RAM address 0xD0000.

Continue

Select [Continue](#) to save the values defined in the dialog box and exit.

Cancel

Select [Cancel](#) to exit leaving the current values unchanged.

Help

Select [Help](#) to display this file.

SMC 91C100 Fast Ethernet Adapter Setup

Use this dialog box to configure settings for the SMC 91C100 Fast Ethernet adapter card. For more information click on a field in the dialog box displayed below or press <TAB> to move to the field and then press <ENTER>...

Adapter Speed

Select the speed at which the adapter operates. The default is [High Speed](#) or 100mb.
If Low Speed is selected then the adapter will operate at 10mb.

SMC 8000 Ethernet Family Adapter Setup Help Contents

Select one of the topics below for more information on setting up a specific adapter.

[SMC 8000 Ethernet Family Adapter Setup](#)

