

1. Execute the Flash Program on Win98/Me/2000/XP directly.
Attention !! This program can't work under Win95 / NT !!



Fig.1

2. Select the drive(if you plug more than one drive) you want to upgrade
3. Click “ Flash the drive“
4. Then you would see the following windows, please click “ OK “



Fig.2

5. Flash Program would check the drive if it's suitable for the device. Please pay your patience to wait for 1~3 min.
6. If the device is suitable for the flash program, it would start to flash the firmware. In this time, the LED of your writer would be light.

The Windows Version of Firmware Upgrading Procedure.

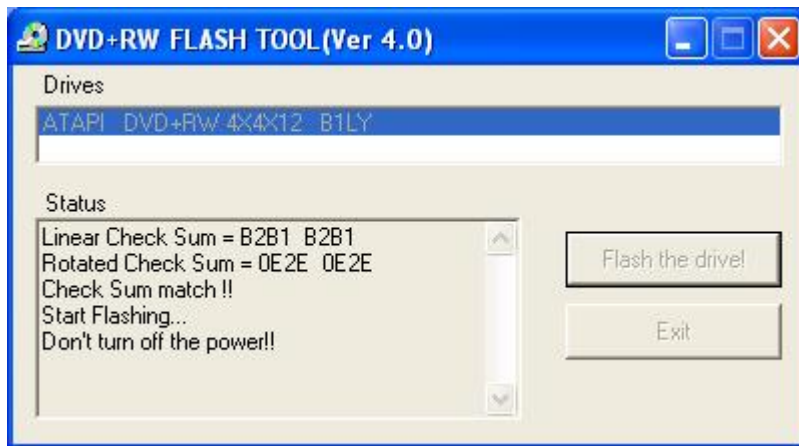


Fig.3

7. When you see the following message, it means the writer already complete the firmware upgrade process.



Fig.4

8. Click " OK " button to reboot and exit the program.

Fig.5

<i>The Windows Version of Firmware Upgrading Procedure.</i>	
---	--

