


## Inside

- Reading the printer's status panel
- Refilling paper
- Manually feeding paper and transparencies
- Clearing paper jams

Hang this quick reference inside your printer.

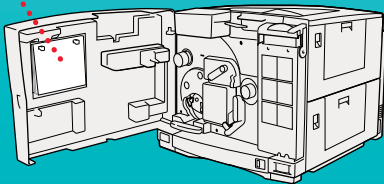

# Apple Color LaserWriter 12/600 PS

*Quick reference*

## Replacing parts and ordering supplies


To order printer supplies in the U.S.A., call 1-800-600-7805.


For order numbers, see Appendix A of the printer manual. You can order:

- toner cartridges
- transparencies
- photoconductor cartridge (includes toner disposal boxes)
- fuser oil
- fuser

Instructions for replacing the fuser are in Appendix F. Instructions for replacing other printer parts come in the new packages.


## Reading the printer's status panel

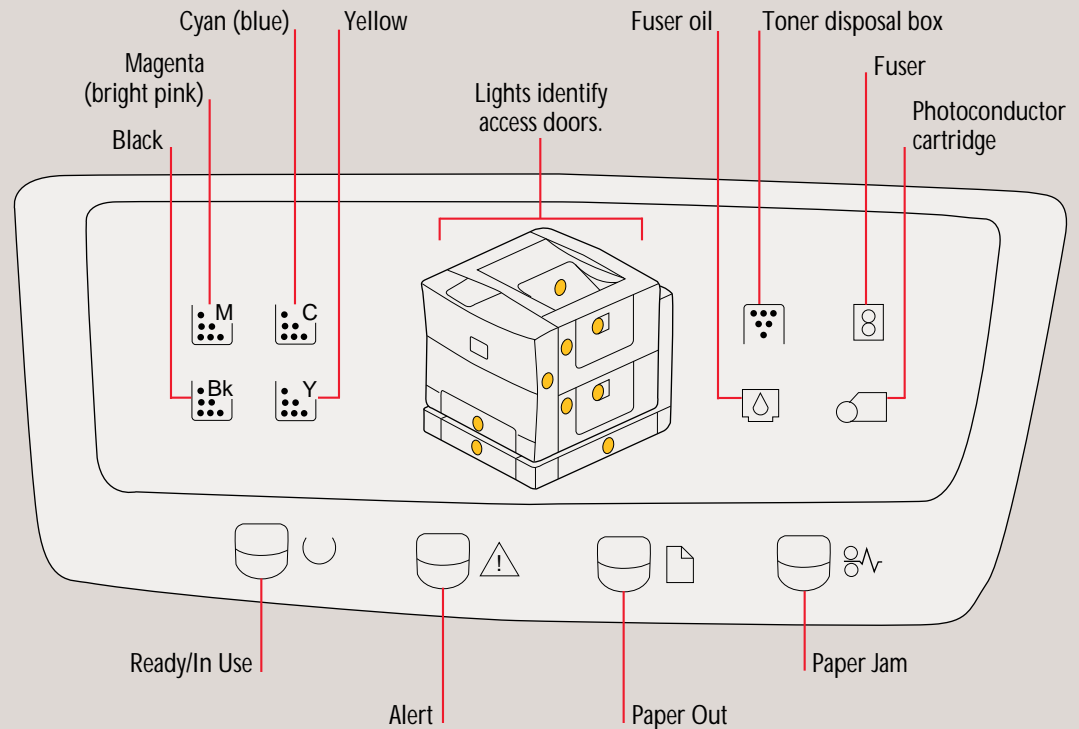


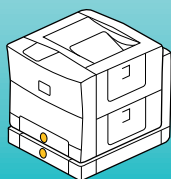

Lights on the diagram show which paper source to refill.

# Refilling the paper cassette

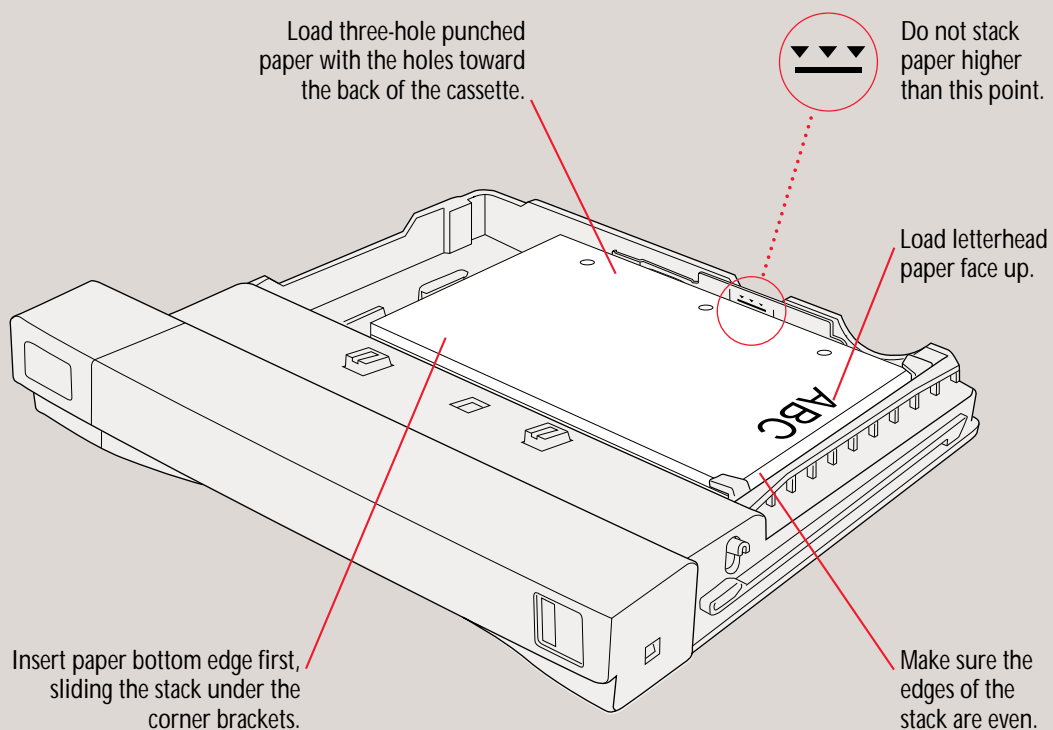

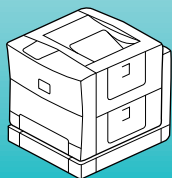


# Manually feeding paper and transparencies


*Important:* Use only Color LaserWriter 12/600 PS Transparencies.

Load transparencies so the white strip goes into the printer first.

If a transparency has a partial strip, align the strip on the left as it goes into the printer.

If a transparency has a full-width paper strip, make sure the paper side is up as it goes into the printer.

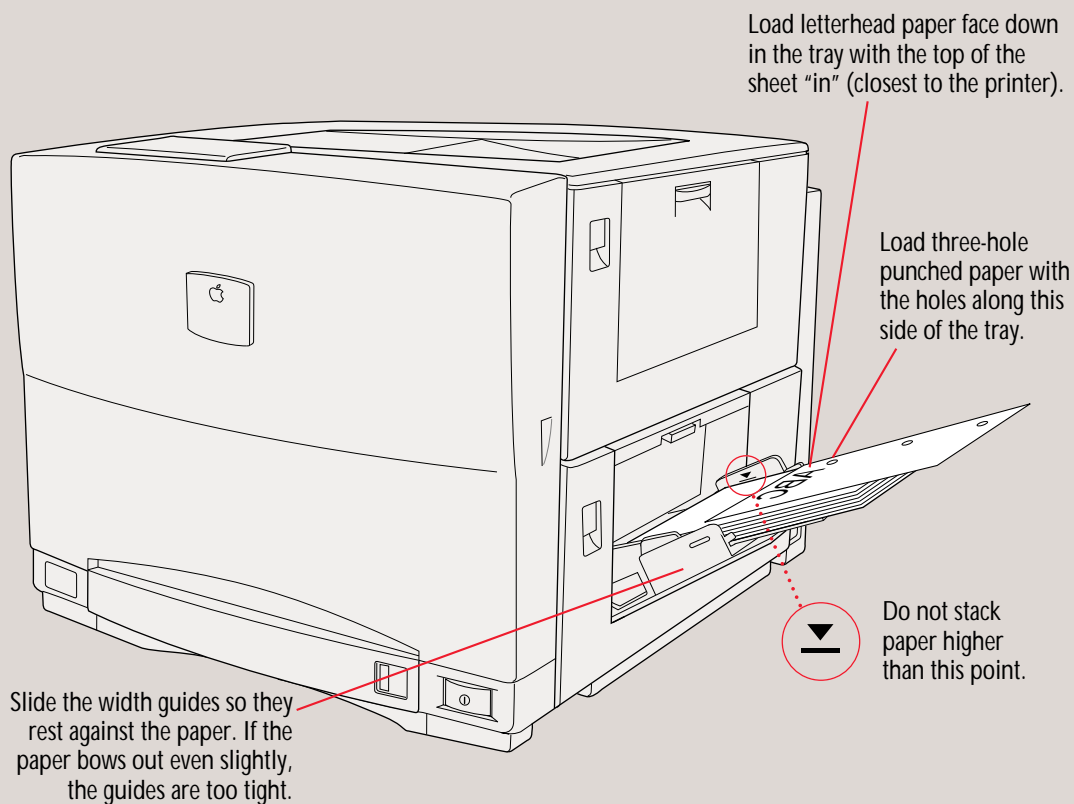


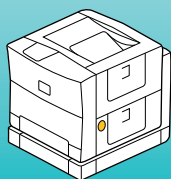


# Clearing paper from the pickup area



Check the paper cassette and remove any paper that is misaligned.

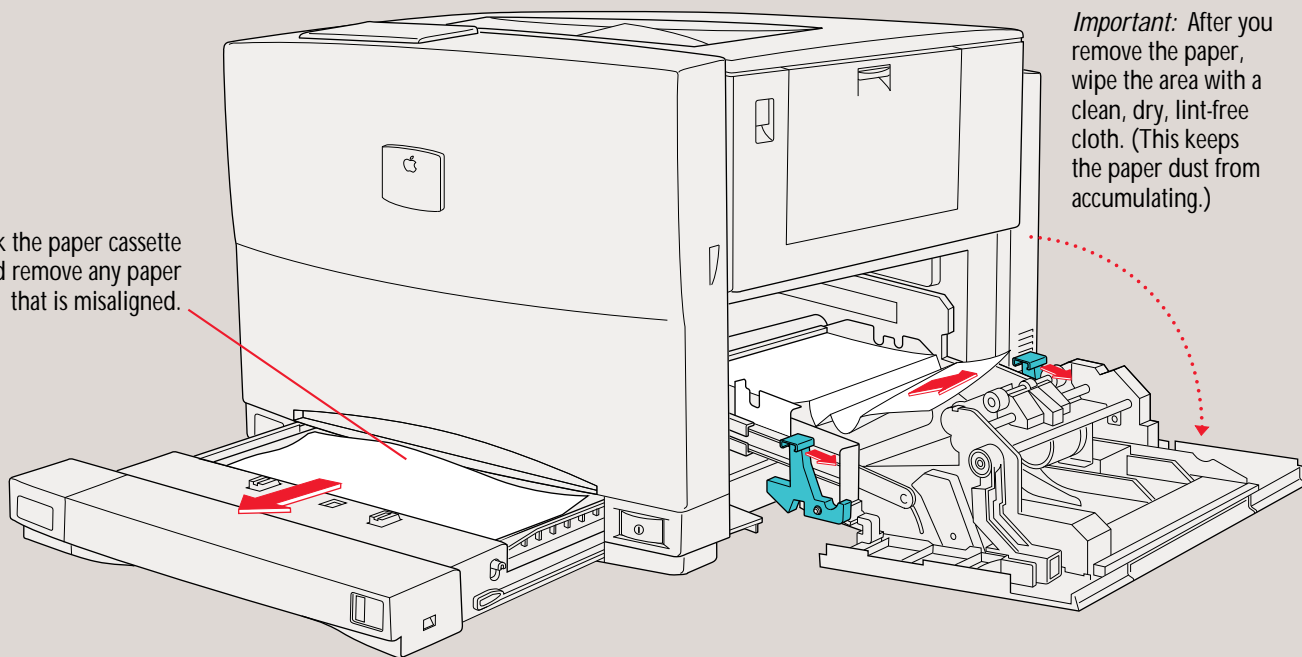

*Important:* After you remove the paper, wipe the area with a clean, dry, lint-free cloth. (This keeps the paper dust from accumulating.)

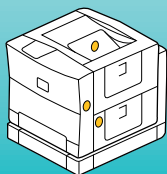


# Clearing paper from the transfer drum



2. To rotate the drum, turn this knob.


1. Push this lever.

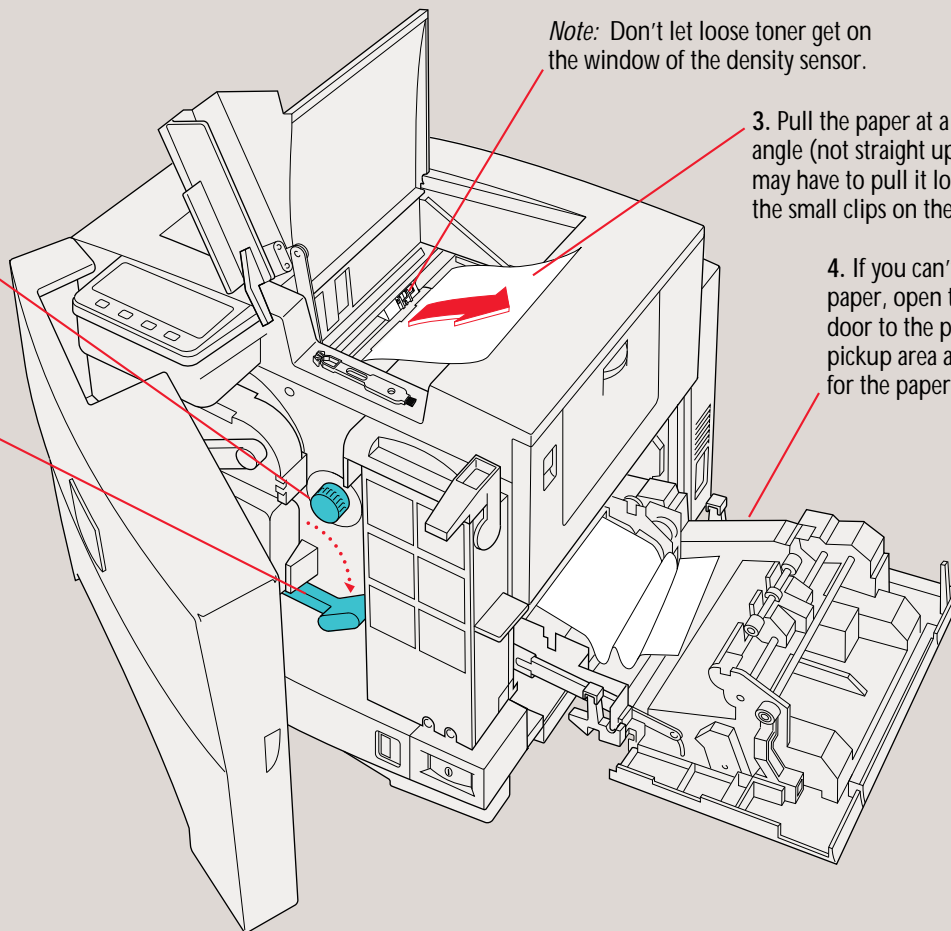

*Note:* Don't let loose toner get on the window of the density sensor.

3. Pull the paper at a slight angle (not straight up). You may have to pull it loose from the small clips on the drum.


4. If you can't see the paper, open the access door to the paper pickup area and look for the paper jam there.

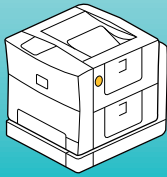


# Clearing paper from the fuser

1. If you can't see the paper, open the guide cover.

2. To move the paper toward you, press and release this lever. Repeat until the paper is completely out.

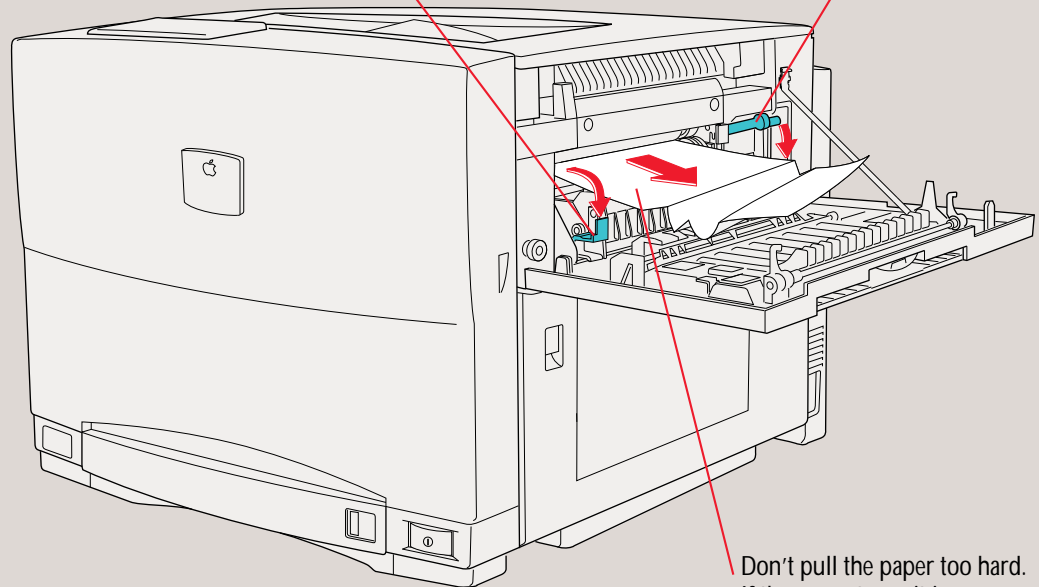


Don't pull the paper too hard. If the paper tears, it is more difficult to remove.

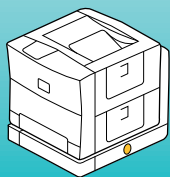

# Clearing paper from the optional feeder



If you can't find the paper  
behind the access door,  
open the paper cassette.

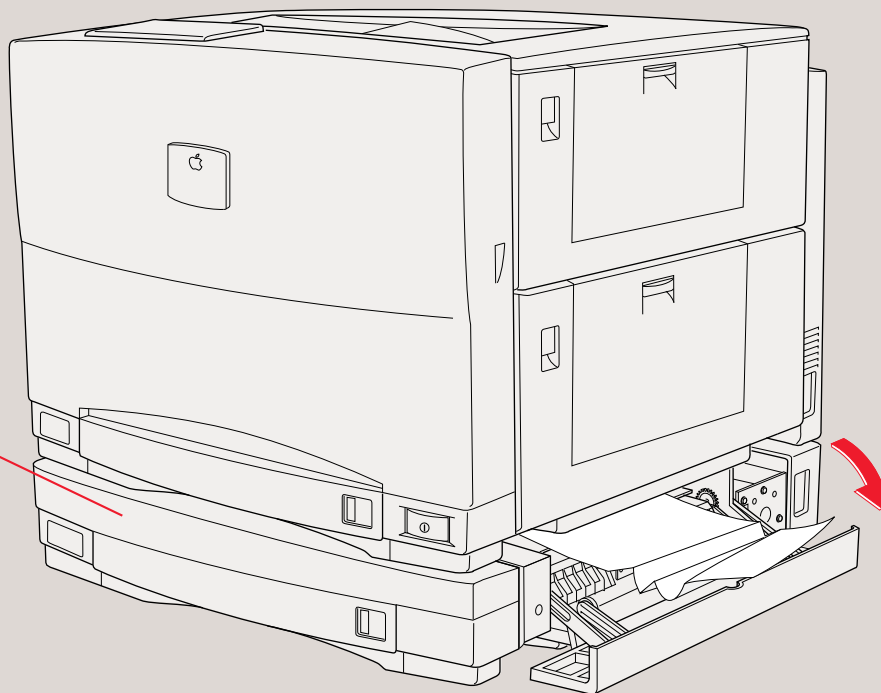

© 1995 Apple Computer, Inc. All rights reserved.  
Apple, the Apple logo, and LaserWriter are trademarks of Apple Computer, Inc.,  
registered in the U.S. and other countries.

030-6871-A