

Recommendation X.28

DTE/DCE INTERFACE FOR A START–STOP MODE DATA TERMINAL EQUIPMENT ACCESSING THE PACKET ASSEMBLY/DISASSEMBLY FACILITY (PAD) IN A PUBLIC DATA NETWORK SITUATED IN THE SAME COUNTRY

*(provisional, Geneva, 1977; amended, Geneva, 1980,
Malaga–Torremolinos, 1984 and Melbourne, 1988)*

CONTENTS

Preface

- 1 Procedures for the establishment of a national access information path between a start–stop mode DTE and a PAD.
- 2 Procedures for character interchange and service initialization between a start–stop mode DTE and a PAD.
- 3 Procedures for the exchange of control information between a start–stop mode DTE and a PAD.
- 4 Procedures for the exchange of user data between a start–stop mode DTE and a PAD.

Annex A – PAD command signals and PAD service signals

Annex B – PAD time–outs

Annex C – PAD service signals for extended dialogue mode

Preface

The establishment in various countries of public data networks providing packet–switched data transmission services creates a need to produce standards to facilitate access from the public telephone network, circuit–switched public data networks and leased circuits.

The CCITT,

considering

(a) that Recommendations X.1 and X.2 define user classes of service and user facilities provided by a public data network, and Recommendation X.96 defines call progress signals;

(b) that Recommendation X.29 defines procedures for a packet mode DTE to control the PAD and for interworking between PADs;

(c) that Recommendation X.3 defines the Packet Assembly/Disassembly (PAD) facility in a public data network;

(d) that the logical control links for packet–switched data transmission services are defined in Recommendation X.92;

(e) the need for defining an international Recommendation for the exchange of control information between a start–stop mode DTE and a PAD;

(f) that DTEs operating in the start-stop mode will send and receive network call control information and user information in the form of characters according to Recommendation T.50 or the *break* signal;

(g) that the necessary elements for an interface Recommendation should be defined independently as:

1) procedures for the establishment of a national access information path between a start-stop mode DTE and a PAD,

2) procedures for character interchange and service initialization between a start-stop mode DTE and a PAD,

3) procedures for the exchange of control information between a start-stop mode DTE and a PAD,

4) procedures for the exchange of user data between a start-stop mode DTE and a PAD.

unanimously declares

that start-stop mode DTE accessing the PAD should operate in accordance with this Recommendation.

1 Procedures for the establishment of a national access information path between a start-stop mode DTE and a PAD

1.1 Access via a public switched telephone network or leased lines with V-Series interfaces

1.1.1 DTE/DCE interface

The access information path will be provided by the use of modems standardized for use in the public switched telephone network or leased line operating:

i) at rates up to 300 bit/s in accordance with Recommendation V.21; or

ii) at the rate of 1200 bit/s in accordance with Recommendation V.22 alternative B, mode ii) or V.22 *bis* mode 4, and at the rates of 2400 bit/s in accordance with Recommendation V.22 *bis* mode 2, on the public switched telephone network or 2-wire leased circuit, or at the rates up to 1200 bit/s in accordance with Recommendation V.23 without backward channel on 4-wire leased circuits; or

iii) at the rate of 75/1200 bit/s (for the signal received by the DTE and 75 bit/s for the signal sent by the DTE on the backward channel) in accordance with Recommendation V.23.

The particular interchange circuits provided, and their operation, shall be in accordance with the relevant modem Recommendations, and clamping of circuit 104 shall be implemented in accordance with Recommendation V.24, § 4.3.

At rates of up to 300 bit/s or at 1200 bit/s or 2400 bit/s:

a) on the telephone network, the modem shall be set up for channel operation in accordance with Recommendation V.21, or with Recommendation V.22, or with Recommendation V.22 *bis*; or

b) on leased lines (2-wire), the channel operation will be determined by the same rule, the modem at the DTE side being considered as the one making the telephone call.

At the rate of 75/1200 bit/s: the modem shall be set up for channel operation in accordance with Recommendation V.23.

Note 1 – The interface requirements for other data signalling rates are for further study.

Note 2 – In some networks, references to modem characteristics do not apply (e.g. for leased lines).

1.1.2 *Electrical characteristics*

The electrical characteristics of the DTE/DCE interface shall be in accordance with Recommendation V.28.

1.1.3 *Procedure for setting up and disconnecting the access information path*

1.1.3.1 *Setting up the access information path by the DTE*

The access information path shall be established in accordance with Recommendation V.25 for a manual data station "manual data station" § calling an automatic answering station "automatic answering station" §.

The mechanism for echo suppressor disablement may not be implemented in some national networks where the access information path does not include echo suppressors.

Subsequent to the completion of the above, both the DTE and DCE shall transmit binary 1 on circuits 103 and 104.

1.1.3.2 *Disconnecting the access information path by the DTE*

The access information path shall be disconnected by:

- i) reversion of the data circuit to the voice mode, or
- ii) the DTE turning circuit 108/1 or 108/2 OFF for a period greater than Z. The value of Z is for further study.

1.1.3.3 *Setting up the access information path by the PAD*

The procedure for the PAD to establish an access information path shall be in accordance with Recommendation V.25 as far as it is perceived by the DTE.

1.1.3.4 *Disconnecting the access information path by the PAD*

Disconnection by the PAD will be indicated by the DCE turning circuits 106 and 109 OFF, while circuit 108 is ON.

Note – Access information path clear indication to the DTE is not signalled by circuit 107 OFF. Not all DTEs allow circuit 107 to be turned OFF if circuit 108 has not been turned OFF previously.

1.2 *Access via a public switched data network or via leased lines with X-Series interfaces*

1.2.1 *DTE/DCE interface designed for start-stop transmission services on public data networks (Recommendation X.20)*

1.2.1.1 *Physical characteristics*

The physical characteristics of the DTE/DCE interface are defined in § 2 of Recommendation X.20.

1.2.1.2 *Procedures for setting up and disconnecting the access information path (call control)*

The procedures and formats for call control of the public circuit-switched data network are described in §§ 3 and 4 of Recommendation X.20. The procedures for setting up a virtual call in a

packet-switched network are those given in §§ 2, 3 and 4 of this Recommendation. The use of Recommendation X.20 procedures to establish a virtual call via a PAD is for further study.

1.2.2 xe ""§DTE/DCE interface designed for operation on telephone type *networks* (Recommendation X.20 *bis*)

In the case of DTEs with interfaces designed for operation on telephone type networks (V-Series interfaces), the access information path will be established by the use of DCEs standardized for start-stop transmission services on public data networks according to Recommendation X.20 *bis*.

1.2.2.1 *Characteristics of interchange circuits*

The characteristics of the interchange circuits are described in § 2 of Recommendation X.20 *bis*.

1.2.2.2 *Operational requirements*

The requirements for the operation of the interchange circuits 106, 107, 108, 109 and 125 are described in § 3 of Recommendation X.20 *bis*.

1.2.2.3 *Operational requirements for disconnecting the access information path by the DTE*

The access information path shall be disconnected either *manually* by depressing the clearing key of the DCE, or *automatically* by the DTE turning OFF circuit 108/1 or 108/2 for a period longer than 210 ms.

1.2.2.4 *Indication of disconnection by the PAD*

Disconnection by the PAD, i.e. DCE clearing, will be indicated by the DCE by turning OFF circuits 106 and 109. The DTE should then perform clear confirmation by turning OFF circuit 108.

1.2.2.5 *Setting up the access information path by the PAD*

The procedure for the PAD to establish an access information path is for further study.

1.2.2.6 *Operational constraints for maintaining the access information path during information transfer*

The transmission of axe ""§ break signal longer than 200 ms may cause clearing in a public switched data network. Therefore, the transmission of a *break* signal in either direction should either be avoided or the timer of the circuit generating a *break* signal should be adjusted to generate a signal length considerably shorter than 200 ms (see also § 3.1.2).

2 Procedures forxe ""§ character interchange and service **initialization between a start-stop mode DTE and a PAD**

2.1 *Format of characters used in the exchange of control information between start-stop mode DTE and a PAD*

2.1.1 The start-stop mode DTE shall generate and be capable of receiving characters in accordance with International Alphabet No. 5 as described in Recommendation T.50. The general structure of characters shall be in accordance with Recommendation X.4 except that the transmitted stop bits shall be as specified in § 2.1.2. The character format specified below applies to the procedures described in §§ 2 and 3.

2.1.2 The PAD will transmit and expect to receive 8-bit characters.

When the value of parameter 21 is set to 0, whenever the PAD has to interpret a received

character for a specific action different from or additional to the transfer of this data character to the remote DTE, it will only inspect the first seven bits and will not take account of the eighth bit (the last bit preceding the stop element).

When the value of parameter 21 is set to 1, the PAD will treat the 8th bit of the characters received from the start-stop DTE as a parity bit and check this bit against the type of parity [even, odd, space ("0") or mark ("1")] used between the PAD and the start-stop mode DTE.

When the value of parameter 21 is set to 2, the PAD will replace the 8th bit of the characters to be sent to the start-stop mode DTE with the bit that corresponds to the type of parity used between the PAD and the start-stop mode DTE.

When the value of parameter 21 is set to 3, the PAD will both check the parity bit for characters received from the start-stop mode DTE and generate the parity bit for characters to be sent to the start-stop mode DTE, as described for values 1 and 2.

Whenever the PAD generates characters (e.g. *PAD service* signals), they will be transmitted by the PAD with even parity if parameter 21 is set to 0, and with the type of parity (even, odd, space or mark) used between the PAD and the start-stop mode DTE if parameter 21 is set to 1, 2 or 3 or if the parity is determined by alternate means.

When the value of parameter 21 is set to 1 or 3, if the PAD detects a parity error in the characters received from the start-stop mode DTE, the PAD will:

- if parameter 2 is set to 0 (no echo), and parameter 6 is set to 0 (no service signals), reset the virtual circuit;
- if parameter 2 is set to 1 (echo) and parameter 6 is set to 0 (no service signals), discard and not echo the character in error and transmit the character 0/7 (BEL) to the start-stop mode DTE;
- if parameter 2 is set to 1 (echo) and parameter 6 is set to 1 or greater (service signals) discard and not echo the character in error and transmit the character 0/7 (BEL) to the start-stop mode DTE; the PAD may also transmit the parity error *PAD service* signal. The action of the PAD when parameter 2 is set to 0 (no echo) and parameter 6 is set to 1 or greater (service signal) is for further study.

The PAD will accept characters which have a single stop element and will transmit characters with at least two stop elements if the start-stop mode DTE is operating at 110 bit/s. If the PAD is operating at any other speed, the PAD will transmit and accept characters with a single stop element.

2.2 *Procedures for initialization*

The references to states in the following procedures correspond to the state diagrams, see Figures 1/X.28, 2/X.28 and 3/X.28.

2.2.1 *Active link (state 1)*

After the access information path has been established, the start-stop mode DTE and the PAD exchange binary 1 across the start-stop mode DTE/DCE interface and the interface is in the *active link* state.

2.2.2 *Service request (state 2)*

If the interface is in the *active link* state, the DTE shall transmit a sequence of characters to indicate *service request* and to initialize the PAD. The *service request* signal enables the PAD to detect the data rate, the code and, optionally, the parity used by the DTE and to select the *initial profile* of the PAD. The parameters of CCITT *standard profiles* are summarized in Table 1/X.28.

The format of the *service request* signal to be transmitted by the DTE is given in § 3.5.16 below.

Some networks may allow state 2 to be bypassed. In case the start-stop mode DTE is connected to the PAD by a leased line or if the access information path is set up by the PAD, the PAD either knows the speed, code, and initial profile, required for the start-stop mode DTE or uses a default value. The default value is network dependent. In case the access information path is set up by the start-stop mode DTE, the access method chosen may be uniquely dedicated to a single combination of speed, code and initial profile.

Figure 1a/X.28, p. 1

1b/X.28

Figure 1b/X.28, p. 2

2a/X.28

Figure 2a/X.28, p. 3

2b/X.28

Figure 2b/X.28, p. 4

3/X.28

Figure 3/X.28, p. 52.2.3 *DTE waiting (state 3A)*

Following the transmission of the *service request* signal the DTE shall transmit binary 1 and the interface will be in the *DTE waiting* state.

When the value of parameter 6 is set to 0, the interface will directly enter the *PAD waiting* state following receipt of a valid *service request* signal.

2.2.4 *Service ready (state 4)*

When parameter 6 is not set to 0 the interface will enter the *service ready* state when the PAD transmits a *PAD identification PAD service* signal after receiving a *service request* signal. If the *PAD identification PAD service* signal is not received within V seconds, the DTE should retransmit the *service request* signal. Following transmission of the *service request* signal W times the user should report a fault to the appropriate point. The values of V and W are for further study.

The standard format of the *PAD identification PAD service* signal is given in § 3.5.18 below.

2.2.5 *Fault condition*

If a valid *service request* signal is not received by the PAD within Y seconds after the transmission of binary 1, it will perform PAD clearing by disconnecting the access information path.

The value of Y is for further study.

Note – Some networks may allow states 2 to 4 to be bypassed. In this case the condition described under § 2.2.4 does not apply.

H.T. [1T1.28]

TABLE 1/X.28

PAD parameter settings The parameter references and values relate to Recommendation X.3 (see Note 1)

--	--	--	--

Parameter reference number (see Note 3)	Parameter description	Parameter setting for CCITT standard profile (see Note 2)	Transparent standard profile (see Note 3)
---	-----------------------	---	---

--	--	--	--

1	PAD recall using a character	Set to <i>not possible</i> (value 0)	Set to <i>possible</i> (value 1)
---	------------------------------	--------------------------------------	----------------------------------

--	--	--

--	--	--

2	Echo	Set to <i>no echo</i> (value 0)	Set to <i>echo</i> (value 1)
---	------	---------------------------------	------------------------------

--	--	--

--	--	--

3	Selection of <i>data forwarding</i> signal	Set to <i>no data forwarding signal</i> (value 0)	Set to <i>all characters in columns 0 and 1 and character 7/15 (DEL) of International Alphabet No. 5</i> (value 126)
---	--	---	--

--	--	--

4	Selection of <i>idle timer delay</i>	Set to <i>one second</i> (value 20)
5	Ancillary device	Set to <i>no use of X-ON and X-OFF</i>
(value 0)	Set to <i>use of X-ON and X-OFF</i> (value 1)	
6	Control of <i>PAD</i> service signals and <i>PAD command</i> signals	Set to <i>no service signals sent to the start-stop mode DTE</i>
(value 0)	Set to <i>service signals are sent</i>	

Set to *no time out* (value 0)

(value 1)		
-----------	--	--

--	--	--

7	Selection of operation of PAD on receipt of <i>break</i> signal from the start-stop mode DTE	Set to <i>reset</i> (value 2)
---	--	-------------------------------

Set to *reset* (value 2)

--	--	--

--	--	--

8	Discard output	Set to <i>normal data delivery</i>
---	----------------	------------------------------------

(value 0)	Set to <i>normal data delivery</i>	
-----------	------------------------------------	--

(value 0)		
-----------	--	--

--	--	--

9	Padding after	Set to <i>no padding after</i>
---	---------------	--------------------------------

	carriage return (CR)	CR
--	----------------------	----

(value 0) (see Note 5)	Set to <i>no padding after CR</i>	
---------------------------	-----------------------------------	--

(value 0) (see Note 5)		
---------------------------	--	--

--	--	--

10	Line folding	Set to <i>no line folding</i> (value 0)
----	--------------	--

Set to *no line folding* (value 0)

--	--	--

--	--	--

11 (read only)	Binary speed of start-stop mode DTE	Indicate speed of DTE
----------------	-------------------------------------	-----------------------

Indicate speed of DTE

--	--	--

--	--	--

12	Flow control of the PAD by the start-stop mode DTE	Set to <i>no use of X-ON and X-OFF</i>
----	--	--

(value 0)	Set to <i>use of X-ON and X-OFF</i> (value 1)	
-----------	---	--

--	--	--

13 (see Note 6)	Linefeed insertion after carriage return	Set to <i>no linefeed insertion</i> (value 0)
-----------------	--	---

Set to *no linefeed insertion* (value 0)

--	--	--

--	--	--

14 (see Note 6)	Linefeed padding	Set to <i>no linefeed after LF</i>
-----------------	------------------	------------------------------------

(value 0)	Set to <i>no linefeed after LF</i>	
-----------	------------------------------------	--

(value 0)		
-----------	--	--

--	--	--

--	--	--

15 (see Notes 6 and 7)	Editing	Set to no editing in <i>data transfer</i> state (value 0)
------------------------------	---------	---

Set to no editing in *data
transfer* state (value 0)

--	--	--

--	--	--

Tableau 1/X.28 [1T1.28], p. 6

H.T. [2T1.28]

TABLE 1/X.28 (*cont.*)

--	--	--	--

Parameter reference number (see Note 3)	Parameter description	Parameter setting for CCITT standard profile (see Note 2)	Transparent stand profile (see Note
--	-----------------------	---	--

--	--	--	--

16 (see Note 6)	Character delete	Set to character 7/15 (DEL)
--------------------	------------------	--------------------------------

(value 127)	Set to character 7/15 (DEL)	
-------------	--------------------------------	--

(value 127)		
-------------	--	--

--	--	--

17 (see Note 6)	Line delete	Set to character 1/8 (CAN)
--------------------	-------------	-------------------------------

(value 24)	Set to character 1/8 (CAN)	
------------	-------------------------------	--

(value 24)		
------------	--	--

--	--	--

18 (see Note 6)	Line display	Set to character 1/2 (DC2)
--------------------	--------------	-------------------------------

(value 18)	Set to character 1/2 (DC2)	
------------	-------------------------------	--

(value 18)		
------------	--	--

--	--	--

19 (see Notes 6 and 7)	Editing <i>PAD service</i> signals	Set to editing <i>PAD service</i> signals for printing terminals (value 1)	Set to editing <i>PAD service</i> signals for printing terminals (value 1)
------------------------------	---------------------------------------	--	--

--	--	--

--	--	--

--	--	--

20 (see Notes 6 and 8)	Echo mask	Set to echo all characters (value 0)
------------------------------	-----------	---

Set to echo all characters
(value 0)

--	--	--

--	--	--

21 (see Notes 6 and 9)	Parity Treatment	Set to no parity detection or generation (value 0)
------------------------------	------------------	---

Set to no parity detection or
generation (value 0)

--	--	--

--	--	--

22 (see Note 6)	Page Wait	Set to page wait disabled (value 0)
--------------------	-----------	--

Set to page wait disabled
(value 0)

--	--	--

--	--	--

Note 1 – All parameters standardized by CCITT are listed in Table 1/X.3 including those which provide additional user facilities listed in Recommendation X.2.

Note 2 – In the case of a leased circuit access, the appropriate profile parameter values are specified at subscription time. In the case of access from public telephone networks or circuit switched public data networks, the definition of other CCITT standard profiles is for further study.

Note 3 – Parameter reference 0 is not used to define a PAD parameter. Specific use of the decimal value 0 in PAD messages to permit the existence of parameters not defined by CCITT is provided in Recommendation X.29. A similar use of this value in Recommendation X.28 is for further study.

Note 4 – The procedures for selecting *transparent standard* profile or *simple standard* profile by the start-stop mode DTE are currently defined by using the *service request* signal or *standard profile selection PAD command* signal.

Note 5 – There will be no padding except that *PAD service* signals will obtain a number of padding characters according to the data transmission rate of the start-stop mode DTE.

Note 6 – Parameter which provides additional user facilities available in some countries for international and national services (see Recommendation X.3). The implementation of this parameter in a PAD is a matter for national determination. When implemented, the values appropriate when a *standard* profile is selected are given in this table.

Note 7 – Editing functions apply during the *PAD command* state irrespective of the value of parameter 15. The default values of selectable values of parameters 16, 17, 18 and 19 apply for the functions.

Note 8 – This parameter does not apply if parameter 2 is set to 0.

Note 9 – Characters generated by the PAD itself (e.g. *PAD service* signals) have even parity when parameter 21 is set to zero unless the parity is set by alternate means.

Tableau 1/X.28 [2T1.28], p. 7

3 Procedures for the exchange of control information between a start–stop mode DTE and a PAD

3.1 General

3.1.1 PAD command signals and PAD service signals

The operation of the PAD depends on the current values of internal PAD variables which are known as PAD parameters. Initially PAD parameter values depend on the initial standard profile applicable at the time of sending a service request signal or by previous arrangement with the Administration. The parameter values for the transparent and simple standard profile are given in Table 1/X.28.

PAD command signals (direction DTE to PAD) are provided for:

- a) the establishment and clearing of a virtual call (see § 3.2 below);
- b) the selection of a set of preset values of PAD parameters known as a *standard* profile, either CCITT or network defined (see § 3.3.1 below);
- c) the selection of individual PAD parameter values (see § 3.3.2 below);
- d) requesting the current values of PAD parameters to be transmitted by the PAD to the DTE (see § 3.4 below);
- e) sending of an interrupt;
- f) requesting the status of the circuit (see § 3.7 below);
- g) resetting the virtual call.

PAD service signals (direction PAD to DTE) are provided to:

- a) transmit *call progress* signals to the calling DTE;
- b) acknowledge *PAD command* signals;
- c) transmit information regarding the operation of the PAD to the start–stop mode DTE.

The formats of *PAD command* signals and the standard formats of *PAD service* signals are given in § 3.5 below. Some networks may also support the extended dialogue mode for *PAD command* signals and *PAD service* signals as defined in § 3.5 and § 5 below. Some networks may also support additional *PAD command* signals and *PAD service* signals as defined in § 5 below.

The information content of *PAD command* signals and *PAD service* signals are summarized in Annex A.

3.1.2 Break signal

The *break* signal is provided to allow the start–stop mode DTE to signal to the PAD without loss of character transparency. The *break* signal can also be transmitted by the PAD to the start–stop mode DTE.

The *break* signal is defined as the transmission of binary 0 for more than 135 ms. The

maximum permitted duration shall depend upon the type of access information path used (see, for example, § 1.2.2.6 above).

A *break* signal shall be separated from any following start–stop character or other *break* signal by the transmission of binary 1 for more than 100 ms.

3.1.3 xe ""§Prompt PAD service signal

If parameter 6 is set to 5 on entering the *PAD waiting* state or *waiting for command* state, the PAD will indicate its readiness to receive a *PAD command* signal by transmitting the *prompt PAD service* signal.

If the value of parameter 6 is set to 0 or 1, the PAD will not transmit the *prompt PAD service* signal to the start–stop mode DTE.

If the value of parameter 6 is set to 5, a *PAD command* signal transmitted before the *prompt PAD service* signal has been received from the PAD will be ignored.

If the value of parameter 6 is set to any of the values 8–15, the availability and format of a *prompt PAD service* signal is network dependent.

The standard format of the *prompt PAD service* signal is given in § 3.5.23.

3.2 xe ""§Procedures for virtual call control

Figure 1/X.28 (Sequence of events at the interface) shows the procedures at the DTE/DCE interface during call establishment, data transfer and call clearing. Figure 2/X.28 shows the state diagram.

For details on the action expected of the start–stop mode DTE following receipt of a *PAD service* signal, refer to Recommendation X.96.

3.2.1 xe ""§Call establishment

3.2.1.1 *PAD waiting (state 5)*

Following the transmission of a *PAD service* signal the interface will be in the *PAD waiting* state unless a virtual call is established or is being established. During the *PAD waiting* state the PAD will transmit binary 1.

If parameter 2 is set to 1, all characters are echoed.

Note – In some networks the *active link* state will either lead directly to the *PAD waiting* state, the *service ready* state or the *connection in progress* state.

3.2.1.2 xe ""§Network user identification (NUI)

When required, for security, billing and/or network management purposes the network user shall transmit a *network user identification* signal. Some Administrations may not implement a *network user identification* signal. When implemented, the *network user identification* signal will be defined in the *facility request* block of a *selection PAD command* signal.

The format of the *facility request* block is defined in § 3.5.15.1.

The information content of the *network user identification* signal is network dependent.

When *network user identification* is not used and the calling DTE is not identified by other means, the *reverse charging* facility will be used.

3.2.1.3 *PAD command (state 6)*

The DTE may transmit a *PAD command* signal when the interface is in the *PAD waiting*

state (state 5) and enters the *PAD command* state at the start of a *PAD command* signal.

The DTE may also transmit *PAD command* signals after escaping from the *data transfer* state or the *connection in progress* state (see § 4.9.1 below).

If parameter 2 is set to 1, characters in *PAD command* signals are echoed, except the characters following the character P in a *selection PAD command* signal, which are not echoed. If parameter 20 is implemented, the set of characters to be echoed is determined by the value of parameter 20.

If parameter 6 is not set to 0, the PAD will ignore all characters received from the DTE following the receipt of a *PAD command* signal until the associated *PAD service* signal or sequence of *PAD service* signals has been transmitted to the DTE by the PAD.

If parameter 6 is set to 0, the PAD will not transmit a *PAD service* signal. Therefore it is for the user to define the way in which information regarding the completion of the connection is signalled to the start-stop mode DTE.

The DTE may request the establishment of a virtual call by transmitting a *selection PAD command* signal.

The DTE may edit *PAD command* signals before they are actioned by the PAD by using the procedures in § 3.6 below.

The formats of *PAD command* signals are given in § 3.5 below. A summary of x.28 PAD command signals is given in Table 2/X.28.

3.2.1.4 DTE waiting (state 3B)

Following the transmission of a *PAD command* signal the DTE will transmit binary 1 and the interface will be in the *DTE waiting* state.

H.T. [T2.28]

TABLE 2/X.28

Summary of PAD command signals

--	--	--

PAD command signals	Valid before virtual call set-up	Valid after escaping from <i>data transfer</i> state
---------------------	----------------------------------	--

Valid after escaping from *connection-in-progress* state

Selection (§ 3.2.1.3)	X	
Profile selection (§§ 3.3.1 and 4.9.2.5)	X	X
Set (§§ 3.3.2 and 4.9.2.5)	X	X
Set and read (§§ 3.3.2 and 4.9.2.5)	X	X
Read (§§ 3.4 and 4.9.2.5)	X	X
Clear request (§§ 3.2.1.5, 3.2.2.1 a) and 4.9.2.1)	X	X
Status (§§ 3.7 and 4.9.2.2)	X	X
Reset (§ 4.9.2.3)	X	
Interrupt (§ 4.9.2.4)	X	

Remote set and read (§§ 3.3.4)	X	
Remote read (§ 3.4.2)	X	
Invitation to clear (§ 3.2.2)	X	
<i>Extended dialogue mode</i>		
Break (§ 5.1)	X	
Help (§ 5.4)	X	X
Language (§ 5.3)	X	X
NUI on (§ 5.2)	X	
NUI off (§ 5.2)	X	

Table 2/X.28 [T2.28], p.3.2.1.5 *Connection-in-progress (state 7)*

If parameter 6 is not set to 0, on receipt of a valid *selection PAD command* signal the PAD will transmit an *acknowledgement PAD service* signal followed by binary 1 and the interface will enter the *connection-in-progress* state. The interface will enter the *PAD service signals* state as necessary and the PAD will transmit the *connected PAD service* signal or a *clear indication PAD service* signal to the DTE. During this period the PAD will not accept any *PAD command* signals. Characters are not echoed.

If the value of parameter 6 is 0, the PAD will not transmit *PAD service* signals to the start-stop mode DTE. Following the receipt of a valid *selection PAD command* signal, the interface shall remain in the *connection-in-progress* state until the virtual call has been established.

In some networks, during the *connection in progress* state, the start-stop mode DTE may escape from that state by transmitting a *PAD recall* signal to the PAD. On detection of the *PAD recall* signal, the interface will enter the *waiting for command* state.

If parameter 1 is set to 1, the PAD will recognize the character 1/0 (DLE) as the *PAD recall* signal from the start-stop mode DTE.

If parameter 1 is set to a decimal value from 32 to 126, the PAD will recognize the binary representation of the decimal value as the *PAD recall* signal from the start-stop mode DTE.

If parameter 7 is set to 8, the *break* signal may be used as the *PAD recall* signal from the *connection in progress* state, allowing for escape from the *connection in progress* state without loss of character transparency.

If parameter 6 is set to 5, the *prompt PAD service* will be transmitted by the PAD. At this time, the PAD may accept the *clear request PAD command* signal or another suitable command to be determined by further study.

On receipt of the next character from the start-stop mode DTE, the PAD will act in accordance with one of the following conditions:

a) if the character received is the *PAD recall* character or the *PAD command* signal delimiter [characters 2/11 (+) or 0/13 (CR)] the interface will return to the *connection in progress* state and no action will be taken with the character;

b) if the character received is in columns 2 to 7 of International Alphabet No. 5, excluding the characters 2/0 (SP), 2/11 (+) [see § 3.2.1.5.1 a) above], 7/15 (DEL) and the *PAD recall* character, the interface will enter the *PAD command* state, and the character will be placed in the editing buffer. Characters 2/0 (SP) and 7/15 (DEL) will be ignored;

c) if the character is not covered above, for example editing character sin columns 2 to 7 and characters in columns 0 and 1 of IA5, the action by the PAD is for further study.

If the first character of a *PAD command* signal is not received within P seconds of the interface entering the *waiting for command* state from the *connection in progress* state, the PAD will transmit an *error PAD service* signal, when parameter 6 is not set to 0. The interface will then enter the *connection in progress* state, irrespective of the value of parameter 6. The value of P is for further study but will not be less than 60 s.

If the *PAD command* signal delimiter is not received within Q seconds of the interface entering the *PAD command* state from the *connection in progress* state, or an invalid *PAD command* signal is received, the PAD will transmit an *error PAD service* signal, when parameter 6 is not set to 0, indicating that an error has occurred. The interface will then enter the *connection in progress* state, irrespective of the value of parameter 6. The value of Q is for further study but will not be less than 60 s.

If a valid *clear request PAD command* signal is received the procedure will be as described in § 3.2.2.1 a).

3.2.1.6 *PAD service signals (state 8)*

Following receipt by the DTE of a *PAD service* signal or a sequence of *PAD service* signals (in the case of call set-up) in response to a previously transmitted *PAD command* signal, the interface will be in either:

- a) a *PAD waiting* state (state 5) if no virtual call is in progress, or
- b) a *data transfer* state (state 9) if a virtual call is in progress.

Any *PAD service* signal arising from events within the packet network will not be transmitted until any *PAD service* signal outstanding from a previously received *PAD command* signal has been transmitted.

PAD service signals will not be transmitted if the value of parameter 6 is set to 0 and the *PAD service* signals state will be bypassed.

The standard format of *PAD service* signals is defined in § 3.5 below.

A summary of *PAD service* signals is given in Annex A.

3.2.1.7 *Incoming calls*

The PAD will indicate *incoming call* to the start-stop mode DTE only if the DTE/DCE interface is in the *PAD waiting* state (state 5). In any other case the PAD will only indicate incoming call if:

- a) the PAD knows the speed and code of the start-stop mode DTE by previous agreement, or a default value is applicable;
- b) the *PAD waiting* state (state 5) is reached by the setting up of an access information path within X seconds.

The value of X is for further study, but should not exceed 120 s.

The PAD will transmit to the start-stop mode DTE an *incoming call PAD service* signal.

The PAD will not expect a response to the *incoming call PAD service* signal from the start-stop mode DTE and will consider the interface to enter at once the *data transfer* state (state 9).

The standard format of the *incoming call PAD service* signal is given in § 3.5.22 below.

3.2.2 *Clearing*

3.2.2.1 *Clearing by the start-stop mode DTE*

3.2.2.1.1 *Clearing by the local PAD*

DTE clearing of the PAD to which the DTE is connected shall be indicated by either:

- a) transmitting a *clear request PAD command* signal after escaping from the *data transfer* state during a virtual call (see § 4.9 below). The format of a *clear request PAD command* signal is

given in § 3.5.8 below. The PAD will transmit a *clear confirmation PAD service* signal within B seconds. The value of B is for further study. The standard format of the *clear confirmation PAD service* signal is given in § 3.5.9 below. The interface will enter the *PAD waiting* state and the DTE will be allowed to make a follow-on call; or

- b) disconnecting the access information path.

3.2.2.1.2 *Clearing of the remote PAD*

Note – This is an optional function which will not be supported on all PADs.

DTE clearing of a remote PAD shall be indicated by transmitting an *invitation to clear PAD command* signal after escaping from the data transfer state during a virtual call (see § 4.9 below). The format of an *invitation to clear PAD command* signal is given in § 3.5.8 below. The PAD to which the DTE issuing the invitation to clear is connected will transmit a *clear indication PAD service* signal to that DTE once indication of clearing has been received from the remote PAD. The format of the clear indication PAD service signal is given in § 3.5.17 below. The interface will enter the *PAD waiting* state and the DTE will be allowed to make a follow-on call or disconnect the access information path.

3.2.3 *Unsuccessful calls*

If a call is unsuccessful for any reason, the PAD will indicate the reason to the start-stop mode DTE by means of a *clear indication PAD service* signal. If parameter 6 is set to 0, a *PAD service* signal is not transmitted.

After transmission of the *clear indication PAD service* signal the PAD will be in the *PAD waiting* state.

3.2.3.1 *Fault conditions*

3.2.3.1.1 *Failure to receive a PAD command signal*

If the first character of a *PAD command* signal is not received within T seconds of the interface entering the *PAD waiting* state, the PAD will perform PAD clearing in accordance with § 3.2.2.2 above. The value of T is for further study.

This restriction does not apply to a DTE which accesses the PAD by a leased line.

If following the first character of a *PAD command* signal a *PAD command* signal delimiter is not received within S seconds, the PAD will transmit an *error PAD service* signal, if parameter 6 is not set to 0, indicating that an error has occurred (see § 3.5.19 below) and the interface will return to the *PAD waiting* state. The value of S is for further study but will not be less than 60 s.

If the PAD receives an unrecognized *PAD command* signal it will transmit an *error PAD service* signal, if parameter 6 is not set to 0, indicating that an error has occurred and the interface will return to the *PAD waiting* state.

The operation of the PAD when parameter 6 is set to 0 is for further study.

3.2.3.1.2 *Failure to establish a virtual call*

If the interface enters the *PAD waiting* state more than N times after setting up the access information path without a virtual call being established, the PAD will disconnect the access information path. This restriction does not apply to DTEs which access the PAD by leased lines.

The value of N is for further study.

3.2.3.1.3 *Invalid clear request PAD command signal*

If the PAD receives a *clear request PAD command* signal while the interface is in the *PAD waiting* state, the PAD will transmit a *clear indication PAD service* signal (local procedure error) if parameter 6 is not set to 0 and the interface will return to the *PAD waiting* state. The standard format of the relevant *clear indication PAD service* signal is given in § 3.5.17 e) below.

3.2.3.1.4 Invalid facility request

If the PAD receives an invalid facility request code the PAD will perform PAD clearing in accordance with §§ 3.2.2.1.1 or 3.2.2.1.2 above.

3.2.3.2 Failure of the access information path

If the access information path is disconnected for any reason, the call attempt or virtual call will be cleared by the PAD.

3.2.4 xe ""§Data transfer

The procedures for data transfer are given in § 4 below.

3.2.5 xe ""§Called DTE reselection

The called DTE reselection is provided as default condition by the PAD. The start-stop mode DTE is able to prevent the called DTE reselection by including the *called DTE reselection prevention facility* in the *selection PAD command* signal.

On receipt of a *reselection PAD* message the PAD will, if parameter 6 is not set to 0 and the *called DTE reselection prevention facility* has not been requested in the *selection PAD command* signal, send a *reselection PAD service* signal to the start-stop mode DTE.

The standard format of the *reselection PAD service* signal is given in § 3.5.29. The interface will enter *connection in progress* state, and the PAD will act as described in § 3.2.1.5 above.

Note – Some networks may not implement this procedure.

3.3 xe ""§Procedures for setting or changing the values of PAD parameters

The procedures described in §§ 3.3.1 and 3.3.2 give details for setting or changing the values of PAD parametersxe " values of PAD parameters"§ by the start-stop mode DTE connected to that PAD. These procedures may be used before the *selection PAD command* signal is sent and also after escaping from the *data transfer* state.

The procedures described in § 3.3.3 below refer to the PAD behaviour about the current values of PAD parameters in the case of call clearing.

The procedures described in § 3.3.4 give details for setting or changing the values of remote PAD parameters by a start-stop mode DTE. These procedures may only be used after escaping the *data transfer* state.

Note – The procedure for setting or changing parameters in a remote PAD is optional and may not be supported by many PADs.

3.3.1 Selection of axe ""§ standard profile by the start-stop mode DTE

The start-stop mode DTE may select a set of defined values of PAD parameters known as a *standard profile* [see § 3.1.1 b) above] by sending the *profile selection PAD command* signal which includes a profile identifierxe " profile identifier"§. This procedure is additional to the selecting of an *initial standard profile* by transmitting the *service request* signal. The start-stop mode DTE may select a set of parameter values as an initial profile at subscription time by agreement with the Administration.

The format of the *profile selection PAD command* signal is given in § 3.5.5 below.

A list of the parameter values associated with the *transparent* and *simple standard profiles* is given in Table 1/X.28. Other CCITT *standard profiles*, all corresponding parameter values and their identifiers are subjects for further study.

When parameter 6 is not set to 0, the PAD will acknowledge the *profile selection PAD command* signal by sending an *acknowledgement PAD service* signal to the start-stop mode DTE.

The standard format of the *acknowledgement PAD service* signal is defined in § 3.5.3 below.

3.3.2 Procedures for setting or changing one or several parameters by the start-stop mode DTE

The start-stop mode DTE may change the values of one or several parameters by sending a *set* or *set and read PAD command* signal including the parameter reference(s) and value(s). The format of *PAD command* signals is defined in § 3.5 below.

When parameter 6 is not set to 0, the PAD will respond to a valid *set and read PAD command* signal by transmitting a *parameter value PAD service* signal, showing the newly set parameter values. The PAD will respond to a valid *set PAD command* signal by transmitting an *acknowledgement PAD service* signal. If at least one of the requested PAD parameters is invalid, the PAD will send a *parameter value PAD service* signal to the start-stop mode DTE to identify the invalid parameters. In this case the valid parameters will be accepted and invoked. Valid parameter references and values are given in Table 1/X.3.

The format of the *parameter value PAD service* signal is defined in § 3.5.14 below.

When parameter 6 is set to 0, the PAD will accept and invoke valid parameters without advising the start-stop mode DTE of any invalid parameters or parameter values.

If the function of a character is duplicated by the selection of parameter values by use of the *set* or *set and read PAD command* signal, the PAD will consider these parameter changes as valid, and will respond as described above. After these changes are invoked, when the PAD receives from the start-stop mode DTE the character with the duplicated function, the PAD will perform the function of the character that has the highest priority among the functions that are duplicated. The priority assignment of the functions is as follows:

- (Highest) 1) PAD recall character (parameter 1)
- 2) PAD command signal delimiter
- 3) X-ON, X-OFF (parameters 12 and 22)
- 4) Line Display (parameter 18)
- 5) Character delete (parameter 16)
- 6) Line delete (parameter 17)
- (Lowest) 7) Data forwarding character (parameter 31).

3.3.3 xe ""§PAD procedures regarding the current values of PAD parameters

The following situations are considered:

i) Call establishment phase

In any case if a *clear* condition, without disconnecting the access information path, occurs prior to the virtual call being set up, the current values of PAD parameters are left as they are.

ii) Clear after call set up

In the case where a *clear* condition, without disconnecting the access information path, occurs after set up of the virtual call, the PAD will reset the parameters to the values specified in the *initial profile*.

3.3.4 Procedures for setting or changing one or several parameters of a remote PAD by the start-stop mode DTE

Note – The function of being able to set or change parameters in the remote PAD is optional and may not be supported by many PADs.

The start-stop mode DTE may change the values of one or several parameters in a remote PAD by sending a remote *set and read PAD command* signal including the parameter reference(s) and value(s). The format of *PAD command* signals is defined in § 3.5 below.

When parameter 6 is not set to 0, the PAD will, in response to a valid remote *set and read PAD command* signal from the local DTE and following receipt of a *parameter indication PAD* message from the remote PAD, transmit a remote parameter value PAD service signal to the local DTE showing the newly set parameter values in the remote PAD.

3.4 Procedures for reading the values of one or several parameters by the start-stop mode DTE

This procedure may be used when parameter 6 is not set to 0. The PAD will ignore a *read PAD command* signal or a *remote read PAD command signal* if parameter 6 is set to 0.

3.4.1 To read local PAD parameter values

The start-stop mode DTE may enquire about the current values of one or several PAD parameters by sending the *read PAD command* signal and the references of the required parameters before the *selection PAD command* signal is sent and also after escaping from the *data transfer* state. The format of the *read PAD command* signal is defined in § 3.5.4 below.

The PAD will respond by sending a *parameter value PAD service* signal containing the requested parameter values. The standard format of the *parameter value PAD service* signal is defined in § 3.5.14 below.

3.4.2 To read remote PAD parameter values

The procedures used by the start-stop mode DTE to enquire about the current values of the remote PAD are similar to those in § 3.4.1 above. In this case the remote *read PAD command* signal and *remote parameter value PAD* signal are used, and the procedure may only be used after escaping from the *data transfer* state.

3.5 Formats of *set and read PAD command* signals and *parameter value PAD service* signals

All characters in columns 2 to 7 of International Alphabet No. 5, excluding the characters 2/0 (SP), 7/15 (DEL), 2/11 (+) and the characters assigned to perform editing functions will be recognized by the PAD as forming part of a *PAD command* signal. The PAD will always recognize the characters 0/13 (CR) and 2/11 (+) as the *PAD command signal delimiter*. The *PAD command signal delimiter* is not part of the command. Characters 2/0 (SP) and 7/15 (DEL) are not considered as part of a *PAD command* signal and those characters will be ignored by the PAD if no other function is assigned to these characters. Characters from columns 0 to 7 may be assigned to perform editing functions and in this case the PAD will operate in accordance with § 3.6 below. Unassigned characters in columns 0 and 1 will be ignored by the PAD.

PAD command signals are defined in upper case characters in this Recommendation; however, in addition, lower case characters are acceptable. For an interim period, some networks may consider *PAD command* signals containing lower case characters as invalid.

All *PAD command* signals shall be terminated with the *PAD command signal delimiter*.

If the low order 4 bits or parameter 6 are set to a value of 1 or 5, *PAD service* signals will be sent in the standard format, as described below. If the low order 4 bits of parameter 6 are set to one of the values 8 to 15 *PAD service* signals are sent in a network dependent format.

If the high order 4 bits of parameter 6 are not all zero, the PAD will operate in the extended dialogue mode. The extended dialogue mode provides additional natural language text in *PAD service* signals. It provides a *help PAD command* signal for requesting explanatory information on *PAD command* signals, PAD parameters, standard profiles, etc. In the following definitions of standard formats for *PAD service* signals, the extended text, where shown, is to be sent only when the PAD is in the extended dialogue mode. In some networks the extended dialogue mode information may be provided in different languages. Additional *PAD command* signals may be provided as defined in § 5. Some networks may also provide the additional *PAD command* signals while the PAD is not in extended dialogue mode.

Note – The text for service signals in languages other than English is for further study. See Annex C.

Some networks may not permit the free use of character 2/0 (SP) anywhere in the command when operating in the extended dialogue mode. In particular this character may not be permitted within keywords. In addition, at least one such character may be required as a separator between keywords or between keywords and numeric values.

PAD service signals, other than the *acknowledgement*, *prompt*, *character deleted*, *line deleted* and *page wait PAD service* signals (see §§ 3.5.2, 3.5.23, 3.5.24, 3.5.25 and 3.5.26) will commence with and be followed by the *format effector*.

3.5.1 *Format of these ""§ PAD command signal delimiter*

The character 0/13 (CR) or character 2/11 (+) may be sent as a delimiter.

3.5.2 *Format of these ""§ format effector*

The characters 0/13 (CR) 0/10 (LF) will be sent by the PAD followed by, when parameter 9 is set to 0, two padding characters if the start–stop mode DTE operates at a data rate of 110 bit/s and four padding characters if the start–stop mode DTE operates at 200 bit/s, 300 bit/s, 1200 bit/s or 75/1200 bit/s.

If parameter 9 is not set to 0, then the number of padding characters transmitted after the character 0/10 (LF) will be equal to the current value of that parameter.

The format of the padding characters is given in § 3.5.20 below.

Note – The term “format effector” is used here slightly differently than in Recommendation T.50.

3.5.3 *Standard format of these ""§ acknowledgement PAD service signal*

The *format effector* will be sent.

3.5.4 *Format of these ""§ read PAD command signal*

3.5.4.1 To read parameters of the local PAD to which the requesting DTE is connected, the characters 5/0 (P) 4/1 (A) 5/2 (R) 3/15 (?) shall be sent followed by the decimal reference of the parameter to be read.

Characters of International Alphabet No. 5 will be sent to represent both the parameter reference and parameter value, e.g. decimal value 12 would be sent as characters 3/1 (1) and 3/2 (2).

If no parameter reference number is indicated in the *read PAD command* signal then it applies implicitly to all parameters.

When more than one parameter is required to be read by sending the *read PAD command* signal, the character 2/12 (,) shall be sent between the decimal references of the parameters.

Example: PAR? 1, 3, 5

The format required to read national parameters is for further study.

3.5.4.2 If reading of remote PAD parameters is supported by the local PAD, the characters 5/2 (R) 5/0 (P) 4/1 (A) 5/2 (R) 3/15 (?) shall be sent followed by the reference of the parameter to be read.

Characters of International Alphabet No. 5 will be sent to represent both the parameter reference and parameter value, e.g. decimal value 12 would be sent as characters 3/1 (1) and 3/2 (2).

If no parameter reference number is indicated in the *remote read PAD command* signal then it applies implicitly to all parameters.

When more than one parameter is required to be read by sending the *remote read PAD command* signal, the character 2/12 (,) shall be sent between the decimal references of the parameters.

Example: RPAR ? 1, 3, 5

3.5.5 *Format of*xe ""\$ profile selection PAD command signal

The characters 5/0 (P) 5/2 (R) 4/15 (O) 4/6 (F) shall be sent followed by a profile identifierxe " profile identifier"\$. A profile identifier will consist of one or more alphanumeric characters. The profile identifiers 90–99 are reserved for CCITT defined profiles as defined in Tables 3/X.28. In addition, some networks may also assign other profile identifiers to CCITT defined profiles.

H.T. [T3.28]

TABLE 3/X.28

CCITT standard profile identifiers

--

Profile identifier

CCITT standard profile

--

90

Simple standard profile

91

Transparent standard profile

92 to 99

Reserved for future use

Table 3/X.28 [T3.28], p.3.5.6
command signal

Format of set PAD command signal and the set and read PAD

3.5.6.1 To set or set and read parameters in the local PAD to which the DTE is connected:

These ""\$ set PAD command signal will consist of the characters 5/3 (S) 4/5 (E) 5/4 (T) followed by the decimal reference of the parameter to be set, followed by character 3/10 (:) and the parameter value required.

These ""\$ set and read PAD command signal will consist of the characters 5/3 (S) 4/5 (E) 5/4 (T) 3/15 (?) followed by the decimal reference of the parameter to be set and read, followed by the character 3/10 (:) and the parameter value required.

If more than one parameter is to be set or set and read by the *set and read PAD command* signal, the character 2/12 (,) shall be sent between a parameter value and the next parameter reference.

Example: SET 2:0, 3:2, 9:4

The format required to set national parameters is for further study.

3.5.6.2 *To set and read parameter in the remote PAD*

The local PAD may optionally support the setting and reading of the remote PAD parameters.

The *remote set and read PAD command* signal will consist of the characters 5/2 (R) 5/3 (S) 4/5 (E) 5/4 (T) 3/15 (?) followed by the decimal reference of the parameter to set and read, followed by the character 3/10 (:) and the parameter value required.

If more than one parameter is to be set and read by the *remote set and read PAD command* signal, the character 2/12 (,) shall be sent between a parameter value and the next parameter reference.

Example: RSET 2:0, 3:2, 9:4

3.5.7 *Standard format of these ""\$ reset PAD service signal*

The *reset PAD service* signal consists of the following elements:

<reset PAD service signal> ::= <RESET> <cause> <diagnostic> <text>

where

<RESET> ::= 5/2 (R) 4/5 (E) 5/3 (S) 4/5 (E) 5/4 (T) 2/0 (SP)

<cause> ::= as shown in Table 5/X.28

<diagnostic> ::= 1, 2 or 3 characters which represent the decimal value of the diagnostic code, as specified in Recommendation X.25.

<text> ::= 2/0 (SP) 2/13 (–) 2/0 (SP) followed by extended dialogue mode text as specified in Table 5/X.28.

3.5.8 *Format of the clear request PAD command signal and invitation to clear PAD command signal*

3.5.8.1 *Standard Format of the clear request PAD command signal*

The *clear request PAD command* signal will, in the following order, consist of the following elements:

- One mandatory field:

The characters <4/3 (C) 4/12 (L) 5/2 (R)> shall be sent to cause the local PAD to clear the call, followed by <Formatting character>

- One optional field (only present in conjunction with the fast select facility):

Up to 128 characters of clear user data that may only be present in conjunction with the fast select facility.

Note – the characters 0/13 (CR) and 2/11 (+) should not be included in the *clear user data* field because they will be treated as a *PAD command* signal delimiter and not transmitted to the remote packet mode DTE. The editing functions should not be included in the *clear user data* field as they will be treated as providing the editing function.

3.5.8.2 *Invitation to clear PAD command signal*

The local PAD may support the capability to generate an *invitation to clear* PAD message to the remote PAD to request the remote PAD to clear the call when all remaining data has been transmitted to the remote DTE.

The characters 4/9 (I) 4/3 (C) 4/12 (L) 5/2 (R) shall be sent to cause the local PAD to send an invitation to clear to the remote PAD.

3.5.9 *Standard format of these ""§ clear confirmation PAD service signal*

The *clear confirmation PAD service* signal consists of the following elements:

<clear confirmation> ::= <CLR> <CONF> <TEXT> <format effector> <optional facility block>

where

<CLR> ::= 4/3 (C) 4/12 (L) 5/2 (R) 2/0 (SP)

<CONF> ::= characters as specified in Table 7/X.28

<text> ::= 2/0 (SP) 2/13 (–) 2/0 (SP) followed by extended dialogue mode text as specified in Table 7/X.28.

<format effector> ::= see § 3.5.2

<optional facility block> ::= see § 3.5.17.3

If subscribed to or requested in the *selection PAD command* signal (see Table 4/X.28), the optional facility block will contain the charging information and will be transmitted by the PAD to the start–stop mode DTE. The format of the charging information is network dependent.

3.5.10 *Format of these ""§ status PAD command signal*

The characters 5/3 (S) 5/4 (T) 4/1 (A) 5/4 (T) shall be sent.

3.5.11 *Standard format of these ""§ status engaged and status free PAD service signals*

The *status engaged PAD service* signal consists of the following elements:

<status engaged> ::= <ENGAGED> <text>

where

<ENGAGED> ::= 4/5 (E) 4/14 (N) 4/7 (G) 4/1 (A) 4/7 (G) 4/5 (E) 4/4 (D)

<text> ::= 2/0 (SP) 2/13 (–) 2/0 (SP) followed by the extended dialogue mode text “Call Established”

Note – The inclusion of additional information (e.g. destination address) is for further study.

The *status free PAD service* signal consists of the following elements:

<status free> ::= <FREE> <text>

where

<FREE> ::= 4/6 (F) 5/2 (R) 4/5 (E) 4/5 (E)

<Text> ::= 2/0 (SP) 2/13 (–) 2/0 (SP) followed by the extended dialogue mode next “No Call Established”

Note – The inclusion of additional information, (e.g. see § 3.5.18) is for further study.

3.5.12 *Format of these ""§ reset PAD command signal*

The characters 5/2 (R) 4/5 (E) 5/3 (S) 4/5 (E) 5/4 (T) shall be sent.

3.5.13 *Format of these ""§ interrupt PAD command signal*

The characters 4/9 (I) 4/14 (N) 5/4 (T) shall be sent.

H.T. [T4.28]

TABLE 4/X.28

Facility request/indication codes

--	--

Facility request/indication code	Facility
----------------------------------	----------

Remarks

--	--

--	--

4/2 (B)	Bilateral closed user group	Note 2
4/3 (C)	Charging information	Note 1
4/4 (D)	Throughput class negotiation	Note 2
4/5 (E) Address Extension String	Called Address extension	Note 1

--	--

4/6 (F)	Fast select with no restriction on response
---------	---

Note 1

--	--

--	--

4/7 (G) CUG String	Closed user group
--------------------	-------------------

Note 1

--	--

--	--

4/13 (M)	Called line address modified notification
----------	---

Note 2

--	--

--	--

4/14 (N) NUI String	Network user identification
---------------------	-----------------------------

Note 1

--	--

--	--

4/15 (O) CUG String	Closed user group with outgoing access
---------------------	--

Note 1

--	--

--	--

5/0 (P)	Packet size negotiation
---------	-------------------------

Note 2

--	--

--	--

5/0 (Q)	Fast select with restriction on response
---------	--

Note 1

--	--

--	--

5/2 (R)	Reverse charging	Note 1
5/3 (S)	Called DTE reselection prevention	Note 2
5/4 (T) RPOA string	RPOA transit network selection	Note 1
5/5 (U)	Call redirection notification	Note 2

--	--

5/7 (W)	Window size negotiation
---------	-------------------------

Note 2

--	--

--	--

Note 1 – These codes may be currently used.

Note 2 – These codes are reserved for possible future use.

Tableau 4/X.28 [T4.28] p. 10

H.T. [T5.28]

TABLE 5/X.28

Extended dialogue mode text for reset PAD service signal

<Cause>

<Text>

4/4 (D) 5/4 (T) 4/5 (E)

Reset by remote device, data may be lost

4/5 (E) 5/2 (R) 5/2 (R)

Reset by network, local procedure error, data may be lost

4/15 (N) 4/3 (C)

Reset due to temporary network problem, data may be lost

5/2 (R) 5/0 (P) 4/5 (E)

Reset by network, remote procedure error, data may be lost

Tableaux: 10 Tabulateurs: 2

RPAR? F06/002 à 005

ERR F07/002

Formules: 0 – Tabulateurs: ..

(82.TA.238.E) Fascicule VIII.2

(A1) TABLEAUX: 10

Codification + saisie 25.01.89 CD/EL

Corr. 1ere épreuve 1.02.89 CD

Corr. 2e épreuve

Formules insérées

MAJ s/disquette 31.03.89 CD

Tableau 5/X.28 [T5.28] p. 11

(H.T.=OUI) **TAB.???** FICHER: H.T. = **(82.TA.238.E)**

(SANS FORMULE)Tableaux: 10 – Tabulateurs: 2

RPAR? F06/002 à 005

ERR F07/002

Formules: 0 – Tabulateurs: ..

TEXTE

3.5.15.1.4.1 NF01/009

ENGAGED NF01/064

– NF01/064

<string> :: = NF01/006

<RPOA string> :: = NF01/007

<parameter reference> :: = NF01/004

<abbreviated address> :: = NF01/013

<parameter reference> :: = NF01/020

Value 8, 32–126: NF01/021

Value 1, 8, 32–126: NF01/021

<language string> :: = NF01/061

(cs,) – (cs,)

(1BT) (BT..)

(82.TE.09.E)

(A1.23e) / [26e] **FOLIOS: 339 – 365 (DO PRC.COSY.2)**

MEP [PA1] : OK= [1]

Saisie 05.12.88 BM

ID + LASER + diskette MAJ 19.12.88 GT

Corr. LASER (1re épreuve) = 3eme 11.01.89 XS

AJOUTER (PA1) (CL1,0,0,0) pour MEP

MEP + LASER 1.02.89 GH/PC

Corr. MEP

Insertion des tableaux (tabulateurs 2) 1.02.89 PC

BAT 20.02.89 PV

MAJ s/disquettes 28.03.89 CD

3.5.14 *Standard format of xE ""\$ parameter value PAD service signals*

The *parameter value PAD service* signal consists of the following elements:

<parameter value PAD service signal> :: = <PAR> <parameter list>

where

<PAR> :: = 5/0 (P) 4/1 (A) 5/2 (R) 2/0 (SP)

(Response from the local PAD to a request for parameter values)

5/2 (R) 5/0 (P) 4/1 (A) 5/2 (R) 2/0 (SP)

(Response from the remote PAD to a request for parameter values)

<parameter list> :: = one or more of <parameter>

<parameter> :: = <parameter reference> <parameter value> <text>

<parameter reference> :: = decimal reference of the parameter followed by the character 3/10 (:)

<parameter value> :: = decimal value of the parameter

<text> :: = 2/0 (SP) 2/13 (–) 2/0 (SP) followed by the extended dialogue mode text as specified in Table 8/X.28

If the requested parameter reference or value is invalid, the characters 4/9 (I) 4/14 (N) 5/6 (V) will be sent in place of the appropriate parameter value.

If more than one parameter value is contained in the parameter value *PAD service* signal the characters 2/12 (,) 2/0 (SP) will be sent before the next parameter reference.

In extended dialogue mode, if the length of the next parameter reference, value and text would cause the line length to exceed the value of PAD parameter 10 (if it is non-zero) then the character 2/12 (,) followed by the format effector may be used.

3.5.15 *Format of the selection PAD command signal*

A *selection PAD command* signal shall, in the following order, consist of a *facility request* block, or an *address* block, or both, optionally followed by *call user data* field.

3.5.15.1 *Format of xE ""\$ facility request block*

Characters representing these ""\$ facility request code shall be sent as defined in Table 4/X.28. When more than one *facility request* code is to be sent, the character 2/12 (,) shall be sent to separate the *facility request* codes. The character 2/13 (–) shall be sent at the end of the *facility request* block.

3.5.15.1.1 The format of the NUIxE " NUI"\$ facility request signal is as follows:

<facility request> :: = <N> <NUI string>

<N> :: = IA5 character 4/14 (N)

<string> :: = one or more characters in columns 2 to 7 of International Alphabet No. 5 (IA5), except 2/0 (SP) 7/15 (DEL), 2/13 (–), 2/12 (,) and 2/11 (+).

Note 1 – The recognition by the PAD of the presence of the *facility request* signal should turn off the echo, (irrespective of its parameter value) for the duration of the NUI *facility request*.

Note 2 – The length of the NUI string is network dependent.

Note 3 – Characters in columns 0 and 1, except 0/13 (CR), and characters 7/15 (DEL), and 2/0 (SP) may be included during the transmission of the NUI string but will not form part of the NUI string and will be discarded.

3.5.15.1.2 The format of the RPOA (transit network) selection *facility request* signal is as follows:

<RPOA facility request> :: = <T> <RPOA string>

<RPOA string> :: = The DNIC of the requested RPOA. In addition, some networks may also support graphic representations of the DNIC which may be used.

<T> :: = IA5 character 5/4 (T).

3.5.15.1.3 The format of the reverse charging "reverse charging"§ facility request signal is as follows:

<reverse charging facility request> :: = <R>

<R> :: = IA5 character 4/2 (R).

3.5.15.1.4 *Formats for Closed User Group Signals*

When the user has subscribed to Closed User Groups (CUG), a preferential CUG must be chosen. In this case, only the *CUG facility request* signal may be used by the user.

When the user has subscribed to CUG and has outgoing access (CUGOA) and/or incoming access (CUGIA), the user may choose whether or not to have a preferential CUG. If a preferential has not been chosen, the user may signal the *CUG facility request* or the *CUGOA facility request* in a particular *PAD Selection Command* Signal. When the user has chosen a preferential CUG, only the *CUG facility request* signal may be used.

The *CUG facility request* and the *CUGOA facility request* shall not be used in the same *PAD Selection Command* Signal.

3.5.15.1.4.1 The format of the closed user group "closed user group"§ facility request signal is as follows:

<CUG facility request> :: = <G> <index>

<G> :: = IA5 character 4/7 (G)

<Optional index> :: = one or two decimal digits.

The PAD shall treat the absence of the index as an implicit request for the preferential CUG.

The PAD shall treat the absence of a *CUG facility request* as an implicit preferential CUG request if the user has subscribed to the CUG, CUGOA and/or CUGIA facility and has chosen a preferential.

3.5.15.1.4.2 The format of the closed user group with outgoing access facility is as follows:

<CUG with outgoing access facility request> :: = <O> <index>

<O> :: = IA5 character 4/15 (O)

<Optional index> :: = one or two decimal digits

3.5.15.1.5 The format of the charging information "charging information"§ facility request signal is as follows:

<charging information facility request> :: = <C>

<C> :: = IA5 character 4/3 (C).

3.5.15.1.6 The format of the called address extension *facility request* signal is as follows:

CAE facility request:

<CAE facility request> :: = <E> <CAE string>

<E> :: = IA5 character 4/5 (E)

<CAE> :: = The called address extension as a string of up to 40 characters from the set 3/0–3/9. Further, other representations of the called address extension are for further study.

The means to indicate the type of address present in the called address extension facility is for further study.

3.5.15.1.7 The format of the fast select with no restriction on response *facility request* signal is as follows:

<fast select with no restriction on response facility request> :: = <F>

<F> :: = IA5 character 4/6 (F)

3.5.15.1.8 The format of the called DTE reselection prevention *facility request* signal is as follows:

<called DTE reselection prevention facility request> :: = <S>

<S> :: = IA5 character 5/3 (S)

3.5.15.1.9 The format of the fast select with restriction on response *facility request* signal is as follows:

<fast select with restriction on response facility request> :: = <Q>

<Q> :: = IA5 character 5/1 (Q)

The formats of other *facility request* codes are for further study.

3.5.15.2 *Format of address block*

Characters representing a full address or an abbreviated address shall be sent. When an abbreviated address is sent, it shall be prefixed by character 2/14 (.). When more than one address, either full address or abbreviated address, is sent, the character 2/12 (,) is sent as a separator. When an abbreviated address is used, the call user data field shall be separated from the *abbreviated address* signal by the character 2/10 (*).

3.5.15.2.1 The format of the full address is as follows:

<full address> :: = one or more numeric characters of the International Alphabet No. 5 (IA5)

Note 1 – The numeric characters are those in the ranges 3/0 to 3/9.

3.5.15.2.2 The format of the abbreviated address is as follows:

<abbreviated address> :: = one or more characters in columns 2 to 7 of the International Alphabet No. 5, except 2/10 (*), 2/11 (+) 2/12 (,) and 7/15 (DEL). The first character shall not be from the set 0 . . 9 (3/0 . . 3/9).

Note 1 – The PAD shall translate the string into a full address

Note 2 – Recommendations for the translation of the character string to a full address are for further study.

Note 3 – This facility is optional.

3.5.15.3 *Format of* x'e "" § call user data field

The character 5/0 (P) or the character 4/4 (D) shall be sent, followed by up to 12 characters of user data or up to 124 characters of user data in conjunction with the fast select facility. Some networks may not make this field available to the user.

Note – The characters 0/13 (CR) and 2/11 (+) should not be included in the user data field because they will be treated as a *PAD command signal delimiter* and not transmitted to the remote packet mode DTE. The editing characters should not be included in the user data field as they will be treated as providing the editing function.

3.5.16 *Format of* x'e "" § service request signal

The format is for further study.

3.5.17 *Standard format of* x'e "" § clear indication PAD service signal

The *clear indication PAD service* signal will, in the following order, consist of the following elements:

- one mandatory field:

<a sequence of alphabetic characters indicating the clear indication (see § 3.5.17.1)>
<formatting character>

- the following optional fields:

<called DTE address block (see § 3.5.17.2)> <formatting character>

<optional facility block (see § 3.5.17.3)> <formatting character>

<optional clear user data block (see § 3.5.17.4)> <formatting character>

3.5.17.1 *Standard format of the* x'e "" § mandatory field:

The mandatory field consists of the following elements:

<Mandatory field> :: = <CLEAR> <cause> <cause code> <diagnostic> <text>

<CLEAR> :: = 4/3 (C) 4/12 (L) 5/2 (R) 2/0 (SP)

<cause> :: = one of the causes shown in Table 6/X.28

<cause code> :: = 2/0 (SP) 4/3 (C) 3/10 (:) followed by 1, 2 or 3 characters which represent the decimal value of the cause code, as specified in Recommendation X.25.

<diagnostic> :: = 2/0 (SP) 4/4 (D) 3/10 (:) followed by 1, 2 or 3 characters which represent the decimal value of the diagnostic code, as specified in Recommendation X.25.

<text> :: = 2/0 (SP) 2/13 (–) 2/0 (SP) followed by extended dialogue mode text as specified for the corresponding <cause> in Table 6/X.28.

Note – The use of the <cause code> and <diagnostic> field is optional.

H.T. [T6.28]

TABLE 6/X.28

Cause and extended dialogue mode text for clear PAD service signal

--

<Cause>

<Text>

--

--

4/15(O) 4/3(O) 4/3(C)

Call cleared, number busy

--

4/14(N) 4/3(C)

Call cleared, temporary network problem

--

4/9(I) 4/14(N) 5/6(V)

Call cleared, invalid facility requested

--

4/14(N) 4/1(A)

Call cleared, access to this number is barred

4/5(E) 5/2(R) 5/2(R)

Call cleared, network detected local procedure error

5/2(R) 5/0(P) 4/5(E)

Call cleared, network detected remote procedure error

4/14(N) 5/0(P)

Call cleared, number not assigned

4/4(D) 4/5(E) 5/2(R)

Call cleared, number out of order

5/0(P) 4/1(A) 4/4(D)

Call cleared, remote request

4/4(D) 5/4(T) 4/5(E)

Call cleared, by remote device, data may be lost

5/2(R) 4/14(N) 4/1(A)

Call cleared, reverse charging refused

4/9(I) 4/4(D)

Call cleared, incompatible destination

5/3(S) 4/1(A)


Call cleared, ship cannot be contacted

4/6(F) 4/14(N) 4/1(A)

Call cleared, fast select refused

5/2(R) 4/15(O) 4/15(O)

Call cleared, cannot be routed as requested



Note – For details see Recommendation X.96.

Table 6/X.28 [T6.28], p.

H.T. [T7.28]

TABLE 7/X.28

Extended dialogue mode text for clear confirmation PAD service signal

--

<CONF>

<Text>

--

--

4/3(C) 4/15(O) 4/14(N) 4/6(F)

Call cleared, confirmed

--

--

Table 7/X.28 [T7.28], p.

H.T. [T8.28]

TABLE 8/X.28

PAD parameter names for extended dialogue mode

--	--

Parameter reference number	Abbreviated parameter name (Note 1)
----------------------------------	--

Parameter description (Note 2)

--	--

--	--

1	esc(ape)
---	----------

PAD recall using a character

--	--

2	ech(o)
---	--------

Echo

--	--

--	--

3	for(ward)
---	-----------

Selection of data forwarding characters

--	--

4	idl(e)
---	--------

Selection of idle timer delay

--	--

5	dev(ice)
---	----------

Ancillary device control

--	--

6	sig(nals)
---	-----------

Control of PAD service signals

--	--

7	bre(ak)
---	---------

Operation on receipt of break signal

--	--

8	dis(card)
---	-----------

Discard output

--	--

--	--

9	CRp(ad)
---	---------

Padding after carriage return

--	--

10	fol(ding)
----	-----------

Line folding

--	--

11	spe(ed)
----	---------

Binary speed of start–stop mode DTE

--	--

12	flo(w)
----	--------

Flow control of the PAD

--	--

13	LFi(nsert)
----	------------

Linefeed insertion after carriage return

--	--

--	--

14	LFp(ad)
----	---------

Padding after linefeed

--	--

15	Edi(t)
----	--------

Editing

--	--

16	Cdel(ete)
----	-----------

Character delete

--	--

17	Ldel(ete)
----	-----------

Line delete

--	--

18	Ldis(play)
----	------------

Line display

--	--

19	Esig(nals)
----	------------

Editing PAD service signals

--	--

--	--

20	Mas(k)	Echo mask
----	--------	-----------

--	--

21	par(ity)	Parity treatment
----	----------	------------------

--	--

22	pag(e)	Page wait
----	--------	-----------

--	--

--	--

Note 1 – These names are provisional. This name should appear in the *parameter value PAD service* signals. The name or abbreviation should be accepted in the *read, set, or set and read PAD command* signals.

Note 2 – In some networks this parameter description may appear in the *parameter value PAD service* signals. Alternative parameter descriptions are for further study.

Table 8/X.28 [T8.28], p.3.5.17.2 *Format of these ""§ called DTE address block*

The need and the format of the called DTE address block is for further study.

3.5.17.3 *Format of the optional facility block*

If subscribed to, or requested in the *selection PAD command* signal (see Table 4/X.28), the optional facility block will contain the charging information " charging information"§ and will be transmitted by the PAD to the start-stop mode DTE. The format of the charging information is network dependent.

3.5.17.4 *Format of the clear user data block*

The 128 or less characters from the clear user data field received from the remote DTE shall be sent. The clear user data field is only allowed in conjunction with the fast select facility.

3.5.18 *Standard format of these ""§ PAD identification PAD service signal*

The characters that will comprise this *PAD service* signal will be network dependent, but would probably indicate the PAD identity and port identity.

3.5.19 *Standard format of these ""§ error PAD service signal*

The characters 4/5 (E) 5/2 (R) 5/2 (R) will be sent, followed by other characters which are for further study.

3.5.20 *Format of these ""§ padding characters*

The padding character will be 0/0 (NUL) or the equivalent duration of binary 1 according to the particular network.

3.5.21 *Standard format of these ""§ connected PAD service signal*

The *connected PAD service* signal will, in the following order, consist of the following elements:

- <optional called DTE address block> <formatting characters>
- <optional facility block> <formatting characters>
- <optional called user data field (see § 3.5.21.1)> <formatting characters>
- <character 4/3 (C) 4/15 (O) 4/13 (M)> <formatting characters>

The called DTE address block will consist of numeric characters from IA5. The optional facility block will be as given in § 3.5.22.2 below. It is for further study if the formatting characters will be 2/0 (SP) or the format effector.

3.5.21.1 *Standard format of the called user data field*

The 124 or less characters from the called user data field received from the remote DTE shall be sent. The called user data field is only allowed in conjunction with the fast select facility.

3.5.22 *Standard format of these ""§ incoming call PAD service signal*

The standard format of the *incoming call PAD service* signal will, in the following order, consist of the following elements:

- <calling DTE address block> <formatting characters>
- <optional facility block> <formatting character>
- <call data block> <formatting characters>
- <characters 4/3 (C) 4/15 (O) 4/13 (M)>

3.5.22.1 *Standard format of these "" § calling DTE address block*

The standard format of the calling DTE address block is for further study.

3.5.22.2 *Standard format of these "" § optional facility block*

The standard format of the facility block is as follows:

<facility block> :: = <FAC:> <facility string>

<FAC:> :: = <IA5 character 4/6 (F), 4/1 (A), 4/3 (C), 3/10 (:), 2/0 (SP)>

<facility string> :: = One or more facility indication codes separated by character 2/12 (,).

For facility indication codes see Table 4/X.28 and § 3.5.15.1.

The facility block is suppressed if no facilities are present in the incoming call.

3.5.22.3 *Standard format of these "" § call data block*

The 12 or less characters, or 124 or less characters in conjunction with the fast select facility, from the call data field received from the remote DTE shall be sent.

3.5.23 *Standard format of these "" § prompt PAD service signal*

The standard format of the *prompt PAD service* signal is the character 2/10 (*) following a *format effector*.

Note – For an interim period, other characters are permitted.

3.5.24 *Standard format of these "" § character deleted PAD service signal*

Depending on the value of parameter 19, the following will apply:

Value 0: no *PAD service* signal will be sent;

Value 1: the character 5/12 () will be sent; see note

Value 2: the characters 0/8 (BS) 2/0 (SP) 0/8 (BS) will be sent;

Value 8, 32–126: one character from International Alphabet No. 5 will be sent.

Note – Alternatively the character 2/15 (/) may be used by some networks.

3.5.25 *Standard format of these "" § line deleted PAD service signal*

Depending on the value of parameter 19, the following will apply:

Value 0: no *PAD service* signal will be sent;

Value 1, 8, 32–126: the characters 5/8 (X), 5/8 (X), 5/8 (X) will be sent followed by the *format effector*;

Value 2: the characters 0/8 (BS), 2/0 (SP), 0/8 (BS) will be sent the number of times equal to the number of graphic characters being deleted from the buffer.

3.5.26 *Standard format of these "" § parity error PAD service signal*

The standard format is for further study.

3.5.27 *Standard format of these ""§ page wait PAD service signal*

The characters 0/13 (CR) 5/0 (P) 4/1 (A) 4/7 (G) 4/5 (E) will be sent.

3.5.28 *Format of these ""§ page wait cancellation character*

The character X–ON will be sent.

3.5.29 *Standard format of these ""§ reselection PAD service signal*

The standard format of the *reselection PAD service* signal will, in the following order, consist of the following element:

- <character 5/4 (T) 5/2 (R) 4/1 (A) 4/14 (N) 5/3 (S) 4/9 (F) 4/5 (E) 5/2 (R) 2/0 (SP) 5/4 (T) 4/15 (O) 3/10 (:)> <formatting character>
- <reselected DTE address block> <formatting character>
- <optional facility block> <character> <note>

Note 1 – the optional facility block contains the facilities included by the PAD in the *Call Request Packet* sent to the reselected DTE. The format of the optional facility block is identical to the one of the *incoming call PAD service* signal.

Note 2 – if requested in the *selection PAD command* signal for the original call or in the *reselection PAD service* signal for the reselected call(s), the PAD will send the charging information before transmitting the *reselection PAD service* signal (see § 3.6. iii) of Recommendation X.29).

Note 3 – the format of charging information is network dependent (see § 3.5.17.2).

3.6 *xe ""§Editing functions in the PAD*

The PAD provides functions for the start–stop mode DTE to edit characters input to the PAD in *PAD command* signals before being processed by the PAD. The functions provided are:

- a) character delete,
- b) line delete,
- c) line display.

Optionally available in some PADs are identical functions for use by the start–stop mode DTE during the *data transfer* state. When the value of parameter 15 is set to 0 no editing is available during the *data transfer* state.

When the value of parameter 15 is set to 1 editing is provided during the *data transfer* state (see § 4.17).

The user may also have the ability in some PAD implementations to select the character used to effect each of the above functions by setting the value of parameters 16, 17 and 18 and to choose if and in what format the PAD will respond to the editing characters by setting the value of parameter 19 appropriately.

The procedures for editing described in this section apply to both *PAD command* and *data transfer* state (when provided).

3.6.1 *xe ""§Editing buffer*

To perform the functions of editing, the PAD provides temporary storage of characters in an editing buffer.

3.6.1.1 *xe ""§Editing buffer size in PAD command state*

In the *PAD command* state the size of the editing buffer will be sufficient to contain the longest mandatory *PAD command* signal permissible in this Recommendation.

3.6.1.2 *Editing buffer size in data transfer state*

In the *data transfer* state the size of the editing buffer is network dependent but will not be smaller than the full packet size and will not be smaller than the value of parameter 10 plus one. It should be noted however, that in some networks the size of the editing buffer may be limited to a maximum of 128 octets.

3.6.1.3 *Impact of editing on data forwarding conditions*

In the *data transfer* state, characters entered into the editing buffer will be forwarded in a complete packet sequence when any of the data forwarding conditions described in § 4.4 and Recommendation X.29, § 2.1 occurs, except that:

- a) the PAD will not take account of the value of the idle time delay defined by the value of parameter 4;
- b) data forwarding on full packet will be suspended.

Whenever more than enough data has been received to fill the editing buffer, one full packet will be forwarded. The remaining characters will be placed in the beginning of the editing buffer and editing of these characters remains possible.

Once a packet has been forwarded, characters included in it can no longer be edited by the start-stop mode DTE by use of the PAD editing functions.

3.6.2 Procedures for editing

The procedures for editing *PAD command* signals and user data (when this facility is provided) use PAD parameters as defined in Recommendation X.3.

3.6.2.1 *Procedure for character delete editing function*

The character delete editing function is performed when the PAD receives a *character delete* character or a series of *character delete* characters from the start-stop mode DTE. The receipt of each *character delete* character causes the last character currently in the editing buffer to be deleted.

Subsequently, if the value of parameter 6 is not set to 0, if the value of parameter 19 is set to 2 or 8 and a graphic character is removed from the editing buffer, or, if the value of parameter 19 is set to 1 or 32–126, and a character is removed from the editing buffer, the *character deleted PAD service* signal will be sent by the PAD. The standard format of the *character deleted PAD service* signal is given in § 3.5.24 above.

The *character delete* character when user selectable is determined by the value of parameter 16. The default value of parameter 16 or the *character delete* character when not user selectable is the character 7/15 (DEL).

3.6.2.2 *Procedure for line delete editing function*

The line delete editing function is performed when the PAD receives a *line delete* character from the start-stop mode DTE. The receipt of the *line delete* character causes the deletion of the current contents of the editing buffer.

The PAD will transmit, if parameter 6 and parameter 19 are not set to 0 and the editing buffer is not empty, a *line deleted PAD service* signal.

The *line delete* character when user selectable is determined by the value of parameter 17. The default value of parameter 17 or the *line delete* character when not user selectable is the

character 1/8 (CAN).

3.6.2.3 Procedure for line display editing function

The line display editing function is performed when the PAD receives a *line display* character from the start-stop mode DTE.

The receipt of the *line display* character causes the PAD to transmit to the start-stop mode DTE a format effector followed by the characters currently stored in the editing buffer.

The *line display* character when user selectable is determined by the value of parameter 18. The default value of parameter 18 or the *line display* character when not user suitable is the character 1/2 (DC2).

3.7 Procedure for request of status of the virtual call

The start-stop mode DTE may, if parameter 6 is not set to 0, enquire whether a virtual call exists by sending the *status PAD* command signal to the PAD. The PAD will respond by sending the *status engaged* or *status free PAD* service signal to the DTE. The format of the PAD command signal and the standard format of the PAD service signals is given in §§ 3.5.10 and 3.5.11 respectively.

4 Procedures for the exchange of user data between a start-stop mode DTE and a PAD

The procedures described apply during the *data transfer* state of the interface to a start-stop mode DTE.

4.1 Data transfer state

After receipt of the *connected* or *incoming call PAD* service signal, the interface shall be in the *data transfer* state and will remain in that state, unless it escapes as described in § 4.9 below, until the virtual call is cleared by the PAD or by the start-stop mode DTE as described in § 3.2.2 above.

If parameters 1, 12, 15 and 22 when implemented are set to 0, during the *data transfer* state any character sequence may be transmitted by the start-stop mode DTE for delivery to the remote DTE. If parameter 1 is not set to 0, the PAD recall character selected by the value of parameter 1 can only be transferred by following the procedure described in § 4.9.1.1 below.

If parameter 12 is set to 1, characters 1/1 (DC1) and 1/3 (DC3) are unable to be transferred to the remote DTE, if parameter 15 is set to 1 the characters assigned for editing functions are unable to be transferred to the remote DTE; and if parameter 22 when implemented is not set to 0, the character 1/1 (DC1) is unable to be transferred to the remote DTE.

The values of other parameters may affect the characters which may be transferred during the *data transfer* state.

4.2 Data from the start-stop mode DTE received by the PAD

Characters received from the start-stop mode DTE are defined as consisting of all the bits received between, but not including, the start and stop bits. The action of the PAD with respect to the parity bit (bit 8) of all characters received is described in § 2.1 above.

4.3 Delivery of user data to the start-stop mode DTE

Data received by the PAD for delivery to the start-stop mode DTE will be treated as contiguous octets. Each octet will be transmitted to the start-stop mode DTE at the data signalling rate appropriate to the start-stop mode DTE. The action of the PAD with respect to bit 8 (parity) of

all characters transmitted is described in § 2.1 above.

Start and stop bits will be added to the characters in accordance with Recommendation X.4, except that the number of stop bits will be as follows. If the PAD is operating at 110 bit/s, two stop bits will be transmitted. At any other speed, one stop bit will be transmitted.

The data will be transmitted to the start-stop mode DTE at the earliest opportunity permitted by the interleaving rules (see § 4.19).

4.4 *Data forwarding conditions*

A packet will be forwarded subject to flow control, whenever more than enough data has been received from the start-stop mode DTE to fill a packet after the last packet was forwarded if the value of parameter 15 is set to 0. A packet will also be forwarded when the maximum assembly timer delay period, which starts upon receipt by the PAD of the first character to be assembled into a packet, elapses. The value of the time-out, when implemented, is network dependent and will be greater than or equal to 15 minutes.

In addition, the start-stop mode DTE may indicate to the PAD that a packet should be forwarded, subject to flow control, whenever it performs any one, or more, of the following:

a) Allows the idle time delay period (see parameter 4 in Table 1/X.3), after the transmission of the previous character to the PAD, to elapse without sending a character. If, due to flow control constraints, the packet cannot be forwarded, characters from the start-stop mode DTE will continue to be added to the packet until flow control permits the packet to be forwarded or the packet becomes full. The start-stop mode DTE may be advised (see §§ 4.5 and 4.6 below) if this latter condition occurs. This forwarding condition does not apply if the value of parameter 15 is set to 1.

b) Transmits one of the data forwarding character (see parameter 3 in Table 1/X.3). The character will be included in the data field of the packet it delimits before the packet is forwarded. In case the forwarding character is the character 0/13 (CR) and the value of parameter 13 is set to 6 or 7, the character 0/10 (LF) will be included in the same complete packet sequence as the character 0/13 (CR) and will delimit it.

c) Transmits the *break* signal when parameter 7 is set to any value except 0.

d) Transmits the first character of a *PAD command* signal after the interface has entered a *waiting for command* state as described in § 4.9.1 below.

e) If the value of parameter 15 is set to one, data forwarding will take place as described in § 3.6.1.3.

4.5 *Procedure for the PAD to indicate to the start-stop mode DTE, by means of a PAD service signal, a temporary inability to accept additional information*

The procedure to enable the PAD to indicate a temporary inability to receive additional characters and to subsequently indicate that characters will be accepted, using PAD service signals, is for further study.

This procedure will not operate if parameter 6 is set to 0.

4.6 *Procedures for transmission of X-ON and X-OFF by the PAD*

4.6.1 If parameter 5 is set to 1, the following ancillary device control procedure applies:

The PAD will send the X-ON character to the DTE as soon as the interface enters the *data transfer* state. The character 1/1 (DC1) will be transmitted by the PAD as the X-ON character.

The PAD will send the X-OFF character to the start-stop mode DTE when it is incapable of receiving more than M characters from the ancillary device at the start-stop mode DTE and another character is received from the DTE. The PAD will also send the X-OFF character before the interface leaves the *data transfer* state. The character 1/3 (DC3) will be transmitted by the PAD as the X-OFF character.

When the PAD is again able to receive at least M + 1 characters from the start-stop mode DTE, it will send the X-ON character to that DTE.

4.6.2 If parameter 5 is set to 2, the following flow control procedure applies:

The PAD will send the X-ON character to DTE as soon as the interface enters the *PAD waiting* state (state 5), after link initialization.

The PAD will send the X-OFF character to the start-stop mode DTE, when it is incapable of receiving more than M characters from the start-stop mode DTE and another character is received from the DTE, in either state 5, 6, 7, 9 or 10.

When the PAD is again able to receive at least M + 1 characters from the start-stop mode DTE, it will send the X-ON character to that DTE.

The PAD will not send the X-OFF character to the start-stop mode DTE other than as specified in the above paragraph.

Note – Some networks may send the X-ON character to the start-stop mode DTE when the interface enters either state 5, 6, 7, 9 or 10 from any other state.

4.6.3 The value of M is for further study.

4.7 xe ""§Procedures for reset

4.7.1 xe ""§Reset by the DTE

The start-stop mode DTE shall send a *reset PAD command* signal to the PAD when it wishes to reset the virtual call.

a) The *break* signal (see § 3.1.2 above) will be recognized by the PAD as a *reset PAD command* signal if parameter 7 is set to 2.

b) Alternatively the start-stop mode DTE may request reset by escaping from the *data transfer* state and sending a *reset PAD command* signal according to the procedure of § 4.9.2.3 below.

4.7.2 *Indication of*xe ""§ reset by the PAD

If the virtual call is reset by the packet mode DTE, by the remote start-stop mode DTE connected via a PAD or by the network, the PAD will send a *reset PAD service* signal, if the value of parameter 6 is not set to 0, to the start-stop mode DTE. The *PAD service* signal will indicate the cause of the reset.

The following reset causes will be indicated to the start-stop mode DTE:

- a) the remote DTE has reset the virtual call; the standard format is given in § 3.5.7 above;
- b) a local procedure error has occurred; the standard format is given in § 3.5.7 above;
- c) network congestion has occurred; the standard format is given in § 3.5.7 above.
- d) a remote procedure error has occurred; the standard format is given in § 3.5.7 above.

When parameter 6 is set to 0 the PAD is unable to indicate to the start-stop mode DTE that a

reset has occurred.

4.8 Procedure for escape character indication of break

The PAD will inform the start-stop mode DTE that an incoming *indication of break PAD message* has been received by the PAD (see Recommendation X.29) by sending the *break* signal (see § 3.1.2 above).

4.9 Escape from the data transfer state

4.9.1 During the *data transfer* state, the start-stop mode DTE may escape from that state by transmitting a *PAD recall* signal to the PAD. On detection of the *PAD recall* signal, the interface will enter the *waiting for command* state. On entering the *waiting for command* state, delivery of any data characters to the start-stop mode DTE will be delayed until the interface returns to the *data transfer* state.

If parameter 1 is set to 1, the PAD will recognize the character 1/0 (DLE) as the *PAD recall* signal from the start-stop mode DTE.

If parameter 1 is set to a decimal value from 32 to 126, the PAD will recognize the binary representation of the decimal value as the *PAD recall* signal from the start-stop mode DTE.

If parameter 7 is set to 8, the *break* signal may be used as the *PAD recall* signal from the *data transfer* state, allowing for escape from the *data transfer* state without loss of character transparency.

If parameter 6 is set to 5 the *prompt PAD service* signal will be transmitted by the PAD.

On receipt of the next character from the start-stop mode DTE, the PAD will act in accordance with one of the following conditions:

a) If the character is the *PAD recall* character the interface will immediately return to the *data transfer* state. This character will be treated as user data.

b) If the character received is the *PAD command signal delimiter* [characters 2/11 (+) or 0/13 (CR)] the PAD will not transfer it and the interface will return to the *data transfer* state.

c) If the character received is in columns 2 to 7 of International Alphabet No. 5, excluding the characters 2/0 (SP), 2/11 (+) [see § 4.9.1 b) above], 7/15 (DEL) and the *PAD recall* character, the interface will enter the *PAD command* state. Characters 2/0 (SP) and 7/15 (DEL) will be ignored. Entering the *PAD command* state is a data forwarding condition and data will be sent to the packet mode DTE as described in § 4.4 above.

d) If the character is not covered above the action by the PAD is for further study.

If the *PAD command* signal delimiter is not received within R seconds of the interface entering the *PAD command* state, or an invalid *PAD command* signal is received, the PAD will transmit an *error PAD service* signal, when parameter 6 is not set to 0, indicating that an error has occurred. Following transmission of the *error PAD service* signal the interface will be in the *data transfer* state. The value of R is for further study but will not be less than 60 s.

If a valid *PAD command* signal is received the interface will, if parameter 6 is not set to 0, subsequently enter the *PAD service* signal state, and on transmission of the last character of the *PAD service* signal will enter the *PAD waiting* state or the *data transfer* state as appropriate. If parameter 6 is set to 0, the interface will enter the *PAD waiting* state or the *data transfer* state, as appropriate, following the transmission of a *PAD command* signal or following the time-out condition specified above.

4.9.2 The ability to escape from the *data transfer* state allows a start-stop mode DTE to use the

following *PAD command* signals and procedures:

4.9.2.1 *Clearing*

The procedure for clearing of the virtual call by the start–stop mode DTE sending a *clear request PAD command* signal is described in § 3.2.2.1 a).

4.9.2.2 *Request for status of the virtual call*

The procedure for requesting the status of the virtual call by the start–stop mode DTE sending a *status PAD command* signal, is described in § 3.7.

4.9.2.3 *Reset*

The start–stop mode DTE may request a resetting of the virtual call by sending a *reset PAD command* signal to the PAD. The format of the *reset PAD command* signal is given in § 3.5.12 above.

The PAD will acknowledge the *reset PAD command* signal, if parameter 6 is not set to 0, by transmitting the *acknowledgement PAD service* signal.

4.9.2.4 *Interrupt*

The start–stop mode DTE may request that an *interrupt* packet (with the interrupt user data field appropriately coded, see Recommendation X.29) is sent by the PAD by sending an *interrupt PAD command* signal to the PAD. The format of the *interrupt PAD command signal* is given in § 3.5.13 above.

The PAD will acknowledge the *PAD command* signal, if parameter 6 is not set to 0, by transmitting the *acknowledgement PAD service* signal.

4.9.2.5 *Setting, setting and reading, and reading PAD parameter values after having entered the data transfer state*

The start–stop mode DTE shall be able to send the following *PAD command* signals to set, set and read, and read PAD parameter values:

- a) *profile selection PAD command* signal;
- b) *set PAD command* signal;
- c) *set and read PAD command* signal;
- d) *read PAD command* signal.

As an option, a PAD may enable the start–stop mode DTE to send the following *PAD command* signals to read or set and read the remote PAD parameter values:

- b) *read remote PAD command* signal;
- c) *set and read remote PAD command* signal.

The procedures for sending the above *PAD command* signals are described in §§ 3.3 and 3.4 above.

4.9.2.6 *Procedure when parameter 6 is set to 0*

In all cases of the procedures given, when parameter 6 is set to 0, the *PAD service* signal state (state 8) is bypassed and the interface will enter *PAD waiting* state or the *data transfer* state as appropriate.

4.10 *xe ""§Echo*

If parameter 2 is set to 1, the following procedures will apply:

Received characters not masked by parameter 20 will be echoed to the start-stop mode DTE at the earliest opportunity permitted by the interleaving rules (see § 4.19).

In the case where the PAD cannot handle and ignores a data character coming from the start-stop mode DTE, e.g. because of flow control constraints, the PAD will not echo the characters.

Echoing of editing characters will not be masked if editing is not enabled.

4.11 Selection of the procedure on receipt of the break signal from the start-stop mode DTE

The start-stop mode DTE, by means of parameter 7, will be able to select the state of the interface and which procedure the PAD will perform when the PAD receives the *break* signal from the start-stop mode DTE. The start-stop mode DTE may select any one of the following:

a) If parameter 7 is set to 0, the state of the interface remains the same and no action is taken by the PAD.

b) If parameter 7 is set to 1, the state of the interface remains the same and the PAD causes an *interrupt* packet, (with the interrupt user data field appropriately coded) to be transmitted by the PAD (see Recommendation X.29).

c) If parameter 7 is set to 2, the state of the interface remains the same and the PAD causes the virtual call to be reset (see Recommendation X.29).

d) If parameter 7 is set to 21, the state of the interface remains the same, the PAD discards all data received for delivery to the start-stop mode DTE, and the PAD sends an *interrupt* packet (with the interrupt user data field appropriately coded) followed by an *indication of break PAD message* (see Recommendation X.29).

e) If parameter 7 is set to 8, the interface will escape from the *data transfer* state and will enter the *waiting for command* state.

f) If parameter 7 is set to 5, the state of the interface remains the same, the PAD sends an *interrupt* packet (with the interrupt user data field appropriately coded), followed by an *indication of break PAD message*.

Other procedures which may be selected by the start-stop mode DTE are for further study.

Note 1 – The receipt by the PAD of a *break* signal is a packet forwarding condition except when parameter 7 is set to 0.

Note 2 – The receipt of a *break* signal by the PAD when there is no virtual call established is ignored and the PAD takes no action.

4.12 Selection of padding characters to be inserted after the character 0/13 (CR)

The start-stop mode DTE, by means of parameter 9, will be able to select the number of padding characters that will be inserted after each character 0/13 (CR) transmitted or echoed to it. The value selected will also apply to the number of padding characters transmitted after the character 0/10 (LF) of the *format effector* as described in § 3.5.2 above.

Other padding sequences and other padding rules are for further study.

4.13 Selection of line folding

The start-stop mode DTE, by means of parameter 10, will be able to select line folding and specify the maximum number (L) of graphic characters that the PAD may send as a single line to the start-stop mode DTE.

When line folding is requested, the PAD will maintain a count (C) which is incremented by 1 subsequent to the transmission of a graphic character including echoed characters, to the start-stop mode DTE.

The graphic characters are those shown in columns 2 to 7 of International Alphabet No. 5, excluding the character 7/15 (DEL).

If the value of C is equal to the value of L, and the next character to be transmitted to the start-stop mode DTE is a graphic character, the PAD will transmit to the start-stop mode DTE a *format effector* (see § 3.5.2 above) and set the value of C to 0.

The PAD will set the value of C to 0 when the PAD transmits the character 0/13 (CR) to the start-stop mode DTE.

The actions of the PAD after the transmission of the character 0/8 (BS) is for further study.

Line folding also applies to *PAD service* signals and the echo of *PAD command* signals.

4.14 Procedure for the start-stop mode DTE to indicate to the PAD a temporary inability to accept additional information

The start-stop mode DTE, by means of parameter 12, will be able to select the use of X-ON and X-OFF characters to flow control the PAD.

If the value of parameter 12 is set to 1 and the interface is in the *data transfer* state the following procedure applies:

The start-stop mode DTE may indicate a temporary inability to receive additional characters from the PAD by transmitting the X-OFF character 1/3 (DC3).

Following transmission of the character 1/3 (DC3), the X-OFF condition will exist until the start-stop mode DTE indicates the ability to receive additional characters from the PAD by transmitting the X-ON character 1/1 (DC1).

While the X-OFF condition exists, the PAD will not transmit characters to the start-stop mode DTE.

The X-OFF condition is cancelled when the interface leaves the *data transfer* state, and does not exist when the interface enters the *data transfer* state.

The X-ON and X-OFF characters will not be echoed regardless of the value of parameter 2 and 20.

4.15 Selection of linefeed insertion after carriage return

The start-stop mode DTE, by means of parameter 13, will be able to select which procedure the PAD will perform during the *data transfer* state when it receives the character 0/13 (CR) to be transmitted to the start-stop mode DTE.

If parameter 13 is set to 0, the PAD takes no action.

If parameter 13 is set to 1, 5 or 7, the PAD will insert the character 0/10 (LF) after every character 0/13 (CR) in the data stream to the start-stop mode DTE.

If parameter 13 is set to 6 or 7, the PAD will insert the character 0/10 (LF) after every character 0/13 (CR) in the data stream from the start-stop mode DTE.

If parameter 13 is set to 4, 5, 6 or 7 (and parameter 2 is set to 1) the PAD will insert the character 0/10 (LF) after the echo of a character 0/13 (CR) to the start-stop mode DTE.

When this parameter includes the value 2, in combination with other optional values, then

the LF inserted after CR in the data stream from the start–stop mode DTE will be placed in the editing buffer and may subsequently be edited, if parameter 15 is set to 1.

4.16 *Selection of padding characters to be inserted after the character 0/10 (LF)*

The start–stop mode DTE, by means of parameter 14, will be able to select the number of padding characters that will be inserted after each character 0/10 (LF) transmitted or echoed to it during the *data transfer* state. The value selected will not apply to the number of padding characters transmitted after the character 0/10 (LF) of the *format effector* as described in §§ 3.5.2 and 4.12 above.

4.17 *Editing of user data*

The editing functions described in § 3.6 above may also apply during the *data transfer* state. The start–stop mode DTE by means of parameter 15 may select whether or not to use the editing functions. The start–stop mode DTE may select, by using parameters 16, 17, 18 the character used for each editing function provided by the PAD and by use of parameter 19, select the response of the PAD to the editing characters (see Recommendation X.3).

4.18 *xe ""§Page wait*

4.18.1 *General*

The start–stop mode DTE will be able to suspend the transmission of additional characters to the start–stop mode DTE after a specified number of linefeeds have been transmitted by the PAD as determined by the value of parameter 22 when the page wait condition occurs. The PAD will, if parameter 6 is not set to 0, send to the start–stop mode DTE a *page wait PAD service* signal. No further data will be sent until the page wait condition is cancelled. The standard format of the *page wait PAD service* signal is described in § 3.5.27.

4.18.2 *Page wait cancellation*

The PAD will cancel the page wait condition and after transmitting a format effector resume normal transmission when any of the following occur:

- on receipt of any condition that resets the count of linefeeds as described in § 4.18.3;
- on receipt of the page wait cancellation character *xe " page wait cancellation character"§ (X–ON)*; or
- on resetting parameter 22 to zero.

4.18.3 *Page wait linefeed count reset*

The count of linefeed will be reset to zero by the PAD when any of the following occur:

- after the format effector following the page wait cancellation character;
- on receipt of all data forwarding conditions;
- on echoing linefeed in user input;
- after the *line deleted PAD service* signal (with all associated linefeeds) has been sent; or
- on leaving the *PAD command* state (state 6) after all associated linefeeds.

Other conditions for resetting the linefeed count are for further study.

4.19 *Interleaving of echo and output*

Character sent to start–stop DTE by the PAD are classified into *echo characters* and *output characters*. The *echo characters* are all characters contained in the following:

- a) echoed received characters, either of a *PAD command* signal or of user input;
- b) any line feed inserted after the echo of a carriage return, when Parameter 13 has value 4, 5, 6 or 7 (see § 4.15);
- c) the *character deleted*, *line deleted* and *parity error PAD service* signals;
- d) a *format effector* inserted as a result of line folding initiated by some other echoed character (see § 4.13);
- e) all characters generated in response to the *line display* character (see § 3.6.2.3).

All other characters sent to the start–stop DTE by the PAD are *output characters*.

Echo and *output characters* shall be sent to the start–stop DTE by the PAD in accordance with either the *basic interleaving rules*, see § 4.19.1, or the *extended interleaving rules*, see § 4.19.2. The choice between rules is network dependent.

4.19.1 Basic interleaving rules

If any *echo character* is waiting to be sent to the start–stop DTE by the PAD, it shall be sent immediately.

If any *output character* is waiting to be sent to the start–stop DTE by the PAD, and if no *echo character* is waiting, the *output character* shall be sent immediately.

4.19.2 Extended interleaving rules

Characters sent to the start–stop DTE by the PAD are grouped into *interleaving units*. An *interleaving unit* either consists entirely of *echo characters* or consists entirely of *output characters*.

An interleaving unit of *echo characters* is terminated by any data forwarding condition, or by a *PAD command signal delimiter*.

A *PAD service* signal (which is not classified as echo), or a series of *PAD service* signals generated in response to a single PAD command, is an *interleaving unit*.

Each complete packet sequence sent from the Packet mode DTE is whole number of *interleaving units*. How a complete packet sequence is divided into one or more *interleaving units* is network dependent.

Note 1 – A preferred division rule is that any line feed or form feed " " form feed"§ should terminate an *interleaving unit* including any line feed inserted if the value of parameter 13 is odd.

Note 2 – If only part of an *interleaving unit* (output or echo) is sent to the start–stop mode DTE, characters of the other category (echo or output) may be delayed indefinitely. This may be avoided by the use of timers; details are for further study.

5 Formats of additional PAD command signals and PAD service signals available in the extended dialogue mode

In addition to the *PAD command* signals and *PAD service* signals defined above (see § 3.1.1 and § 3.5 above), some networks may support additional capabilities in the extended dialogue mode. Additional PAD command signal keywords, which are provisionally defined in Table 9/X.28, can be used instead of the corresponding standard keywords. Some networks may provide these keywords when the PAD is not in the extended dialogue mode.

Additional *PAD command* signals may be provided for:

- a) requesting the action associated with the break signal (see § 5.1)

b) indicating a network user identifier prior to establishing calls, or terminating the use of a NUI (see § 5.2)

c) selecting a language for *PAD service* signals (see § 5.3)

d) requesting explanatory information on *PAD command* signals, PAD parameters, standard profiles, etc.

(Note: This function must be provided if extended dialogue mode is supported) (see § 5.4)

Additional *PAD service* signals may be provided for:

a) explanatory information as described above (see § 5.5)

b) prompting for additional information for certain *PAD command* signals. The formats and procedures are for further study.

When the PAD is in the extended dialogue mode, the parameter reference number of a PAD parameter in the *read*, *set*, *set and read*, *remote read* or *remote set and read PAD command* signals may be replaced by the abbreviated name shown in Table 8/X.28. The possible use of names to represent PAD parameter value is for further study.

H.T. [T9.28]

TABLE 9/X.28

PAD command signal keywords for extended dialogue mode

--	--

Standard keyword	Extended dialogue mode keyword(s)
------------------	-----------------------------------

PAD command signal name

--	--

--	--

None	CALL
------	------

Selection

--	--

--	--

CLR	CLEAR
-----	-------

clear request

--	--

--	--

INT	INTERRUPT
-----	-----------

interrupt

--	--

--	--

PROF	PROFILE
------	---------

profile selection

--	--

--	--

PAR?	PAR
------	-----

PARAMETER	
-----------	--

READ	read
------	------

--	--

RESET
-------	------

reset

--	--

--	--

SET
-----	------

set

--	--

--	--

SET?	SETREAD
------	---------

set and read

--	--

--	--

STAT	STATUS	status
------	--------	--------

--	--

--	--

....	BREAK	break
------	-------	-------

--	--

--	--

....	HELP	help
------	------	------

--	--

--	--

....	LANG
------	------

LANGUAGE	language
----------	----------

--	--

....	NUI
------	-----

nui

--	--

--	--

RPAR?	RREAD
-------	-------

remote read

--	--

--	--

ICLR	ICLEAR
------	--------

invitation to clear

--	--

--	--

RSET?	RSETREAD
-------	----------

remote set and read

--	--

--	--

Tableau 9/X.28 [T9.28], p. 45.1 *Format of the break PAD command signal*

The *break PAD command* signal consists of the following elements:

<break PAD command signal> :: = <BREAK>

where

<BREAK> :: = 4/2 (B) 5/2 (R) 4/5 (E) 4/1 (A) 4/1 (K)

The *break PAD command* signal requests the PAD to act as if it had received the break signal from the start stop mode DTE. The action depends on the value of PAD parameter 7, as defined in § 4.11. However, the interface will enter the *PAD waiting* state or *data transfer* state as appropriate unless parameter 7 has the value 8 set, in which case the interface will reenter the *waiting for command* state.

Note – Escape from data transfer state is not possible by using this command.

5.2 *Format of the NUI ON and NUI OFF PAD command signals*

The NUI ON command signal consists of the following elements:

command signal> :: <ID> <NUI string>

where

<ID> :: = 4/9 (I) 4/4 (D)

<NUI string> is optional but if present is as defined in § 3.5.15.1.1.

The NUI ON PAD *command* signal identifies an individual terminal user to the PAD. This identification will apply for all subsequent calls until either the access path is disconnected or a *NUI OFF PAD command* signal is received by the PAD.

If the prompting facility is provided, then the PAD may request additional user input if required when the <NUI string> is omitted.

The NUI OFF PAD command signal consists of the following elements:

<NUI OFF PAD command signal> :: = <IDOFF>

where

<IDOFF> :: = 4/9 (I) 4/4 (D) 4/15 (O) 4/6 (F) 4/6 (F)

The *NUI OFF PAD command* signal indicates the termination of the use of the NUI.

5.3 *Format of the language PAD command signal*

The *language PAD command* signal consists of the following elements:

<language PAD command signal> :: = <LANG> <language string>

where

<LANG> :: = 4/12 (L) 4/1 (A) 4/14 (N) 4/7 (G)

<language string> :: = an appropriate identifier for a language or mode supported by

the network for use in service signals.

The *language PAD command* may be provided to give a simpler way to set parameter 6 for a choice of language or mode.

If <language string> refers to a language which the network provides in extended dialogue mode, then the value of parameter 6 is set to the appropriate value (16 or greater). If <language string> refers to a language which the network provides in network dependent service signal formats, then the value of parameter 6 may be set to the appropriate value from 8 to 15.

The format of <language string> and the availability of more than one language is network dependent.

The need for selection of different languages for *PAD command* signals is for further study.

Note – If a network provides a language choice independent of extended dialogue mode, the format of <language string> should provide for identifying the mode and the language.

5.4 *Format of the help PAD command signal*

The *help PAD command* signal consists of the following elements:

<help PAD command signal> :: = <HELP> <help subject>

where

<HELP> :: = 4/8 (H) 4/5 (E) 4/12 (L) 5/0 (P)

<help subject> :: = identifier for the type of explanatory information requested, as defined in Table 10/X.28.

5.5 *Standard format of the help PAD service signal*

The *help PAD service* signal consists of the following elements:

<help PAD service signal> :: = <text>

where

<text> is network dependent and corresponds to the <help subject> requested in the *help PAD command* signal, as defined in Table 10/X.28.

H.T. [T10.28]

TABLE 10/X.28

Help PAD command signal operands and results

--

<help subject> (Note 2)

service signal contents (Note 1)

--

--

--

none or HELP

description of help PAD command

--

--

LIST

list of available help subjects

--

--

COMMAND

list of PAD command signals

--

PARAMETER

list of PAD parameters

PARAMETER <reference>

description of referenced PAD parameter

PROFILES

list of available standard profiles

any PAD command

description of specified PAD command signal

PROFILE <reference>

name and parameter values of referenced standard profile

Note 1 – The actual contents of the help *PAD service* signal and the amount of detail presented are network dependent.

Note 2 – Some networks may provide help for additional subjects to those listed.

Tableau 10/X.28 [10.28], p. 5

BlancANNEX A
(to Recommendation X.28)

PAD command signals and PAD service signals

H.T. [T11.28]

TABLE A–1/X.28

PAD command signals

--	--

PAD command signal format	Function
------------------------------	----------

PAD service signal sent in response
(see note)

--	--

--	--

STAT	To request status information regarding a virtual call connected to the DTE	FREE
------	---	------

--	--

or	
----	--

ENGAGED	
---------	--

--	--

CLR	To clear down a virtual call	CLR CONF
-----	------------------------------	----------

--	--

or	
----	--

CLR ERR (in the case of local procedure error)	
--	--

--	--

PAR? List of parameter references	To request the current values of specified parameters
-----------------------------------	---

PAR (list of parameter with their current values or INV)

--	--

--	--

SET? List of parameter references and corresponding values	To request changing or setting of the current values of the specified parameters and to request the current values of specified parameters
--	--

PAR (list of parameter with their current values or INV)

--	--

--	--

PROF (identifier)	To give to PAD parameters a standard set of values
-------------------	--

Acknowledgement

--	--

--	--

--	--

RESET	To reset the virtual call
-------	---------------------------

Acknowledgement

--	--

--	--

INT	To transmit an <i>interrupt</i> packet
-----	--

Acknowledgement

--	--

--	--

SET List of parameters with requested values	To set or change parameter values
--	-----------------------------------

Acknowledgement or PAR (list of invalid parameter reference followed by INV)

--	--

--	--

<i>Selection PAD command signal</i>	To set up a virtual call
-------------------------------------	--------------------------

Acknowledgement

--	--

--	--

ICLR	To invite remote PAD to clear down a virtual call
------	---

CLR PAD

--	--

--	--

RPAR?List of parameter references	To request the current values of specified parameters in remote PAD
-----------------------------------	---

RPAR (list of parameter references with their current values or INV)

--	--

--	--

RSET? List of parameter references	To request changing or setting of the current values of the specified parameter(s) and to request the current value of specified parameters
------------------------------------	---

RPAR (list of parameter references with their current values or INV)

--	--

--	--

--	--

Note – PAD service signals are not sent when parameter 6 is set to 0.

1/X.28 [T11.28]

Tableau A–1/X.28 [11.28], p. 6

H.T. [1T12.28]

TABLE A–2/X.28

PAD service signals

--

Standard format of the PAD service signal

Explanation

--

--

RESET	DTE 1, 2 or 3 characters which represent the
-------	--

Indication that the remote DTE has reset the virtual call

--	--

ERR décimal value of the diagnostic code	Indication of a reset of a virtual call due to local procedure error
---	--

NC (see Note 1)	Indication of a reset of a virtual call due to network congestion
--------------------	---

RPE	Indication of a reset of a virtual call due to remote procedure error
-----	---

--	--

CLR	See Table 6/X.28
-----	------------------

Indication of clearing

--	--

--	--

CLR	CONF
-----	------

Confirmation of clearing

--	--

--	--

See Note 7	–
------------	---

Indication of call connected

--	--

--	--

The characters to be sent are network dependent	PAD identification PAD service signal
---	--

--	--

ERR	Indication that a <i>PAD command signal</i> is in error
-----	---

--	--

See Note 2	Indication of incoming call
------------	-----------------------------

--	--

XXX	Indication of line delete function completed for printing terminals (see Notes 3 and 4)
-----	---

--	--

See Note 8	Indication of character delete function completed for printing terminals
------------	--

--	--

PAGE	Indication that a page wait condition has occurred
------	--

--	--

BS SP BS	Indication of character delete function completed for video terminals (see Note 4)
----------	--

--	--

ENGAGED	Response to <i>status PAD command</i> signal when a call has been established
---------	---

--	--

--	--

FREE	Response to <i>status PAD command</i> signal when a call is not established
------	---

--	--

PAR	Decimal value of parameter: Parameter value, INV, or list of invalid parameters
-----	---

Response to *set and red PAD command* signal and to *set PAD command* signal if at least one parameter is invalid

--	--

--	--

*	<i>Prompt PAD service</i> signal
---	----------------------------------

--	--

2/X.28 [1T12.28]

Tableau A-2/X.28 [1T12.28], p. 7

H.T. [2T12.28]

TABLE A-2/X.28 (*cont.*)

--

Standard format of the PAD service signal

Explanation

--

--

Format	
--------	--

effector	<i>Acknowledgement PAD service signal</i>
----------	---

--	--

TRANSFER TO	DTE address and facilities,
-------------	-----------------------------

See Notes 5 and	Indication that a called
-----------------	--------------------------

6	DTE reselection by the PAD is in progress
---	---

--	--

RPAR	Decimal value of parameter: parameter value, INV, or list of invalid parameters
------	---

Responses to remote set and red PAD command
signal lecture

--	--

--	--

Note 1 – The diagnostic codes are specified in Recommendation X.25. Some networks may not provide these characters.

Note 2 – The standard format of the *incoming call PAD service* signal is given in § 3.5.22.

Note 3 – If echoing is required, the *line delete* character is echoed before the *line deleted PAD service* signal is transmitted.

Note 4 – The standard format of the indication of line delete function completed for video terminals is a repetition of the BS SP BS sequence.

Note 5 – The mentioned DTE address is the address of the DTE towards which the call is being transferred by the PAD.

Note 6 – The format of the facilities is identical to the one of the *incoming call PAD service* signal.

Note 7 – The standard format of the *connected PAD service* signal is given in § 3.5.21.

Note 8 – Alternatively the character 2/15 (/) may be used by some networks.

2/X.28 [2T12.28]

Tableau A–2/X.28 [2T12.28], p. 8

BlancANNEX B
(to Recommendation X.28)
PAD Time-outs

H.T. [1T13.28]
TABLE B-1/X.28

PAD time-outs

--	--	--	--	--	--

Time-out value (provisi onal)	Tim e-out num ber	Interfa ce state	Started by	Normally terminated	Action to be taken when time-out expires
--	----------------------------	---------------------	---------------	------------------------	---

Remarks

--	--	--	--	--	--

--	--	--	--	--	--

Y	T10	State 1	Binary 1 is transmitted on both T and R	The PAD has received a valid <i>service request signal</i>	The PAD will disconnect the <i>information path</i>
---	-----	---------	---	--	---

--	--	--	--	--	--

T = 60s	T11	state 6	The PAD enters the <i>PAD waiting</i> state	The PAD has received the first character of a <i>PAD command</i> signal	The PAD clears in accordance with § 3.2.2.2
---------	-----	---------	---	---	---

4 possible methods may be used. This time-out is not applicable in case of leased line access.

--	--	--	--	--	--

--	--	--	--	--	--

S > 60s	T12	State 6	The PAD has received the first character of a <i>PAD command</i>	The PAD has received a complete <i>PAD command</i> signal	The PAD will transmit an <i>error PAD service</i> signal (when parameter 6 is not set to 0)
---------	-----	---------	--	---	---

The PAD will permit entry into the *PAD waiting* state N times before disconnecting the access

			signal		and will return to the <i>PAD waiting</i> state of its action is for further study (when parameter 6 is set to 0)
--	--	--	--------	--	---

information paths:
this time out is not applicable in case of leased line access.

--	--	--	--	--	--

--	--	--	--	--	--

R > 60 s	T13	State 6	The PAD receives a graphic character other than 2/0, 2/11 or 7/15 after the DTE escapes from the <i>data transfer</i> state	Reception of a complete <i>PAD command</i> signal	The PAD will transmit an <i>error PAD service</i> signal and will return to the <i>data transfer</i> state (when parameter 6 is not set to 0) or the <i>PAD waiting</i> state of <i>data transfer</i> state as appropriate (when parameter 6 is set to 0)
-------------	-----	---------	---	---	---

This time-out is not applicable in the case of leased line access

--	--	--	--	--	--

--	--	--	--	--	--

V	T20	State 4	DTE transmits the <i>service request</i> signal	DTE has received a <i>PAD identification service</i>	DTE should retransmit the <i>service request</i> signal
---	-----	---------	---	--	---

When this time-out expires W times a fault should be reported

--	--	--	--	--	--

--	--	--	--	--	--

1/X.28 [1T13.28]

Tableau B–1/X.28 [1T13.28], p. 9

H.T. [2T13.28]

TABLE B–1/X.28 (*cont.*)

--	--	--	--	--	--

Time– out value (provisi onal)	Tim e–out num ber	Interfa ce state	Started by	Normally terminated	Action to be taken when time–out expires
--	----------------------------	---------------------	---------------	------------------------	---

Remarks

--	--	--	--	--	--

--	--	--	--	--	--

B	T21	State 6	DTE transmits a <i>clear request PAD command signal</i>	The PAD has transmitted <i>clear confirmation PAD service signal</i> (when parameter 6 is not set to 0) or has disconnected the access information path (when parameter 6 is set to 0)	The DTE will disconnect the access information path (indeterminate result)
---	-----	---------	---	---	--

--	--	--	--	--	--

X = 120 s	T30	–	Incoming call	PAD waiting state	The PAD will clear the virtual call
--------------	-----	---	------------------	----------------------	---

See § 3.2.1.7

--	--	--	--	--	--

--	--	--	--	--	--

Z	T31	–	Circuit 108/1 or 108/2 OFF	Circuit 108 ON	The access information path is disconnected
---	-----	---	-------------------------------------	-------------------	--

See § 1.1.3.2

--	--	--	--	--	--

--	--	--	--	--	--

P > 60 s	T14	State 10	The PAD is recalled from the connection in progress state	The PAD has received the first character of a PAD command signal	The PAD will transmit an error PAD service signal (when parameter 6 is not set to 0) and return to the connection in progress state
-------------	-----	-------------	---	---	---

--	--	--	--	--	--

--	--	--	--	--	--

Q > 60 s	T15	State 6	The PAD receives a graphic character other than 2/0, 2/11 or 7/15 after the DTE escape from the connection in progress state	Reception of a complete PAD command signal	(As for P above)
-------------	-----	---------	--	--	------------------

--	--	--	--	--	--

Tableau B–1/X.28 [2T13.28], p. 10

BlancANNEX C

(to Recommendation X.28)

PAD service signals for extended dialogue mode

C.1 Possible PAD service signals text in Spanish for extended dialogue mode

1. ENGAGED– Comunicación establecida (§ 3.5.11/X.28).
2. FREE – Comunicación no establecida (§ 3.5.11/X.28).
3. *Reset PAD service signal* (Table 5/X.28).
 - DTE – reiniciación por el dispositivo en el extremo distante, pueden perderse datos
 - ERR – reiniciación por la red, error de procedimiento local, pueden perderse datos
 - NC – reiniciación debido por problema en la red, pueden perderse datos
 - RPE – reiniciación por la red, error de procedimiento en el extremo distante, pueden perderse datos
4. *Clear PAD service signal* (Table 6/X.28)
 - OCC – liberación de la llamada, número ocupado
 - NC – liberación de la llamada, problema temporal en la red
 - INV – liberación de la llamada, petición de facilidad no válida
 - NA – liberación de la llamada, acceso prohibido a este número
 - ERR – liberación de la llamada, error de procedimiento local, identificado por la red
 - RPE – liberación de la llamada, error de procedimiento en el extremo distante,

identificado por la red

NP – liberación de la llamada, número no asignado

DER – liberación de la llamada, número fuera de servicio

PAD – liberación de la llamada, petición distante

DTE – liberación de la llamada, por el dispositivo en el extremo distante, pueden perderse datos

RNA – liberación de la llamada, cobro revertido rechazado

ID – liberación de la llamada, destino incompatible

SA – liberación de la llamada, barco ausente

FNA – liberación de llamada, selección rápida rechazada

ROO – liberación de llamada, no se puede encaminar según se ha pedido

5. *clear confirmation PAD service* signal (Table 7/X.28)

CONF – liberación de llamada, confirmación

Blanc6. PAD parameter names (Table 8/X.28)

H.T. [T14.28]

--

Parameter reference number

Parameter description

--

--

1

– rellamada al EDD utilizando un carácter

--

2

– eco

--

3

– elección de la señal de envió de datos

--

4

– elección de la duración de la temporización de reposo

5

– control de dispositivo auxiliar

6

– control de señales de servicio de EDD

7

– operación al recibir una señal de corte

8

– descartar salida

9

– relleno después del retroceso del carro

10

– delimitación de la línea

11

– velocidad binaria del ETD arrítmico

12

– control de flujo del EDD

13

– inserción de cambio de renglón después del retroceso del carro

14

– relleno después del cambio de renglón

15

– edición

16

– supresión de carácter

17

– supresión de línea

18

– visualización de línea

19

– señales de servicio de EDD de edición

20

– máscara de eco

21

– tratamiento de la paridad

22

– espera de página

C-8/X.28 [T14.28]

TABLE C-8/X.28 [T14.28], p.C.2 Possible *PAD* service signals text in French for extended dialogue mode

1. ENGAGED – état occupé (§ 3.5.11/X.28).
2. FREE – état libre (§ 3.5.11/X.28).
3. *Reset PAD service* signal (Table 5/X.28).
 - DTE – réinitialisation par l'équipement distant, perte de données possibles
 - ERR – réinitialisation par le réseau, erreur de procédure locale, perte de données possibles
 - NC – réinitialisation en raison d'un dérangement momentané du réseau, perte de données possibles
 - RPE – réinitialisation par le réseau, erreur de procédure distante, perte de données possibles
4. *Clear PAD service* signal (Table 6/X.28)
 - OCC – communication libérée, numéro occupé
 - NC – communication libérée, encombrement momentané du réseau
 - INV – communication libérée, demande de service complémentaire non valable
 - NA – communication libérée, interdiction d'accès au numéro
 - ERR – communication libérée, erreur de procédure locale décelée par le réseau
 - RPE – communication libérée, erreur de procédure distante décelée par le réseau
 - NP – communication libérée, numéro non attribué
 - DER – communication libérée, numéro en dérangement
 - PAD – communication libérée, demande distante
 - DTE – communication libérée, par un équipement distant
 - RNA – communication libérée, taxation à l'arrivée refusée
 - ID – communication libérée, destination incompatible
 - SA – communication libérée, le navire ne peut être atteint
 - FNA – communication libérée, sélection rapide refusée
 - ROO – communication libérée, acheminement demandé impossible
5. *Clear confirmation PAD service* signal (Table 7/X.28)
 - CONF – communication libérée confirmation
6. PAD parameter names (Table 8/X.28)

H.T. [T15.28]

--

Parameter reference number

Parameter description

--

--

1

– rappel de l'ADP au moyen d'un caractère

--

2

– renvoi en écho

--

3

– choix des caractères d'envoi de données

--

4

– choix du délai de temporisation de repos

5

– commande de dispositifs auxiliaires

6

– commande de signaux de service d'ADP

7


– fonctionnement à la réception du signal de coupure

8

– mise au rebut des données de sortie


9

– remplissage après retour du chariot

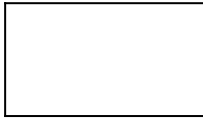


10

– retour à la ligne



11

– débit binaire de l'ETTD arythmique



12

– contrôle de flux de l'ADP




13

– insertion d'interligne après retour du chariot



14

– remplissage après interligne



15

– édition

16

– effacement de caractère

17

– effacement de ligne

18


– affichage de ligne

19

– signaux de service d'ADP d'édition


20

– gabarit d'écho

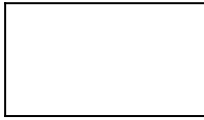


21

– traitement de parité



22

– attente de page



Tabulateurs des tableaux

b) NF01/004

X: NF08/004

(83.TA.239.E) (CCS)

(A1) (DO PRC.CCS = CCS) (DO \$G01WP.PRC.COSY = N)

Saisie 19.01.89 AF

Corr. 1ère épreuve 30.01.89 DD

2ème Corr. digiset

MAJ s/disquette 4.04.89 CD

Cuadro [T15.28], p.

(H.T.=OUI) **TAB.???** FICHER: H.T. = **(82.TA.239.E)**

(SANS FORMULE)Tableaux: 7 – Tabulateurs: 2

b) NF01/004

X: NF08/004

Formules: 0

TEXTE

– Disk 186 NF01/027 (OPM = 01)

bits 8 and 7 NF01/030 (OPM = 01)

Appendix II Disk 187 NF01/006 (OPM = 02)

– NF01/006 (OPM = 02)

NF01/026 (OPM = 02)

0

X

X

X

X

X

X

(cs,) Disk ... NF../... (OPM = ..)

(BT..) Disk ... NF../... (OPM = ..)

(82.TE.10.E)

(A1.23e) / [26e] **FOLIOS: 366 – 392 (AS)(DO PRC.COSY.2)**

MEP [PA1] : OK= [1]

Saisie 07.12.88 XS/YB

ID + Vérif. + diskette MAJ + laser 19.12.88 PV

Corr. LASER (1re épreuve) = 3eme 09.01.89 SB

Vérif. corr. + transfert + imprimantes

Espaces réservés

AJOUTER (PA1) (CL1,0,0,0) pour MEP

MEP + LASER 3.02.89 GH/PC

Corr. MEP

Insertion des tableaux (tabulateurs 2) 3.02.89 PC

BAT 20.02.89 PV

MAJ s/disquettes 28.03.89 CD

