



# Wireless-Equipped COOLPIX Cameras


1/3

Users of wireless-equipped COOLPIX cameras can upload pictures to a computer over a wireless LAN.

## Starting the Wireless Camera Setup Utility

The Wireless Camera Setup Utility configures the camera and computer so that pictures can be uploaded over a wireless network.

To start the Wireless Camera Setup Utility, select **Camera Control > Wireless camera Setup Utility** from the PictureProject **File** menu.

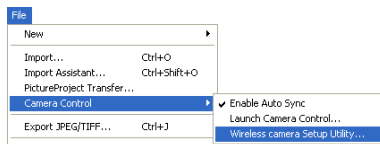

If **Enable Auto Sync** is selected, pictures uploaded using the camera **Shoot & Transfer** option will automatically be selected in the picture list in organize mode.

## Wireless Network Settings

For more information on wireless network settings, consult the on-line help for the Wireless Camera Setup Utility or the documentation provided with your wireless LAN adapter or access point, computer, or camera. See the camera manual for information on the camera wireless transfer function.

## Wireless Transfer

Pictures can be uploaded directly from the camera or using PictureProject Transfer.

### Transferring Pictures from the Camera

If an option other than **PC Mode** is selected in the camera wireless menu, pictures can be uploaded to the computer without first starting PictureProject.

- 1 Turn on the computer and log on.
- 2 Set the camera to wireless transfer mode.
- 3 Select the computer from the profile list in the camera "CHOOSE PROFILE" menu.
- 4 Select an option other than **PC Mode** in the wireless menu and begin transfer. Pictures are uploaded to the folder selected in the "Transfer Destination" tab of the PictureProject "Transfer Options" dialog.\*
- 5 PictureProject starts automatically when transfer is complete. Turn the camera off or select another mode.

\* Defaults to "My Documents\My Pictures\PictureProject" (Windows) or "User/(user name)/Pictures/PictureProject" (Macintosh).





# Wireless-Equipped COOLPIX Cameras


2/3


If **Shoot & Transfer** is selected in the camera wireless menu, pictures can be displayed in a PictureProject slide show as they are taken.


1 Choose **Shoot & Transfer** in the camera wireless menu.

2 Start PictureProject and click **Organize**.

3 Go to **File > Camera Control** and enable **Enable Auto Sync**.

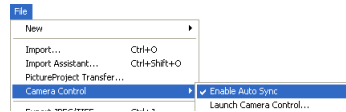

4 Select the destination collection and click the  (**SlideShow**) button to view slide show settings. Select **Repeat slideshow** and click **OK**.

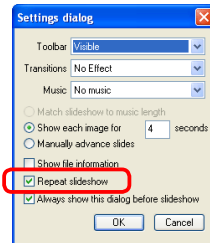

5 Take pictures. The pictures will be transferred to the computer and automatically added to the slide show.

## "Shoot & Transfer"

Pictures taken with **Off** selected for **Save Images** in the camera Shoot & Transfer menu are saved to the computer using file names consisting of "STCN" followed by a four-digit number (e.g., "STCN0001.JPG").

## *Transferring Pictures Using PictureProject Transfer*

PictureProject Transfer can be used to transfer existing pictures over a wireless network. [Transfer settings](#) are the same as when the computer and camera are connected via a USB cable in PTP mode.

1 Turn on the computer and log on.

2 Set the camera to wireless transfer mode.

3 Select the computer from the profile list in the camera "CHOOSE PROFILE" menu.

4 Select **PC Mode** in the camera wireless menu. At default settings, PictureProject Transfer will start automatically when a wireless connection is established.

5 Click the **Transfer** button in PictureProject Transfer to copy existing pictures from the camera to the computer. When transfer is complete, turn the camera off or select another mode.

## PC Mode

The camera transfer button can not be used to transfer pictures in PC mode.





# Wireless-Equipped COOLPIX Cameras

3/3

## *Transferring Pictmotion Movies (Windows Only)*

If PictureProject is installed, Pictmotion movies created with Pictmotion-compatible cameras can be transferred to Windows computers (both PictureProject and the Wireless Camera Setup Utility are included on the installer CD supplied with Pictmotion-compatible cameras, and can be installed using the [Easy Install](#) option). During transfer, Pictmotion movies are converted into videos suitable for computer playback. To transfer Pictmotion movies:

- **Transferring Pictmotion Movies from the Camera:** If **Easy Transfer (PM)** is selected in the camera wireless menu and the camera contains Pictmotion movies that have not already been transferred to the computer, the movies will be converted to video format and copied to the folder selected in the “Transfer Destination” tab of the PictureProject “Transfer Options” dialog. A progress dialog will be displayed; click **Cancel** to exit before transfer is complete.
- **Transferring Pictmotion Movies Using PictureProject:** If **PC Mode** is selected in the camera wireless menu and the camera contains Pictmotion movies, PictureProject will display a [Pictmotion conversion dialog](#) during transfer. Choose how Pictmotion movies will be converted to video format for display on the computer.

