

Color Page

Changes the amount of red that's added to the image during the scan.

Changes the amount of green that's added to the image during the scan.

Changes the amount of blue that's added to the image during the scan.

Changes the brightness of the scanned image. If you find that a scanned image is too dark or too light, you can change the brightness to balance the final image.

Changes the balance of highlight and shadow in the image.

Returns all of the slider bars to their original positions of 128.

Sets all of the slider bars to their last stored positions. The positions of the slider bars are stored each time you exit from Corel TWAIN.

Select Page

Selects the Photo CD image you wish to scan. Choose the image by highlighting the file name in the list and selecting the Pre-scan or Scan buttons. If no files appear in the list box, select a new directory from the Drive and Directory list box.

If you enable [ADF](#) on the Custom Page, you can select a group of images to scan.

Displays the complete path of the selected image.

Indicates the index number of the image. You can select images by clicking the filename or by typing the index number of the image in this box.

Scans the Photo CD image without any modification to the color of the image. Typically, some color balancing is performed automatically on a Photo CD image to give it a more accurate color tone. If you enable the Show Original Colors check box, this balancing is disabled.

Scans the Photo CD image and displays only the brightest and darkest colors in the photograph. Only a small number of colors are used in the image. Much of the image's detail is removed.

Contact Page

Forces Corel TWAIN to re-read the thumbnails of all the images in the selected directory.

Selects all the thumbnail images displayed on the contact sheet.

Deselects all the thumbnail images that are currently selected on the contact sheet.

Making image adjustments



Adjusting images

There are three pages that you can use to adjust images:

Select Page

The Select page displays several parameters that allow you to emulate the scanning process by reading an image from a Corel Professional Photos CD-ROM or a Kodak Photo CD.

The Color Correction settings let you choose whether you want to display the image using its original colors or only its brightest and darkest colors.

Color Page

The Color page lets you modify the color, brightness, and contrast of the scanned image. Changes to the settings affect both the final scan and preview image.

The Red, Green, and Blue slider bars allow you to adjust the percentages of color added to an image during a scan. The Brightness slider bar allows you lighten or darken an image. The Contrast slider bar lets you adjust the balance of shadows and highlights in the scan.

Contact Page

The Contact page displays thumbnail representations of a group of Photo CD images in a manner similar to a contact sheet of 35mm photographs. The contact sheet can assist you in selecting the image you wish to scan.


You can select the images by clicking their thumbnails. You can select as many images as you wish. When you select an image, the photo is highlighted. To deselect it, click the thumbnail a second time.



Previewing a Photo CD-ROM image

1. Choose the Select page.
2. Choose the drive letter of the file.
3. Choose the filename.
4. Click Prescan.

{button ,AL("PRC Making image adjustments;",0,"Defaultoverview",)} [Related Topics](#)



Adjusting colors

1. Choose the Color page.
2. Set the Red, Green and Blue sliders to the desired values.



Tip

- To see the result of your changes, click Prescan.

{button ,AL('PRC Making image adjustments;',0,"Defaultoverview",)} [Related Topics](#)



Adjusting contrast and brightness


1. Choose the Color page.
2. Set the Contrast and Brightness sliders to the desired values.



Tip

- To see the result of your changes, click Prescan.

{button ,AL('PRC Making image adjustments;',0,"Defaultoverview",)} [Related Topics](#)

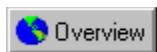

Previewing a contact sheet

1. Choose the Contact page.
2. Click Refresh.
3. Click the desired image. You can select any number of images.
4. Click Prescan.

{button ,AL('PRC Making image adjustments;',0,"Defaultoverview",)} Related Topics

