



# One Coat Stucco System Details

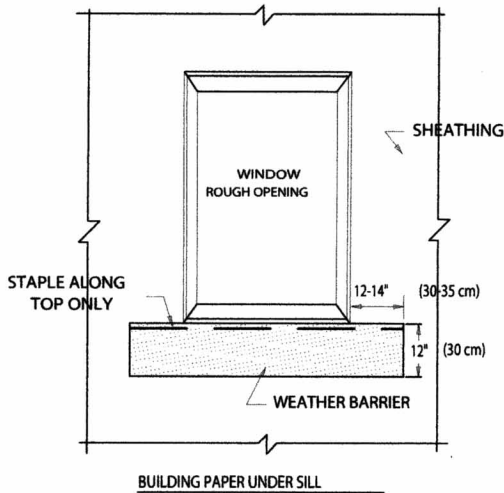

STEP 1


Cut weather barrier to approximate size shown and staple into place at bottom of the rough opening. **IMPORTANT!** weather barrier should only be stapled along the top edge.

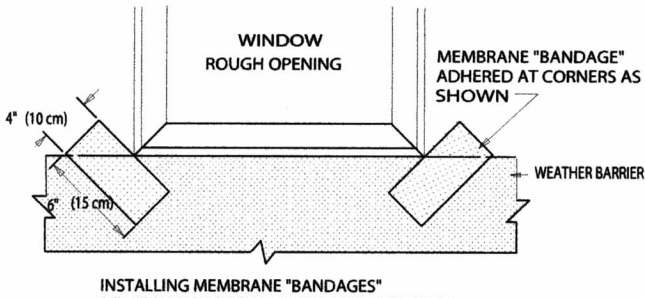

STEP 2

Cut "bandages" to approximate size indicated.


Peel protective backer from membrane and install diagonally at sill corners as shown. Sheathing or weather barrier should not be visible at the corners of the rough opening.

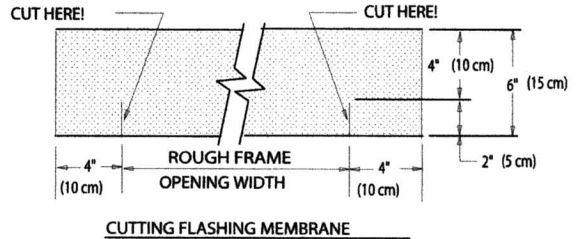

STEP 3

Cut a piece of flashing membrane 8" (20 cm) longer than the rough opening width, make two small cuts 2" (5 cm) long through the membrane as shown.

NOTE: 2" x 6" (5 x 15 cm) framing requires 12" (30 cm) wide flashing membrane. Cuts made in the membrane should be 6" (15 cm) long.

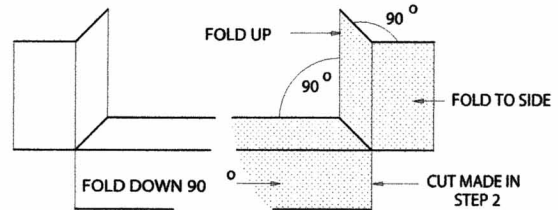

STEP 4

Fold membrane to conform with rough opening. Peel protective backer from membrane, to expose adhesive.

Note: Weather barrier and flashing membrane by others.