Rainbow™ Color Proofing System

Changing the Ink Ribbon

For detailed instructions, refer to the 3M *Rainbow* Color Proofing System Operator's Guide, Section 5.

Before you begin, turn off the Rainbow proofer.

1. Lift ink ribbon tray up and out of proofer.

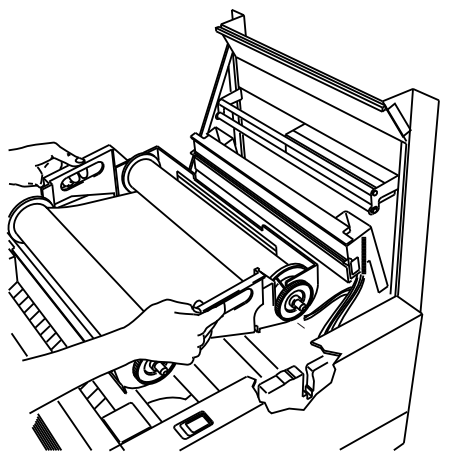

2. Remove the four end caps from used ribbon. Take used ribbon out of tray. Unwrap new ribbon and place in tray.

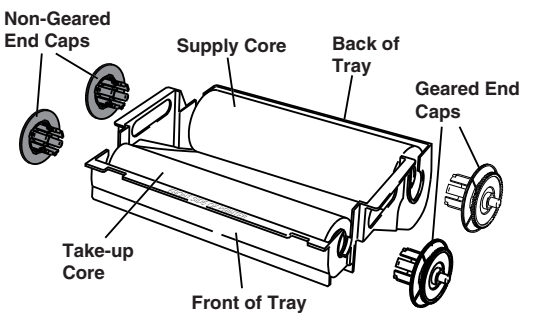

3. Lift right side of supply core. Insert green geared end cap into open end. Lift left side of supply core. Insert black non-geared end cap into open end.

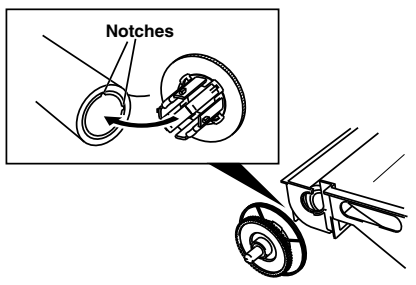

Make sure all notches align properly and end caps are firmly seated.

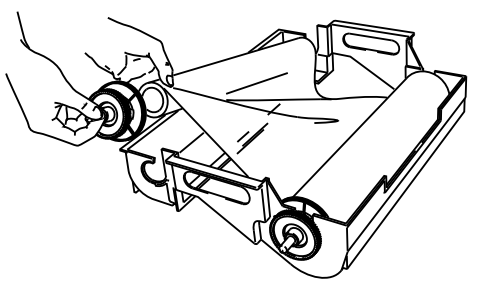

4. Lift right side of take-up core. Insert green geared end cap. Lift left side of take-up core. Insert gray non-geared end cap.

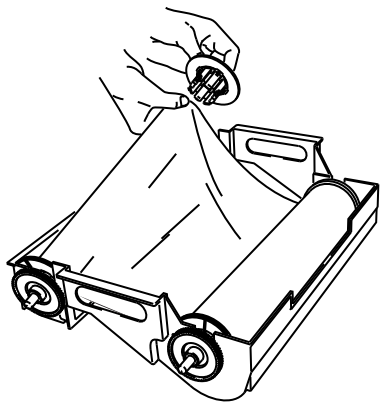

5. Press all cores firmly in place in the ink ribbon tray. Push down on end caps to ensure proper seating. (Place the ink ribbon tray in proofer.) Gently press down until end caps click in place.

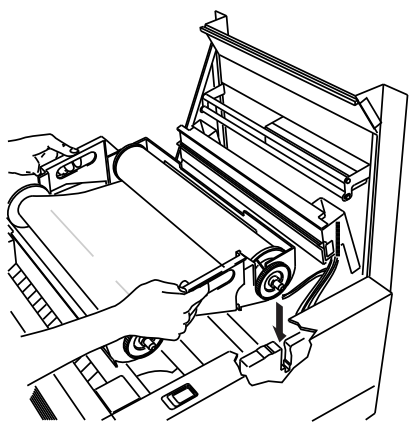

6. Turn end caps of front take-up core toward front of proofer two revolutions. Close proofer cover.

© 3M 1995 PPS2256/9510