

# DVB INTERACTION CHANNEL FOR CABLE TV DISTRIBUTION SYSTEM (CATV)

DVB DOCUMENT A023 Rev. 1 June 1999

Reproduction of the document in whole or in part without prior permission of the DVB Project Office is forbidden.

# Contents

1 Scope	6
2 Normative References	6
3 Abbreviations	6
4 Reference Model for System Architecture of Narrowband Interaction Channels in a Broadcastir	ng
Scenario (Asymmetric Interactive Services)	
4.1 Protocol Stack Model	6
4.2 System Model	6
5 DVB Interaction Channel Specification for CATV Networks	6
5.1 System Concept	6
5.1.1 Out-Of-Band / In-Band Principle	
5.1.2 Spectrum Allocation	
5.1.3 FDM/TDMA Multiple Access	
5.1.4 Bit Rates and Framing	
5.2 Lower Physical Layer Specification	
5.2.1 Forward Interaction Path (Downstream OOB)	
5.2.1.1 Frequency Range (Downstream OOB)	٥
5.2.1.2 Modulation and Mapping (Downstream OOB)	 6
5.2.1.4 Randomiser (Downstream OOB)	
5.2.1.5 Bit Rate (Downstream OOB)	
5.2.1.6 Receiver Power Level (Downstream OOB)	6
5.2.1.7 Summary (Downstream OOB)	
5.2.1.8 Bit Error Rate Downstream OOB (Informative)	
5.2.2 Forward Interaction Path (Downstream IB)	
5.2.3 Return Interaction Path (Upstream)	
5.2.3.1 Frequency Range (Upstream)	
5.2.3.2 Modulation and Mapping (Upstream)	
5.2.3.3 Shaping Filter (Upstream)	
5.2.3.4 Randomiser (Upstream)	
5.2.3.5 Bit Rate (Upstream)	6
5.2.3.6 Transmit Power Level (Upstream)	
5.2.3.7 Upstream Burst Power and Timing Profiles	
5.2.3.8 Interference (Spurious) Suppression	
5.2.3.9 Summary (Upstream)	
5.2.3.10 Packet Loss Upstream (Informative)	
5.2.3.11 Maximum Cable Delay	
5.3 Framing	
5.3.1 Forward Interaction Path (Downstream OOB)	
5.3.1.1 Signaling Link Extended Superframe Framing Format	
5.3.1.2 Frame overhead	
5.3.1.3 Payload Structure	
5.3.2 Forward Interaction Path (Downstream IB)	
5.3.2.1 IB Signalling MPEG2-TS Format (MAC Control Message) 5.3.2.2 Frequency of IB Signalling Information	
5.3.3 Return Interaction Path (Upstream)	
5.3.3.1 Slot Format	
5.3.4 Minimum Processing Time	
5.4 Slot Timing Assignment	
5.4.1 Downstream Slot Position Reference (Downstream OOB)	6
5.4.2 Downstream Slot Position Reference (Downstream IB)	
5.4.3 Upstream Slot Positions	
5.4.3.1 Rate 256 kbit/s	
5.4.3.2 Rate 1.544 Mbit/s	
5.4.3.3 Rate 3.088 Mbit/s	
5.4.3.4 Rate 6.176 Mbit/s	

	5.4.4 Slot Position Counter	
5.5 MAC	Functionality	6
	5.5.1 MAC Reference Model	6
	5.5.2 MAC Concept	
	5.5.2.1 Relationship Between Higher Layers and MAC Protocol	
	5.5.2.2 Relationship Between Physical Layer and MAC Protocol	
	5.5.2.3 Relationship Between Physical Layer Slot Position Counter and	U
		_
	MAC Slot Assignment	
	5.5.2.4 Access Modes (Contention / Ranging / Fixed rate / Reservation)	
	5.5.2.5 MAC Error Handling Procedures	
	5.5.2.6 MAC Messages in the Mini Slots	6
	5.5.2.7 MAC Message Format	
	5.5.3 MAC Initialization and Provisioning	
	5.5.3.1 <mac> Provisioning Channel Message (Broadcast OOB</mac>	Ŭ
	Downstream)	۵
	5.5.3.2 <mac> Default Configuration Message (Broadcast Downstream)</mac>	
	5.5.4 Sign On and Calibration	
	5.5.4.1 <mac> Sign-On Request Message (Broadcast Downstream)</mac>	
	5.5.4.2 <mac> Sign-On Response Message (Upstream Ranging)</mac>	6
	5.5.4.3 <mac> Ranging and Power Calibration Message (Singlecast</mac>	
	Downstream)	6
	5.5.4.4 <mac> Ranging and Power Calibration Response Message</mac>	Ĭ
	(Upstream Ranging or reserved)	۵
	5.5.4.5 <mac> Initialization Complete Message (Singlecast</mac>	U
	5.5.4.5 < MAC> Initialization Complete Message (Singlecast	_
	Downstream)	
	5.5.5 Connection Establishment	
	5.5.5.1 Establishment of the First (Initial) Connection	
	5.5.5.2 Establishment of Additional Connections	6
	5.5.6 Connection Release	6
	5.5.7 Fixed Rate Access	
	5.5.8 Contention Based Access	
	5.5.9 Reservation Access	
	5.5.10 MAC Link Management	
	5.5.10.1 Power and Timing Management	
	5.5.10.2 TDMA Allocation Management	6
	5.5.10.3 Channel Error Management	6
	5.5.10.4 Link Managment Messages	6
5.6 Minis	slots	6
	5.6.1 Carrying Minislots	6
	5.6.2 Minislot framing structure	6
	5.6.3 Contention resolution for minislots	
F 7 Coo.		
5.7 Sect	ırity (optional)	
	5.7.1 Cryptographic primitives	
	5.7.1.1 Public key exchange	
	5.7.1.2 Hashing	6
	5.7.1.3 Encryption	6
	5.7.1.4 Pseudo-random numbers	6
	5.7.2 Main Key Exchange, MKE	6
	5.7.3 Quick Key Exchange, QKE	6
	5.7.4 Explicit Key Exchange, EKE	6
	5.7.5 Key derivation	6
	5.7.6 Data stream processing	
	5.7.6.1 Payload streams	
	5.7.6.2 Data encryption	
	5.7.6.3 Encryption flags	
	5.7.6.4 Chaining and initialisation vector	6
	5.7.7 Security Establishment	
	5.7.8 Persistent state variables	
	5.7.8.1 Guaranteed delivery	
	5.7.9 Security MAC Messages	
	5.7.9.1 <mac>Security Sign-On (Single-cast Downstream)</mac>	
	5.7.3.1 SWACS County Sign On Departure (Unatroom)	O
	5.7.9.2 <mac>Security Sign-On Response (Upstream)</mac>	
	5.7.9.3 <mac>Main Key Exchange (Single-cast Downstream)</mac>	О

5.7.9.4 <mac>Main Key Exchange Response (Upstream)</mac>	
5.7.9.5 <mac>Quick Key Exchange (Single-cast Downstream)</mac>	6
5.7.9.6 <mac>Quick Key Exchange Response (Upstream)</mac>	
5.7.9.7 <mac>Explicit Key Exchange (Single-cast Downstream)</mac>	
5.7.9.8 <mac>Explicit Key Exchange Response (Upstream)</mac>	
5.7.9.9 <mac>Wait (Upstream)</mac>	6
6 Interactive Cable STB / Cable Data Modem Mid Layer Protocol	6
6.1 Direct IP	6
6.1.1 Framing	
6.1.1.1 Upstream and OOB Downstream	
6.1.1.2 IB Downstream	
6.1.2 Addressing	
6.1.2.1 IP Broadcast and Multicast from STB/NIU to INA	
6.1.2.2 IP Broadcast and Multicast from INA to STB/NIU	6
6.1.3 IP Address Assignment	6
6.1.4 INA Interfaces (Informative)	
6.1.5 NIU/STB Interfaces (Informative)	
6.2 Ethernet MAC Bridging	
6.2.1 Framing	
6.2.1.1 Upstream and OOB Downstream	
6.2.1.2 IB Downstream	
6.2.2 Addressing	
6.3 PPP	
6.3.1 Framing	
6.3.1.1 Upstream and OOB Downstream	
6.3.1.2 IB Downstream	6
6.3.2 Addressing	6
6.3.3 IP Address Assignment	
6.3.4 Additional IP addresses	
6.3.5 Security	
6.3.6 INA Interfaces (Informative)	
0.3.0 INA Interfaces (Informative)	0
6.3.7 NIU/STB Interfaces (Informative)	ხ
7 (Informative Note A) MAC State Transitions and Time Outs	6
7.1 Ranging and Calibration	6
7.2 Connection Establishment	
7.3 Connection Release	
7.4 Reservation Process	
7.5 Resource Request	
7.6 Recalibration	
7.7 Reprovision Message	6
7.8 Transmission Control Message	
7.9 Status Request Message	6
7.10 Idle Message	
9 (Informative Note B) Bibliography	c
8 (Informative Note B) Bibliography	٥
9 (Informative Note C) History	6
,	

#### **Foreword**

This draft European Telecommunication Standard (ETS) has been produced by the Joint Technical Committee (JTC) of the European Broadcasting Union (EBU), Comité Européen de Normalisation ELECtrotechnique (CENELEC) and the European Telecommunications Standards Institute (ETSI), and is now submitted for the Public Enquiry phase of the ETSI standards approval procedure.

NOTE:

The EBU/ETSI JTC was established in 1990 to co-ordinate the drafting of ETSs in the specific field of broadcasting and related fields. Since 1995 the JTC became a tripartite body by including in the Memorandum of Understanding also CENELEC, which is responsible for the standardization of radio and television receivers. The EBU is a professional association of broadcasting organisations whose work includes the co-ordination of its Members' activities in the technical, legal, programme-making and programme-exchange domains. The EBU has Active Members in about 60 countries in the European Broadcasting Area; its headquarters is in Geneva \*.

European Broadcasting Union
 Case Postale 67
 CH-1218 GRAND SACONNEX (Geneva)
 Switzerland

Tel: +41 22 717 21 11 Fax: +41 22 717 24 81

#### **Proposed transposition dates**

Date of latest announcement of this ETS (doa): 3 months after ETSI publication

Date of latest publication of new National Standard

or endorsement of this ETS (dop/e): 6 months after doa

Date of withdrawal of any conflicting National Standard (dow): 6 months after doa

# 1 Scope

This European Telecommunication Standard (ETS) is the baseline specification for the provision of the interaction channel for CATV networks.

It is not intended to specify a return channel solution associated to each broadcast system because the inter-operability of different delivery media to transport the return channel is desirable.

The solutions provided in this ETS for interaction channel for CATV networks are a part of a wider set of alternatives to implement interactive services for Digital Video Broadcasting (DVB) systems.

#### 2 Normative References

This ETS incorporates by dated and undated reference, provisions from other publications. These normative references are cited at the appropriate places in the text and the publications are listed hereafter. For dated references, subsequent amendments to or revisions of any of these publications apply to this ETS only when incorporated in it by amendment or revision. For undated references the latest edition of the publication referred to applies.

[1]	ITU-T Recommendations: "V.21, V.22, V.22bis, V.23, V.25, V.32, V.32bis, V.34 and V.42".
[2]	EN 50201: 1997, "Interfaces for DVB-IRDs".
[3]	ETS 300 802: "DVB specification - Network Independent Protocols for interactive Services (Edition 1, November 1997)".
[4]	EN 50083 "Cabled Distribution Systems for television and sound signals".
[5]	ETS 300 429: "Digital Broadcasting systems for television, sound and data services; Framing structure, channel coding and modulation for cable systems (DVB-C spec)".
[6]	ETS 300 421: "Digital Broadcasting systems for television, sound and data services; Framing structure, channel coding and modulation for 11/12 satellite services. (DVB-S spec)".
[7]	ITU Recommendation I.361
[8]	ITU-T Recommendation I.363
[9]	American National Standard X3.92-1981: Data Encryption Standard
[10]	American National Standard X3.106-1983: Cipher Block Chaining
[11]	IETF RFC2104, Krawczyk, et. al: "HMAC: Keyed-Hashing for Message
[12]	EN 301 192 Digital Video Broadcasting (DVB); DVB specification for data broadcasting
[13]	IETF RFC 1483 Multiprotocol encapsulation over ATM adapt. layer 5
[14]	IETF RFC 2131 Dynamic host configuration protocol (DHCP)
[15]	IETF RFC 951 Bootstrap protocol (BOOTP)
[16]	IETF RFC 791 Internet protocol
[17]	ATMF UNI 3.1 ATM Forum User-Network Interface, Version 3.1
[18]	IETF RFC 2236 IGMP protocol

[19] Guidelines for the handling of ATM signals in DVB systems, DVB-TM-2066

Rev. 2 (November 6, 1998)

[20] ISO/IEC 8802-3 :1996 - Information Technology - Telecommunications and

information exchange between systems - Local and Metropolitan area networks -Part 3: Carrier sense multiple access with collission detection (CSMA/CD)

access method and physical sublayer specifications.

[21] ITU-T I.432 - B-ISDN user-network interface - Physical layer specification.

#### 3 Abbreviations

For the purposes of this ETS, the following abbreviations apply:

ATM Asynchronous Transfer Mode

BC Broadcast Channel
BRA Basic Rate Access

CATV Community Antenna TeleVision (System)

CBC Cipher Block Chaining Connection ID Connection Identificator

CM Cable Modem D-H Diffie-Hellman

DAVIC Digital Audiovisual Council
DCE Data Communication Equipment
DES Data Encryption Standard
DTE Data Termination Equipment

DTMF Dual Tone Multifrequency (dialling mode)

DVB Digital Video Broadcasting EKE Explicit Key Exchange

GSTN General Switched Telephone Network
HMAC Hash-based Message Authentication Code

IB In-Band

IC Interaction Channel

INA Interactive Network Adapter
IRD Integrated Receiver Decoder
ISDN Integrated Services Digital Network
IQ In-phase and Quadrature Components

IV Initialisation Vector

LFSR Linear Feedback Shift Register

LSB Least Significant Bit
MAC Media Access Control
MKE Main Key Exchange

MMDS Multi-channel Multi-point Distribution Systems

MPEG Moving Pictures Experts Group
MTU Maximum Transmission Unit
NIU Network Interface Unit
NSAP Network Service Access Point

OOB Out of Band

OSI Open Systems Interconnection

PID Packet Identifier, defined by ISO/IEC 13818 (MPEG-2)

PM Pulse Modulation

PRNG Pseudo-Random Number Generator
PSTN Public Switched Telephone Network
QAM Quadrature Amplitude Modulation

QKE Quick Key Exchange QoS Quality of Service

QPSK Quaternary Phase Shift Keying Reservation ID Reservation Identificator SHA-1 Secure Hash Algorithm 1

SMATV Satellite Master Antenna Television

STB Set Top Box STU Set Top Unit

TDMA Time Division Multiplex Access

TS Transport Stream

VCI ATM Virtual Channel Identification, defined by ITU-T I.363
VPI ATM Virtual Path Identification, defined by ITU-T I.363

# 4 Reference Model for System Architecture of Narrowband Interaction Channels in a Broadcasting Scenario (Asymmetric Interactive Services)

#### 4.1 Protocol Stack Model

For asymmetric interactive services supporting broadcast to the home with narrowband return channel, a simple communications model consists of the following layers:

physical layer: Where all the physical (electrical) transmission parameters are defined.

**transport layer:** Defines all the relevant data structures and communication protocols like data containers, etc.

**application layer:** Is the interactive application software and runtime environments (e.g. home shopping application, script interpreter, etc.).

A simplified model of the OSI layers was adopted to facilitate the production of specifications for these nodes. Figure 1 points out the lower layers of the simplified model and identifies some of the key parameters for the lower two layers. Following the user requirements for interactive services, no attempt will be made to consider higher layers in this ETS.

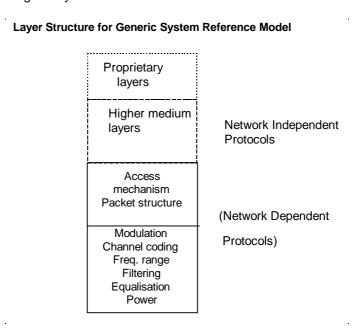


Figure 1: Layer structure for generic system reference model

This specification addresses the CATV network specific aspects only.

# 4.2 System Model

Figure 2 shows the system model which is to be used within DVB for interactive services.

In the system model, two channels are established between the Service provider and the User:

- **Broadcast channel (BC)**: A unidirectional broadband Broadcast Channel including video, audio and data. BC is established from the service provider to the users. It may include the Forward Interaction path.
- **Interaction channel (IC)**: A Bi-directional Interaction Channel is established between the service provider and the user for interaction purposes. It is formed by:
  - Return Interaction path (Return Channel): From the User to the Service Provider. It is
    used to make requests to the service provider or to answer questions. It is a narrowband
    channel. Also commonly known as return channel.
  - Forward Interaction path: From the service provider to the user. It is used to provide some sort of information by the service provider to the user and any other required communication for the interactive service provision. It may be embedded into the broadcast channel. It is possible that this channel is not required in some simple implementations which make use of the Broadcast Channel for the carriage of data to the user.

The user terminal is formed by the Network Interface Unit (NIU) (consisting of the Broadcast Interface Module (BIM) and the Interactive Interface Module (IIM)) and the Set Top Unit (STU). The user terminal provides interface for both broadcast and interaction channels. The interface between the user terminal and the interaction network is via the Interactive Interface Module.

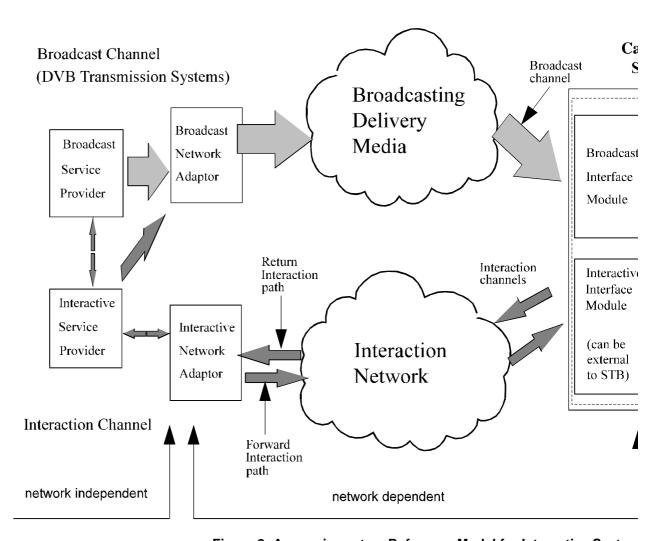


Figure 2: A generic system Reference Model for Interactive System

#### 5 DVB Interaction Channel Specification for CATV Networks

The CATV infrastructures can support the implementation of the Return Channel for interactive services suitable for DVB broadcasting systems.

CATV can be used to implement interactive services in the DVB environment, providing a bi-directional communication path between the user terminal and the service provider.

#### 5.1 System Concept

The interactive system is composed of Forward Interaction path (downstream) and Return Interaction path (upstream). The general concept is to use downstream transmission from the INA to the NIUs to provide synchronisation and information to all NIUs. This allows the NIUs to adapt to the network and send synchronised information upstream.

Upstream transmission is divided into time slots which can be used by different users, using the technique of Time Division Multiple Access (TDMA). One downstream channel is used to synchronise up to 8 upstream channels, which are all divided into time slots. A counter at the INA is sent periodically to the NIUs, so that all NIUs work with the same clock. This gives the opportunity to the INA to assign time slots to different users.

Three major access modes are provided with this system. The first one is based on contention access, which lets users send information at any time with the risk to have a collision with other user's transmissions. The second and third modes are contention-less based, where the INA either provides a finite amount of slots to a specific NIU, or a given bit rate requested by a NIU until the INA stops the connection. These access modes are dynamically shared among time slots, which allows NIUs to know when contention based transmission is or is not allowed. This is to avoid a collision for the two contention-less based access modes.

Periodically, the INA will indicate to new users that they have the possibility to go through sign-on procedure, in order to give them the opportunity to synchronise their clock to the network clock, without risking collisions with already active users. This is done by leaving a larger time interval for new users to send their information, taking into account the propagation time required from the INA to the NIUs and back.

#### 5.1.1 Out-Of-Band / In-Band Principle

This interactive system is based either on out of band (OOB) or in-band (IB) downstream signalling. However, Set Top Boxes / Cable Modems do not need to support both systems.

In the case of OOB signalling, a Forward Interaction path is mandatory. This path is reserved for interactivity data and control information only. However, it is also possible to send higher bit rate downstream information through a DVB-C channel whose frequency is indicated in the forward information path.

In the case of IB signalling, the Forward Information path is embedded into the MPEG-2 TS of a DVB-C channel. Note that it is not mandatory to include the Forward Information path in all DVB-C channels.

Both systems can provide the same quality of service. However, the overall system architecture will differ between networks using IB Set Top Boxes / Cable Modems and OOB Set Top Boxes / Cable Modems. Note also that both types of systems may exist on the same networks under the condition that different frequencies are used for each system.

#### 5.1.2 Spectrum Allocation

Figure 3 indicates a possible spectrum allocation. Although not mandatory, a guideline is provided to use the following preferred frequency ranges, 70-130 MHz and/or 300-862 MHz for the Forward Interaction path (downstream OOB) and 5-65 MHz for the Return Interaction path (upstream), or parts thereof. To avoid filtering problems in the bidirectional RF amplifiers and in the Set Top Boxes / Cable Modems, the upper limit 65 MHz for the upstream flow shall not be used together with the lower limit 70 MHz for the downstream flow in the same system. Furthermore, to avoid intermediate frequency impairments of Set Top Boxes / Cable Modems as well as analogue receivers in the same network, it could be necessary to

leave out some parts of the range 5..65 MHz which includes the intermediate frequency ranges of these appliances.

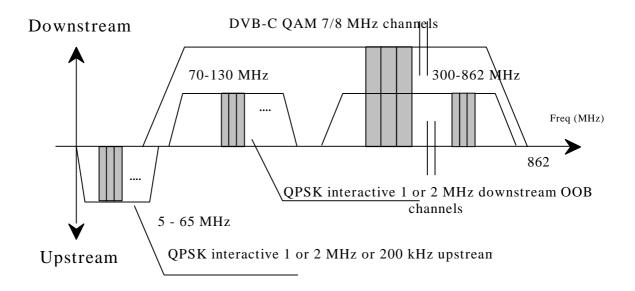


Figure 3: DVB preferred frequency ranges for CATV interactive systems

#### 5.1.3 FDM/TDMA Multiple Access

A multiple access scheme is defined in order to have different users share the same transmission media. Downstream information is sent broadcast to all users of the networks. Thus, an address assignment exists for each user which allows the INA to send information singlecast to one particular user. Two addresses are stored in the Set Top Boxes / Cable Modems in order to identify users on the network:

MAC address: It is a 48-bit value representing the unique MAC address of the NIU. This MAC

address may be hard coded in the NIU or be provided by external source.

NSAP address: It is a 160-bit value representing a network address. T his address is provided

by higher layers during communication.

Upstream information may come from any user in the network and must therefore also be differentiated at the INA using the set of addresses defined above.

Upstream and OOB downstream channels are divided into separate channels of 1 or 2 MHz bandwidth for downstream and 1, 2 or 4 MHz or 200 kHz for upstream. Each downstream channel contains a synchronisation frame used by up to 8 different upstream channels, whose frequencies are indicated by the Media Access Control (MAC) protocol.

Within upstream channels, users send packets with TDMA type access. This means that each channel is shared by many different users, who can either send packets with a possibility of collisions when this is allowed by the INA, or request transmission and use the packets assigned by the INA to each user specifically. Assuming each channel can therefore accommodate thousands of users at the same time, the upstream bandwidth can easily be used by all users present on the network at the same time.

The TDMA technique utilises a slotting methodology which allows the transmit start times to be synchronised to a common clock source. Synchronising the start times increases message throughput of this signalling channel since the message packets do not overlap during transmission. The period between sequential start times are identified as slots. Each slot is a point in time when a message packet can be transmitted over the signalling link.

The time reference for slot location is received via the downstream channels generated at the Delivery System and received simultaneously by all set-top units. Note that this time reference is not sent in the

same way for OOB and IB signalling. Since all NIU's reference the same time base, the slot times are aligned for all NIU's. However, since there is propagation delay in any transmission network, a time base ranging method accommodates deviation of transmission due to propagation delay.

Since the TDMA signalling link is used by NIUs that are engaged in interactive sessions, the number of available message slots on this channel is dependent on the number of simultaneous users. When messaging slots are not in use, an NIU may be assigned multiple message slots for increased messaging throughput. Additional slot assignments are provided to the NIU from the downstream signalling information flow.

There are different access modes for the upstream slots:

- reserved slots with fixed rate reservation (Fixed rate Access: the user has a reservation of o ne or several timeslots in each frame enabling, e.g. for voice, audio)
- reserved slots with dynamic reservation (Reservation Access: the user sends control information announcing his demand for transmission capacity. He gets grants for the use of slots)
- contention based slots (these slots are accessible for every user. Collision is possible and solved by a contention resolution protocol )
- ranging slots (these slots are used upstream to measure and adjust the time delay and the power).

These slots may be mixed on a single carrier to enable different services on one carrier only. If one carrier is assigned to one specific service, only those slot types will be used which are needed for this service.

#### 5.1.4 Bit Rates and Framing

For the interactive downstream OOB channel, a transmission bit rate of 1.544 Mbit/s or 3.088 Mbit/s may be used. The support of 3.088 Mbit/s is mandatory, of 1.544 Mbit/s is optional for both INA and NIU. For downstream IB channels, no other constraints than those specified in the DVB-C specifications exist, but a guideline is to use rates multiples of 8 kbit/s.

Downstream OOB channels continuously transmit a frame based on T1 type framing, in which some information is provided for synchronisation of upstream slots. Downstream IB channels transmit some MPEG-2 TS packets with a specific PID for synchronisation of upstream slots (at least one packet containing synchronization information must be sent in every period of 3ms).

For upstream transmission, the INA can indicate four types of transmission rates to users, specifically 6.176 Mbit/s, 3.088 Mbit/s, 1.544 Mbit/s and 256 kbit/s. The support of 3.088 Mbit/s is mandatory, of other rates is optional for both INA and NIU. The INA is responsible of indicating which rate may be used by NIUs.

Upstream framing consists of packets of 512 bits (256 symbols) which are sent in a bursty mode from the different users present on the network. The upstream slot rates are 12000 upstream slots when the upstream transmission bit rate is 6.176 Mbit/s, 6000 upstream slots/s when the upstream transmission bit rate is 3.088 Mbit/s, 3000 upstream slots/sec when the upstream transmission bit rate is 1.544 Mbit/s and 500 upstream slots/sec when the upstream transmission bit rate is 256 kbit/s.

# 5.2 Lower Physical Layer Specification

In this sub-clause, detailed information is given on the lower physical layer specification. Figure 4 and Figure 5 show the conceptual block diagrams for implementation of the present specification.

#### Cable NIU

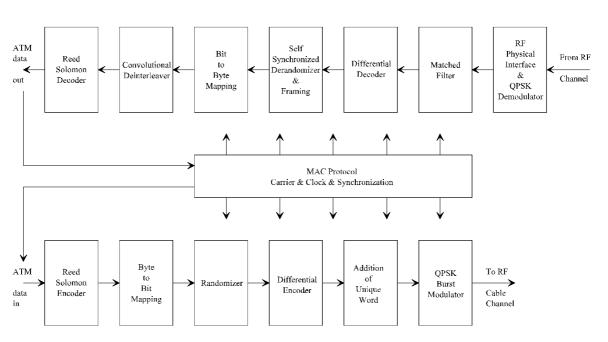


Figure 4: Conceptual Block Diagram for the NIU OOB Transceiver

#### Cable Head-end

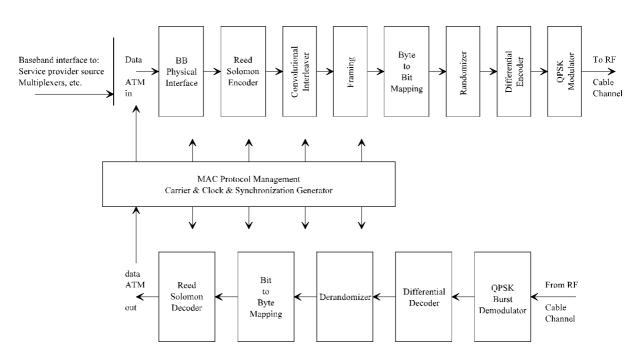


Figure 5: Conceptual Block Diagram for the OOB Head-End Transceiver

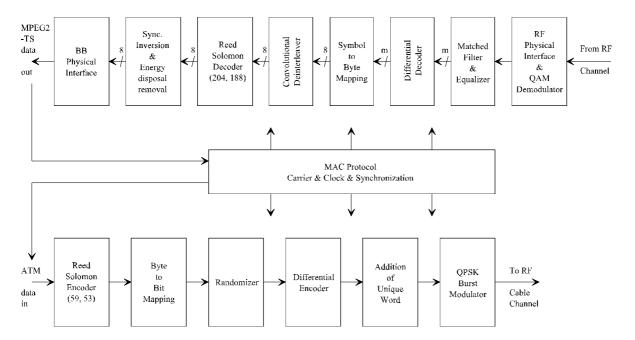


Figure 6: Conceptual Block Diagram for the IB NIU Transceiver

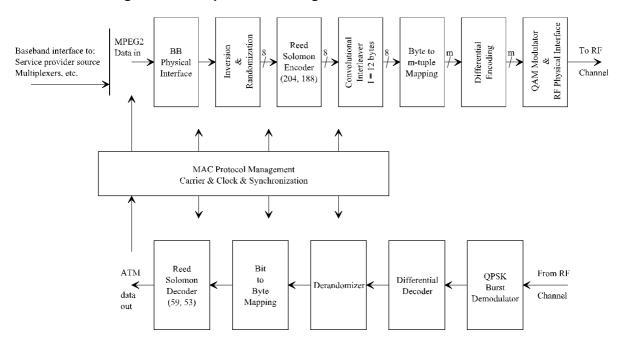


Figure 7: Conceptual Block Diagram for the IB Head-End Transceiver

#### 5.2.1 Forward Interaction Path (Downstream OOB)

# 5.2.1.1 Frequency Range (Downstream OOB)

Refer to chapter 5.1.2.

#### 5.2.1.2 Modulation and Mapping (Downstream OOB)

QPSK modulation is used as a means of encoding digital information over wireline or fiber transmission links. The method is a subset of Phase Shift Keying (PSK) which is a subset of Phase Modulation (PM). Specifically QPSK is a four level use of digital phase modulation (PM). Quadrature signal representations involve expressing an arbitrary phase sinusoidal waveform as a linear combination of a cosine wave and a sine wave with zero starting phases.

QPSK systems require the use of differential encoding and corresponding differential detection. This is a result of the receivers having no method of determining if a recovered reference is a sine reference or a cosine reference. In addition, the polarity of the recovered reference is uncertain.

Differential encoding transmits the information in encoded phase differences between the two successive signals. The modulator processes the digital binary symbols to achieve differential encoding and then transmits the absolute phases. The differential encoding is implemented at the digital level.

The differential encoder shall accept bits A, B in sequence, and generate phase changes as follows:

Table 1: Phase changes associated with bit A, B

Α	В	Phase Change
0	0	none
0	1	+ 90° 180°
1	1	180°
1	0	- 90°

In serial mode, A arrives first. The outputs I, Q from the differential encoder map to the phase states as in Figure 8.

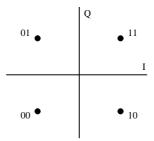


Figure 8: Mapping for the QPSK constellation (downstream OOB)

The phase changes can also be expressed by the following formulas (assuming the constellation is mapped from I and Q as shown in 5.2.2.2):

$$\begin{cases} A_k = \overline{(I_{k-1} \oplus Q_{k-1})} \times (Q_{k-1} \oplus Q_k) + \overline{(I_k \oplus Q_{k-1})} \times (I_k \oplus I_{k-1}) \\ B_k = \overline{(I_{k-1} \oplus Q_{k-1})} \times (I_{k-1} \oplus I_k) + \overline{(I_{k-1} \oplus Q_k)} \times (Q_k \oplus Q_{k-1}) \end{cases},$$

where k is the time index.

I/Q amplitude imbalance shall be less than 1.0 dB, and phase imbalance less than 2.0°.

#### 5.2.1.3 Shaping Filter (Downstream OOB)

The time-domain response of a square-root raised-cosine pulse with excess bandwidth parameter  $\alpha$  is given by:

$$g(t) = \frac{\sin\left[\frac{\mathbf{p}t}{T}(1-\mathbf{a})\right] + \frac{4\mathbf{a}t}{T}\cos\left[\frac{\mathbf{p}t}{T}(1+\mathbf{a})\right]}{\frac{\mathbf{p}t}{T}\left[1 - \left(\frac{4\mathbf{a}t}{T}\right)^{2}\right]}$$

where T is the symbol period.

The output signal shall be defined as

$$S(t) = \sum_{n} [I_n \times g(t - nT) \times \cos(2\mathbf{p}f_c t) - Q_n \times g(t - nT) \times \sin(2\mathbf{p}f_c t)]$$

with  $I_n$  and  $Q_n$  equal to  $\pm$  1, independently from each other, and f  $_c$  the QPSK modulator's carrier frequency.

The QPSK modulator divides the incoming bit stream so that bits are sent alternately to the in-phase modulator I and the out-of-phase modulator Q. These same bit streams appear at the output of the respective phase detectors in the demodulator where they are interleaved back into a serial bit stream.

The occupied bandwidth of a QPSK signal is given by the equation:

Bandwidth = 
$$\frac{f_b}{2}$$
 (1 +  $\alpha$ )

 $\alpha$  = excess bandwidth = 0,30

The Power Spectrum at the QPSK transmitter shall comply to the Power Spectrum Mask given in Table 2 and Figure 9. The Power Spectrum Mask shall be applied symmetrically around the carrier frequency.

**Table 2: QPSK Downstream Transmitter Power Spectrum** 

(f-f <sub>c</sub> )/f <sub>N</sub>	Power Spectrum
≤ <b>1</b> -α	0 ± 0.25 dB
at 1	-3 ± 0.25 dB
at 1+α	≤ -21 dB
≥ 2	≤ -40 dB

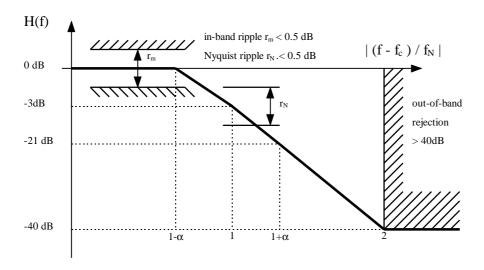


Figure 9: QPSK Downstream Transmitter Power Spectrum

QPSK systems require the use of differential encoding and corresponding differential detection. This is a result of the receivers having no method of determining if a recovered reference is a sine reference or a cosine reference. In addition, the polarity of the recovered reference is uncertain.

Differential encoding transmits the information in encoded phase differences between the two successive signals. The modulator processes the digital binary symbols to achieve differential encoding and then transmits the absolute phases. The differential encoding is implemented at the digital level.

#### 5.2.1.4 Randomiser (Downstream OOB)

After addition of the FEC bytes (seechapter 5.3.1), all of the 1.544 Mbit/s (or 3.088 Mbit/s) data is passed through a six register linear feedback shift register (LFSR) randomiser to ensure a random distribution of ones and zeroes. The output of the randomiser shall be the quotient of the input data multiplied by  $x^6$  and then divided by the generator polynomial  $x^6 + x^5 + 1$ . Byte/serial conversion shall be MSB first. A complementary self-synchronising de-randomiser is used in the receiver to recover the data.

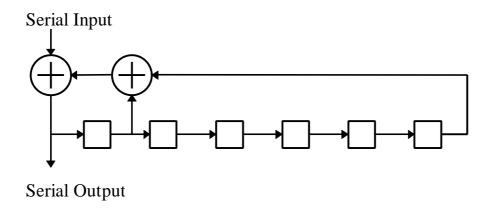


Figure 10: Example Randomiser

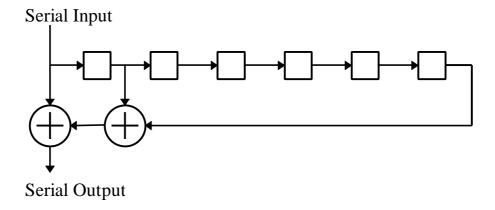


Figure 11: Example De-randomiser

#### 5.2.1.5 Bit Rate (Downstream OOB)

The bit rate shall be 1.544 Mbit/s or 3.088 Mbit/s. The support of 3.088 Mbit/s is mandatory, of 1.544 Mbit/s is optional for both INA and NIU. Symbol rate accuracy should be within +/- 50 ppm.

#### 5.2.1.6 Receiver Power Level (Downstream OOB)

The receiver power level shall be in the range 42 - 75 dBmicroV (RMS) (75  $\Omega$ ) at its input.

# 5.2.1.7 Summary (Downstream OOB)

Transmission Rate	1.544 Mbit/s for Grade A (optional for INA and NIU)	
Modulation	3.088 Mbit/s for Grade B (mandatory for INA and NIU)  Differentially encoded QPSK.	
Transmit Filtering	Filtering is alpha = 0,30 square root raised cosine	
Channel Spacing	1 MHz for Grade A	
Onamic opacing	2 MHz for Grade B	
Frequency Step Size	250 kHz (center frequency granularity)	
Randomization	After addition of the FEC bytes, all of the 1.544 Mbit/s (or 3.088 Mbit/s) data is passed through a six register linear feedback shift register (LFSR) randomiser to ensure a random distribution of ones	
	and zeroes. The generating polynomial is: $x^6 + x^5 + 1$ . Byte/serial conversion shall be MSB first. A complementary self-synchronizing de-randomiser is used in the	
	receiver to recover the data.	
Differential Encoding	The differential encoder shall accept bits A, B in sequence, and generate phase changes as follows:  A B Phase Change  0 0 none  0 1 + 90°  1 1 180°  1 0 - 90°	
Cianal Canatallation	In serial mode, A arrives first.	
Signal Constellation	The outputs I, Q from the differential encoder map to the phase states as in Figure 12.	
	Q	
	01 • 11	
	<u>I</u>	
	00 ● 10	
	   Figure 12: QPSK Constellation	
Frequency Range	recommended but not mandatory 70 to 130 MHz and/or 300 to 862	
. , ,	MHz	
Frequency Stability	+/- 50 ppm measured at the upper limit of the frequency range	
Symbol Rate Accuracy	+/- 50 ppm	
Carrier Suppression	> 30 dB	
I/Q Amplitude	< 1.0 dB	
Imbalance		
I/Q Phase Imbalance	< 2.0°	
Receive Power Level at the NIU input	42 - 75 dBmicroV (RMS) (75 Ω)	
	A common mask for both bit rates: 1.544 Mbit/s (Grade A) and 3.088 Mbit/s (Grade B) is given in Table 2 and Figure 9.	

# 5.2.1.8 Bit Error Rate Downstream OOB (Informative)

Bit error rate at the NIU should be less than 10  $^{-10}$  (after error correction, i.e. 1 error in 2 hours at 1.5 Mbit/s) at C/N > 20 dB for downstream transmission. C/N is the carrier-to-noise ratio relevant for the demodulation process (Nyquist bandwidth for white noise).

#### 5.2.2 Forward Interaction Path (Downstream IB)

The IB Forward Interaction Path must use a MPEG-2 TS stream with a modulated QAM channel as defined by ETS 300 429. Frequency range, channel spacing, and other lower physical layer parameters should follow that specification. The accuracy of the downstream frequency must be +/- 50 ppm.

#### 5.2.3 Return Interaction Path (Upstream)

#### 5.2.3.1 Frequency Range (Upstream)

The frequency range is not specified as mandatory although a guideline is provided to use the 5 -65 MHz. Frequency stability shall be in the range +/- 50 ppm measured at the upper limit of the frequency range.

#### 5.2.3.2 Modulation and Mapping (Upstream)

The unique word (CC CC 0D, see chapter 5.3.3 for upstream framing) is not differentially encoded, the outputs I, Q map to the phase states as in Figure 13.

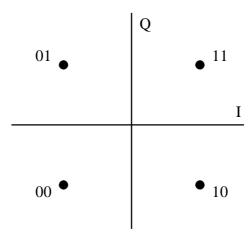


Figure 13: Mapping for the QPSK constellation (upstream)

For the remainder of the packet, the differential encoder shall accept bits A, B in sequence, and generate phase changes as follows. It starts with the first information dibit and is initialised with the last dibit of the unique word, i.e. (A,B=0,1) since conversion is made MSB first.

Table 3: Phase Changes Corresponding to Bits A, B

Α	В	Phase Change
0	0	none
0	1	+ 90°
1	1	180°
1	0	- 90°

Phase changes correspond to the following formulas (assuming I and Q are mapped to the constellation as for the unique word):

$$\begin{cases} A_k = \overline{(I_{k-1} \oplus Q_{k-1})} \times (Q_{k-1} \oplus Q_k) + \overline{(I_k \oplus Q_{k-1})} \times (I_k \oplus I_{k-1}) \\ B_k = \overline{(I_{k-1} \oplus Q_{k-1})} \times (I_{k-1} \oplus I_k) + \overline{(I_{k-1} \oplus Q_k)} \times (Q_k \oplus Q_{k-1}) \end{cases},$$

where k is the time index.

I/Q amplitude imbalance shall be less than 1,0 dB, and phase imbalance less than 2,0°.

#### 5.2.3.3 Shaping Filter (Upstream)

The time-domain response of a square-root raised-cosine pulse with excess bandwidth parameter  $\alpha$  is given by:

$$g(t) = \frac{\sin\left[\frac{\mathbf{p}t}{T}(1-\mathbf{a})\right] + \frac{4\mathbf{a}t}{T}\cos\left[\frac{\mathbf{p}t}{T}(1+\mathbf{a})\right]}{\frac{\mathbf{p}t}{T}\left[1 - \left(\frac{4\mathbf{a}t}{T}\right)^{2}\right]}$$

where T is the symbol period.

The output signal shall be defined as

$$S(t) = \sum_{n} \left[ I_n \times g(t - nT) \times \cos(2 \mathbf{p} f_c t) - Q_n \times g(t - nT) \times \sin(2 \mathbf{p} f_c t) \right]$$

with  $I_n$  and  $Q_n$  equal to  $\pm$  1, independently from each other, and f  $_c$  the QPSK modulator's carrier frequency.

The QPSK modulator divides the incoming bit stream so that bits are sent alternately to the in-phase modulator I and the out-of-phase modulator Q. These same bit streams appear at the output of the respective phase detectors in the demodulator where they are interleaved back into a serial bit stream.

The QPSK signal parameters are:

RF bandwidth  $BW = (f_b / 2) * (1 + \alpha)$ 

Occupied RF Spectrum  $[f_c - BW/2, f_c + BW/2]$ 

Symbol Rate  $f_s = f_b / 2$ 

Nyquist Frequency  $f_N = f_s / 2$ 

with  $f_b$  = bit rate,  $f_c$  = carrier frequency and  $\alpha$  = excess bandwidth.

For all four bit rates: 256 kbit/s (Grade A), 1.544 Mbit/s (Grade B), 3.088 Mbit/s (Grade C) and 6.176 Mbit/s (Grade D), the Power Spectrum at the QPSK transmitter shall comply to the Power Spectrum Mask given in Table 4 and Figure 14. The Power Spectrum Mask shall be applied symmetrically around the carrier frequency.

**Table 4: QPSK Upstream Transmitter Power Spectrum** 

(f - f <sub>c</sub> ) / f <sub>N</sub>	Power Spectrum	
≤ 1-α	0 ± 0.25 dB	
at 1	$-3 \pm 0.25 \text{ dB}$	
at 1+ $\alpha$	≤ -21 dB	
≥ 2	≤ -40 dB	

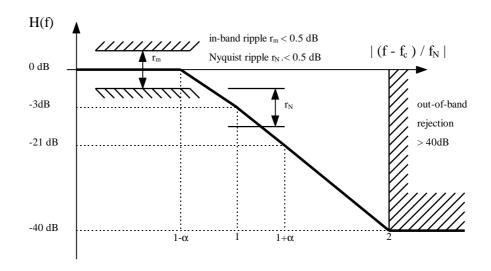


Figure 14: QPSK Upstream Transmitter Power Spectrum

The specifications which shall apply to QPSK modulation for the upstream channel are given in Table 4.

#### 5.2.3.4 Randomiser (Upstream)

The unique word shall be sent in clear (seechapter 5.3.3). After addition of the FEC bytes, randomisation shall apply only to the payload area and FEC bytes, with the randomiser performing modulo-2 addition of the data with a pseudo-random sequence. The generating polynomial is  $x^6 + x^5 + 1$  with seed all ones. We assume the first value coming out of the pseudo-random generator taken into account is 0. Byte/serial conversion shall be MSB first. The binary sequence generated by the shift register starts with 00000100...... The first "0" is to be added in the first bit after the unique word.

A complementary non self-synchronising de-randomiser is used in the receiver to recover the data. The de-randomiser shall be enabled after detection of the unique word.

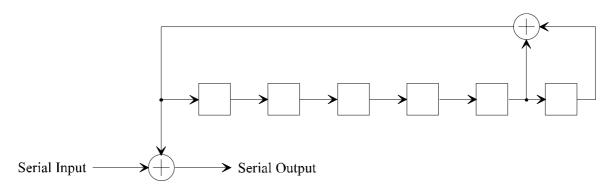


Figure 15: Randomiser

# 5.2.3.5 Bit Rate (Upstream)

Four grades of modulation transmission rate are specified:

Table 5: Upstream bit-rates for modulation grades A, B, C and D

Grade	Rate
Α	256 kbit/s (optional for INA and NIU)
В	1.544 Mbit/s (optional for INA and NIU)
С	3.088 Mbit/s (mandatory for INA and NIU)
D	6.176 Mbit/s (optional for INA and NIU)

The support of 3.088 Mbit/s is mandatory, of other rates is optional for both INA and NIU.

Symbol rate accuracy should be within +/- 50 ppm.

For grade A, the rate is 500 slots/s. For grade B, the rate is 3000 slots/s. For grade C, the rate is 6000 slots/s. For grade D, the rate is 12000 slots/s.

#### 5.2.3.6 Transmit Power Level (Upstream)

At the output, the transmit power level shall be in the range 85 - 113 dBmicroV (RMS) (75  $\Omega$ ). In some geographic areas, it may be necessary to cover the range 85-122 dBmicroV (RMS) (75  $\Omega$ ). However, note that high power may lead to electromagnetic compatibility problems. This power shall be adjustable by steps of 0.5 dB (nominally) by MAC messages coming from the INA.

Mesured at the INA, the US power accuracy shall be better or equal to +/-1.5dB.

#### 5.2.3.7 Upstream Burst Power and Timing Profiles

Because of the symbol shaping filter that spreads the symbol duration over Ts=1/symbol\_rate, a burst has a ramp up (before the first symbol) and a ramp down (after the last symbol) as shown Figure 16.

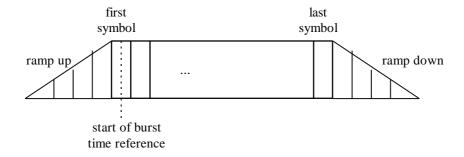


Figure 16: Burst Ramp Up and Down

The ramps up and down of consecutive bursts can overlap.

The ramps must be minimum 3 symbols long.

When the transmitter is idle the upstream power level attenuation shall be more than 60 dB (relative to the nominal burst power output level), over the entire power output range(The absolute maximum output power level should not exceed that specified in [?]). A terminal is considered to be idle if it is 3 slots before an imminent transmission or 3 slots after its most recent transmission.

4 symbols before the first symbol of a burst and 4 symbols after the last symbol, the upstream power level attenuation shall be more than 30 dB (relative to the nominal burst power output level), over the entire power output range.

After ranging and propagation delay compensation, the NIU/STB US timing accuracy shall be better than or equal to +/-5/8 th of a symbol (Upstream rate).

The time ranging accuracy provided by the MAC messages coming from the INA shall be better than or equal to +/-1/8 th of a symbol (upstream rate) or +/-50ns, whatever is the maximum (because the ranging unit is 100 nsec).

The NIU messages shall then arrive at the INA in a window of +/- 0.75 symbols (upstream transmission bit rate) for bitrates of 256 kbit/sec, 1.544 Mbit/sec and 3.088 Mbit/sec and in a window of +/- 0.78 symbols (upstream transmission bit rate) for the 6.176 Mbit/sec case.

#### 5.2.3.8 Interference (Spurious) Suppression.

The noise and the spurious power at the output of the transmitting (upstream) device may not exceed the levels as shown in Table 6 below. The measurement bandwidth is equal to the symbol rate (e.g. 1.544 kHz for 1.544 kSymbols/s) below fd1 and equal to 7 MHz above fd1.

**Table 6: Interference Spurious Suppression** 

	transmitting burst	between bursts
In band	n.a.	- 60 dBc * **
Adjacent band upstream	- 40 dBc	- 70 dBc * **
Other band within 5 fd1 MHz	- 40 dBc	- 70 dBc *
fd1fd2 MHz (measured in 7 MHz)	45 dBμV	22 dBμV
> fd2 MHz (measured in 7 MHz)	30 dBμV	22 dBμV

<sup>\*</sup> dBc is based on the carrier level during the burst

\*\* The additional suppression of 30 dB for inter burst is based on the connection max. 1000 NIU's per INA.

fd1 = minimum downstream frequency in the network
fd2 = minimum downstream frequency occupied by TV programs

# 5.2.3.9 Summary (Upstream)

Table 7: Summary (Upstream)

F		
Upstream	Three grades of modulation transmission bit rate are specified:	
Transmission	Crade Date	
Bit Rate	Grade Rate	
	A 256 kbit/s (optional for INA and NIU) B 1.544 Mbit/s (optional for INA and NIU)	
	C 3.088 Mbit/s (mandatory for INA and NIU)	
	D 6.176 Mbit/s (optional for INA and NIU)	
	o. Tro Misies (optional for it with and two)	
	The support of 3.088 Mbit/s is mandatory, of other rates is optional	
	for both INA and NIU.	
Modulation	Differentially encoded QPSK	
Transmit Filtering	alpha = 0,30 square root raised cosine	
Channel Spacing	200 kHz for Grade A (256 kbit/s)	
	1 MHz for Grade B (1.544 Mbit/s)	
	2 MHz for Grade C (3.088 Mbit/s)	
	4 MHz for Grade D (6.176 Mbit/s)	
Frequency Step Size	50 kHz	
Randomisation	The unique word shall be sent in the clear. After addition of the FEC	
	bytes, randomisation shall apply only to the payload area and FEC	
	bytes, with the randomiser performing modulo-2 addition of the data	
	with a pseudo-random sequence. The generating polynomial is	
	$x^6 + x^5 + 1$ with seed all ones.	
	Byte/serial conversion shall be MSB first.	
	A complementary non self-synchronising de -randomiser is used in	
	the receiver to recover the data. The de -randomiser shall be enabled	
514	after detection of the unique word.	
Differential Encoding	The differential encoder shall accept bits A, B in sequence, and	
	generate phase changes as follows. In serial mode, A arrives first.	
	A B Phase Change 0 0 none	
	0 0 1 + 90°	
	1 1 180°	
	1 0 - 90°	
Signal Constellation	The outputs I, Q from the differential encoder map to the phase	
3	states as in Figure 17.	
Note:	·	
The unique word	Q	
(Ox CC CC CC 0D)	01 _ 11	
does not go through		
differential encoding.	I	
	00 ● 10	
	Figure 17: Burst QPSK Constellation	
Frequency Range	5-65 MHz recommended but not mandatory.	
Frequency Stability	+/- 50 ppm measured at the upper limit of the frequency range	
Symbol Rate	+/- 50 ppm	
Accuracy		
Transmit Spectral	A common mask for all four bit rates: 256 kbit/s (Grade A), 1.544	
Mask	Mbit/s (Grade B), 3.088 Mbit/s (Grade C) and 6.176 Mbit/s (Grade D)	
Carrier Suppression	is given in Table 4 and Figure 14.	
Carrier Suppression when Transmitter	> 30 UD	
witeri i i arisitiillei		

Active						
Burst Power Profile	Upstream power level attenuation shall be more than 60 dB relative to the nominal burst power output level over the entire power output range and 30 dB right after or before transmission.  Idle Transmitter Definition: A terminal is considered to be idle if it is 3 slots before an imminent transmission or 3 slots after its most recent transmission.					
	3 slots  Burst Packet  3 slots  1 byte  30 dB  60 dB  30 dB					
I/Q Amplitude Imbalance	< 1,0 dB					
I/Q Phase Imbalance	< 2,0°					
Transmit Power Level at the modulator output (upstream)	85 - 113 dBmicroV (RMS) (75 $\Omega$ )). In some geographic areas, it may be necessary to cover the range 85 - 122 dBmicroV (RMS) (75 $\Omega$ ). In any case, cable networks must comply with the EMC requirements of CENELEC EN 50083-2 concerning radiated disturbance power by feed in of the transmit power.					

# 5.2.3.10 Packet Loss Upstream (Informative)

Packet loss at the INA shall be less than 10 $^{-6}$  at C/N > 20 dB (after error correction) for upstream transmission.

NOTE:

A packet loss occurs when one or more bit per packet (after error correction) are uncorrectable. The C/N is referred at the demodulator input (Nyquist bandwidth, white noise).

#### 5.2.3.11 Maximum Cable Delay

This specification has been designed to support cable round trip delays of up to 800us, which corresponds to a cable length of approximately 80km. Larger delays than this may be accommodated, with judicious use of the specification.

#### 5.3 Framing

#### 5.3.1 Forward Interaction Path (Downstream OOB)

#### 5.3.1.1 Signaling Link Extended Superframe Framing Format

The Signalling Link Extended Superframe (SL-ESF) frame structure is shown in  $\,$  Figure 18. The bitstream is partitioned into 4 632-bit Extended Superframes. Each Extended Super frame consists of 24  $\times$  193-bit frames. Each frame consists of 1 overhead (OH) bit and 24 bytes (192 bits) of payload.

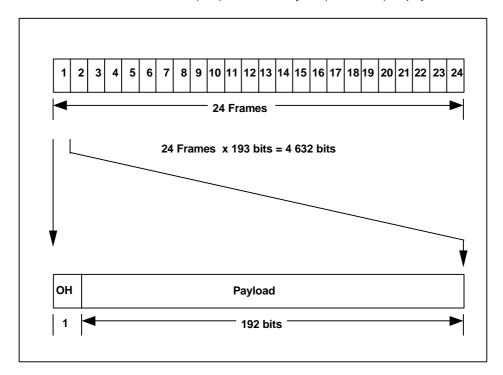


Figure 18: SL-ESF Frame Structure

#### 5.3.1.2 Frame overhead

There are 24 frame overhead bits in the Extended Superframe which are divided into Extended Superframe Frame Alignment Signal (F1-F6), Cyclic Redundancy Check (C1-C6), and M-bit Data Link (M1-M12) as shown in Table 8. Bit number 0 is received first.

**Table 8: Frame overhead** 

Frame		Overhead						
Number	Bit Number	Bit	Data (192 bits)					
1	0	M1						
2	193	C1						
3	386	M2						
4	579	F1 = 0						
5	772	M3						
6	965	C2						
7	1 158	M4						
8	1 351	F2 = 0						
9	1 544	M5						
10	1 737	C3						
11	1 930	M6						
12	2 123	F3 = 1						
13	2 316	M7						
14	2 509	C4						
15	2 702	M8						
16	2 895	F4 = 0						
17	3 088	М9						
18	3 281	C5						
19	3 474	M10						
20	3 667	F5 = 1						
21	3 860	M11						
22	4 053	C6						
23	4 246	M12						
24	4 439	F6 = 1						
FAS:	FAS: Frame Alignment Signal (F 1 - F6)							
DL:	DL: Mbit Data Link (M1 - M12)							
CRC:	Cyclic Redundar	cy Check (C1 -	· C6)					

#### **ESF Frame Alignment Signal**

The ESF Frame Alignment Signal (FAS) is used to locate all 24 frames and overhead bit positions. The bit values of the FAS are defined as follows:

F1 = 0, F2 = 0, F3 = 1, F4 = 0, F5 = 1, F6 = 1.

#### **ESF Cyclic Redundancy Check**

The Cyclic Redundancy Check field contains the CRC-6 check bits calculated over the previous Extended Superframe (CRC Message block [CMB] size = 4632 bits). Before calculation, all 24 frame overhead bits are equal to "1". All information in the other bit positions is unchanged. The check bit sequence C1-C6 is the remainder after multiplication by  $x^{-6}$  and then division by the generator polynomial  $x^{-6}+x+1$  of the CMB. C1 is the most significant bit of the remainder. The initial remainder value is preset to all zeros.

#### **ESF Mbit Data Link**

The M-bits in the SL-ESF serve for slot timing assignment (see chapter 5.4).

#### 5.3.1.3 Payload Structure

The SL-ESF frame payload structure provides a known container for defining the location of the ATM cells and the corresponding Reed Solomon parity values. The SL-ESF payload structure is shown in Table 9. When the INA has no data or MAC messages to send on the downstream OOB channel, it will send Idle ATM Cells as specified in [21], where the content of the Idle ATM Cell has been specified as:

0x00, 0x00, 0x00, 0x01, 0x52 (Idle ATM Cell header)

**Table 9: ESF Payload structure** 

	<b>-</b> 2	2	53 2	-	
1	R1a	R1b	ATM Cell RS parity		
2	R1c	R2a		R2 b	
3	R2c	R3a			
4	R3b	R3c		R4 a	
5	R4b	R4c			-! 
6	R5a	R5b		R5 c	
7	R6a	R6b			
8	R6c	R7a		R7 b	
9	R7c	R8a			
10	R8b	R8c		T	T

The SL-ESF payload structure consists of 5 rows of 57 bytes each, 4 rows of 58 bytes each which includes 1 byte trailer, and 1 row of 59 bytes, which includes a 2 byte trailer. The relative ordering of data between Table 9 and Table 8, is such that reading Table 9 from left to right, and then top to bottom, corresponds to reading Table 8 from top to bottom. The most significant bit of byte R1a in Table 9, corresponds to Bit Number 1 in Table 8. The various SL -ESF payload fiel ds are described below.

Define the downstream time-ticks T <sub>dn</sub> and the upstream time-ticks T <sub>un</sub> as follows:

The downstream channel is divided into 3 msec periods separated by downstream time-ticks T un in case of upstream transmission bit rates of 1.544 Mbit/s, 3.088 Mbit/s and 6.176 Mbit/s.. In case of an upstream transmission bit rate of 256kbit/s both downstream and upstream periods are 6ms.

Then the time difference, T  $_{un}$ -T $_{dn}$ , is called the Absolute\_Time\_Offset:

Absolute\_Time\_Offset =  $T_{un}$ - $T_{dn}$ 

New Absolute Time Offset = current Absolute Time Offset - Time Offset Value

(Time Offset Value is defined in chapter 5.5.4.3)

Before the NIU is going through the sign-on procedure for the first time, the current Absolute\_Time\_Offset is set according to the value passed in the Default Configuration message (taking into account the timing accuracies).

Time Offset Value is one field of the "Ranging and Power Calibration Message".

The NIU shall use the following definitions for using the R-bytes:

The boundary information contained in the downstream period that starts by downstream time-tick T  $_{un+1}$ . This

upstream period is also called the "next" one.

The reception information contained in the downstream period that starts by downstream time-tick T relates to the slots in the upstream period that starts at upstream time-tick T un-2. This upstream period is also called the "second previous" one.

#### **ATM Cell Structure**

The format for each ATM cell structure is shown in Figure 19. This structure and field coding shall be consistent with the structure and coding given in ITU-T Recommendation I.361 for ATM UNI.

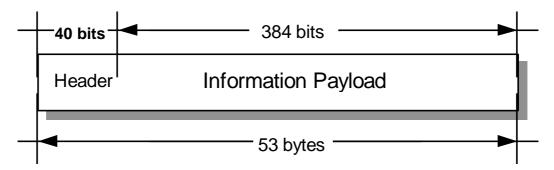


Figure 19: ATM cell format

The entire header (including the HEC byte) shall be protected by the Header Error Control (HEC) sequence. The HEC code shall be contained in the last byte of the ATM header. The HEC sequence shall be capable of:

- single-bit error correction
- multiple-bit error detection

Error detection in the ATM headere shall be implemented as defined in [21]. The HEC byte shall be generated as described in [21], including the recommended modulo-2 addition (XOR) of the pattern 01010101b to the HEC bits. The generator polynomial coefficient set used and the HEC sequence generation procedure shall be in accordance with [21].

#### Channel coding and interleaving

Reed-Solomon encoding with t = 1 shall be performed on each ATM cell. This means that 1 erroneous byte per ATM cell can be corrected. This process adds 2 parity bytes to the ATM cell to give a codeword of (55,53).

The Reed-Solomon code shall have the following generator polynomials:

Code Generator Polynomial:  $g(x) = (x + m^0)(x + m^1)$ , where m = 02 hex

Field Generator Polynomial:  $p(x) = x^8 + x^4 + x^3 + x^2 + 1$ 

The shortened Reed-Solomon Code shall be implemented by appending 200 bytes, all set to zero, before the information bytes at the input of a (255,253) encoder; after the coding procedure these bytes are discarded.

Convolutional interleaving shall be applied to the ATM cells contained in the SL-ESF. The Rxa - Rxc bytes and the two T bytes shall not be included in the interleaving process. Convolutional interleaving is applied by interleaving 5 lines of 55 bytes.

Following the scheme of Figure 20, convolutional interleaving shall be applied to the error protected packets. The convolutional interleaving process shall be based on the Forney approach, which is compatible with the Ramsey type III approach, with I=5. The Interleaved frame shall be composed of overlapping error protected packets and a group of 10 packets shall be delimited by the start of the SL-ESF

The interleaver is composed of I branches, cyclically connected to the input byte-stream by the input switch. Each branch shall be a First In First Out (FIFO) shift register, with depth (M\*j) cells (where M=N/I, N=55=error protected frame length, I=interleaving depth, j= branch index). The input and output switches shall be synchronised. Each cell of the FIFO shall contain one byte.

For synchronisation purposes, the first byte of each error protected packet shall be always routed into the branch "0" of the interleaver (corresponding to a null delay). The third byte of the SL-ESF payload (the byte immediately following R1b) shall be aligned to the first byte of an error protected packet.

The de-interleaver is similar, in principle, to the interleaver, but the branch indexes are reversed (i.e. branch 0 corresponds to the largest delay). The de-interleaver synchronisation is achieved by routing the third data byte of the SL-ESF into the "0" branch.

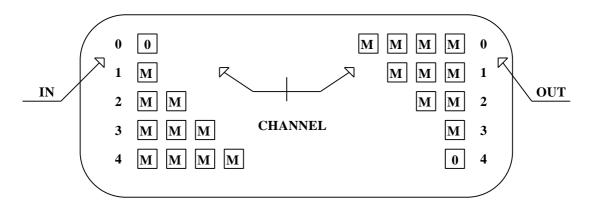


Figure 20: Interleaver and De-interleaver structures

#### Reception indicator fields and slot boundary fields

A downstream channel can control up to 8 upstream channels and contains control information for each of its associated upstream channels. This information is contained within structures known as MAC Flags. A set of MAC Flags is represented by either 24 bits (denoted b0..b23) or by 3 bytes (denoted Rxa, Rxb and Rxc):

```
Rxa = (b0 .....b7) = (msb.....lsb)
Rxb = (b8.....b15) = (msb.....lsb)
Rxc = (b16....b23) = (msb.....lsb)
```

One or more consecutive MAC flags are associated to one upstream channel. This link is done in the MAC messages Default Configuration Message, Connect Message, Reprovision Message and Transmission Control Message. To the upstream channel "c" (parameter Service\_Channel or Upstream\_Channel\_Number or New\_Upstream\_Channel\_Number of the MAC messages mentioned above) are associated the MAC flags "x" and the following as described below. "x" corresponds to the parameter MAC\_Flag\_Set of the previous MAC messages. It is a 5 bit field and can take the values 1..16. Values 0 and 17..31 are invalid.

In the OOB downstream case, each SL-ESF frame structure contains eight sets of MAC Flags represented by Rxa, Rxb and Rxc, where x is replaced by the numbers 1..8. In the case of a 1.544 Mbit/s downstream bit rate, only one SL-ESF frame occurs during a 3 msec interval providing 8 sets of MAC Flags. In the case of a 3.088 Mbit/s downstream bit rate, two SL-ESF frames A and B occur during a 3 msec interval, providing 16 sets of MAC Flags. The second set of MAC Flags (contained in SL-ESF B) are denoted by Rxa, Rxb and Rxc, where x is replaced by the numbers 9 through 16.

In case of a 3.088 Mbit/s upstream channel, two sets of MAC Flags are required. In this case, the MAC\_Flag\_Set parameter represents the first of two successively assigned MAC Flag sets (Rxa-Rxc,Rya-Ryc with y=(x+1) with x belongs to [1, 7] for 1.544 Mbit/s DS and belongs to [1, 15] for 3.088 Mbit/s DS. In particular, if one downstream OOB 1.544 Mbit/s channel controls 3.088 Mbit/s upstream channels, at most 4 upstream channels can be controlled, due to the number of available MAC Flags.

In case of a 6.176 Mbit/s upstream channel, four sets of MAC Flags are required. In this case, the MAC\_Flag\_Set parameter represents the first of four successively assigned MAC Flag sets (Rxa-Rxc,Rua-Ruc,Rva-Rvc,Rwa-Rwc with u=(x+1), v=(x+2), w=(x+3), with x belongs to [1, 5] for 1.544 Mbit/s DS and belongs to [1, 13] for 3.088 Mbit/s DS. In particular, if one downstream OOB 3.088 Mbit/s channel controls 6.176 Mbit/s upstream channels, at most 4 upstream channels can be controlled, due to the number of available MAC Flags. And if one downstream OOB 1.544 Mbit/s channel controls 6.176 Mbit/s upstream channels, at most 2 upstream channels can be controlled.

The bits b0 to b23 are defined as follows:

```
b0
             = ranging slot indicator for next 3 msec period (msb)
                   (6 msec for 256 kbit/s)
b1-b6
             = slot boundary definition field for next 3 msec period
                   (6 msec for 256 kbit/s)
b7
             = slot 1 reception indicator (as shown in Table 13)
b8
             = slot 2 reception indicator (as shown in Table 13)
b9
             = slot 3 reception indicator (as shown in Table 13)
b10
             = slot 4 reception indicator (as sho wn in Table 13)
             = slot 5 reception indicator (as shown in Table 13)
h11
             = slot 6 reception indicator (as shown in Table 13)
h12
             = slot 7 reception indicator (as shown in Table 13)
b13
             = slot 8 reception indicator (as shown in Table 13)
b14
b15
             = slot 9 reception indicator (as shown in Table 13)
             = reservation control for next 3 msec period
b16-17
                   (6 msec for 256 kbit/s)
b18-b23
             = CRC 6 parity (see definition in SL-ESF section)
```

When the upstream transmision bit rate is 256 kbit/s, then only the first three slot reception indicators are valid. When the upstream transmission bit rate is 1.544 Mbit/s, then the 9 slots are valid. When the upstream transmission bit rate is 3.088 Mbit/s, the 9 slots of this field and the 9 slots of the following field are valid: two consecutive Slot Configuration fields are then used. The definition of the first Slot Configuration field is unchanged. The definition of the second Slot Configuration field extends the boundary definition to cover upstream slots 10 through 18, and the reception indicators to cover upstream slots 10 through 18. When the upstream transmission bit rate is 6.176 Mbit/s, four consecutive Slot Configuration fields are then used. The definition of the first Slot Configuration field is unchanged. The definition of the second Slot Configuration field extends the boundary definition to cover upstream slots 10 through 18, and the reception indicators to cover upstream slots 10 through 18. The definition of the third Slot Configuration field extends the boundary definition to cover upstream slots 19 through 27, and the reception indicators to cover upstream slots 19 through 27. The definition of the fourth Slot Configuration field extends the boundary definition to cover upstream slots 28 through 36, and the reception indicators to cover upstream slots 28 through 36.

In general, when the upstream rate is lower than the downstream rate, there are several OOB downstream superframes during groups of k upstream slots (where k = 3 for 256 kbit/s upstream, k = 9 for 1.544 Mbit/s upstream). In that case, slot configuration information remain equal over all superframes corresponding to one group of k upstream slots.

**Ranging Slot Indicator (b0)** - When this bit is active (b0 = 1), the first three slots of upstream channel "x" which correspond to the occurrence of the next superframe of the related downstream channel are designated as ranging slots. A ranging message may be transmitted in the second ranging slot according to the algorithm defined for ranging , and the first and third ranging slots may not be used for transmission (guard band for ranging operations).

**Slot Boundary Definition field (b1-b6)** - Slot types are assigned to upstream slots using bits b0 - b6. The slots are grouped into "spans". In the case of 256(kBit/s) upstream, a span is the 3 slots between two 6(ms) time markers. Otherwise a span is 9 slots. In the case of 1,544(Mbit/s) there is 1 span between two 3(ms) time markers. In the case of 3,088(Mbit/s) there are 2 spans between two 3(ms) time markers. In the case of the 6,167(Mbit/s) there are 4 spans between two 3(ms) time markers. Within each span, the bits b0 - b6 define regions, such that slots of the same type are contained within the same region. The order of the regions is Ranging slots, Contention based slots, Reserved slots and Fixed rate based slots. If a ranging slot is available within a "span", it will consist of the first three slot times in the "span", assuming b1-b6 are not in the range 55-63 (see Table 12). A ranging slot is indicated by b0 = 1. The

boundaries between the remaining regions of the "spans" are defined by b1-b6. The boundaries are defined as shown in Table 10.

Table 10: Slot Boundary Definition field (b1-b6)

Boundary 0	
-	slot 1
Boundary 1	
	slot 2
Boundary 2	
	slot 3
Boundary 3	
	slot 4
Boundary 4	
	slot 5
Boundary 5	
	slot 6
Boundary 6	
	slot 7
Boundary 7	
	slot 8
Boundary 8	
	slot 9
Boundary 9	

The boundary positions are defined by b1-b6 as shown in Table 11.

Table 11: Boundary positions (b1-b6)

(note 1) (note 2)	0	1	2	3	4	5	6	7	8	9
0(note 3)	0	1	2	3	4	5	6	7	8	9
1(note 3)		10	11	12	13	14	15	16	17	18
2(note 3)			19	20	21	22	23	24	25	26
3				27	28	29	30	31	32	33
4					34	35	36	37	38	39
5						40	41	42	43	44
6							45	46	47	48
7								49	50	51
8									52	53
9										54

NOTE 1: row = Contention based / Reserved region boundary column = Reserved packet /Fixed rate based region boundary

NOTE 3: When the ranging control slot indicator (b0) is set to "1", the values in rows 0 - 2 are illegal values, and values in row 3 means that there are no contention slots, because slots 1-3 are defined as ranging control slots.

Example: b0 = 0, b1-b6 = 22: Contention (1-2), reserved (3-5), Fixed rate (6-9)

The remaining values of the Slot Boundary Definition Field are provided in Table 12.

**Table 12: Slot Boundary Definition Field** 

b1-b6 value	ranging control slots	contention slots	reservation slots	fixed rate slots
55	1-6	7-9	-	-
56	1-6	7-8	-	9
57	1-6	7	8-9	-
58	1-6	7	8	9
59	1-6	7	-	8-9
60	1-6	-	7-8	9
61	1-6	-	7	8-9
62	1-6	-	-	7-9
63	1-9	-	-	-

Note: For b1-b6 = 55 - 63, b0 must be set to 1. Note that for b1-b6 between 55 and 62, two ranging slots are

provided (2 and 5). For b1-b6 = 63, three ranging slots are provided (2, 5, and 8).

The values in the above tables are derived from b1-b6 in the following manner:

$$b1 + (b2 \times 2) + (b3 \times 4) + (b4 \times 8) + (b5 \times 16) + (b6 \times 32)$$

**Warning**: This formula indicates that b6 is considered as msb of b1-b6 word, whereas b0 is msb of the entire word b0-b23. Although this "looks" inconsistent, it has not been changed for the purpose of compatibility with the DAVIC standard.

When the upstream data channel is a 256 kbit/s data channel, then only the first four rows and colums of Table 11 are valid, and Table 12 is not valid.

**Note**: If slot boundary fields change while some NIUs have already been allocated slots in the reservation slots area, these NIUs are responsible of updating the list of physical slots. Specifically, slots are assigned by MAC Reservation Grant messages, which contain a Reference slot that does not depend on the slot boundary fields and a Grant\_slot\_count which corresponds to the number of slots assigned within the reservation slots boundary field. If the field changes, the list of physical slots on which the NIU can transmit automatically changes accordingly.

**Slot Reception Indicators (b7 - b15)** - When a slot reception indicator is active ("1"), this indicates that a cell was received without collision. The relationship between a given US slot and its indicator is shown in Table 13. When the indicator is inactive ("0"), this indicates that either a collision was detected or no cell was received in the corresponding upstream slot.

Slot reception indicators lead to the retransmission procedure only when contention access is used as described inchapter 5.5.2.4.

1.544Mbit/s Downstream 3.088 Mbit/s Downstream 1 Frame 1 Frame 256 kbit/s DS DS Upstream US US 3 slots 3 slots 1 Frame 1 Frame 1.544 DS DS Mbit/s Upstream US US 9 slots 9 slots 1 Frame 1 Frame 3.088 DS DS Mbit/s Upstream US US 18 slots 18 slots 6.176 1 Frame 1 Frame Mbit/s DS DS Upstream US US 36 slots 1. 'I' indicates the downstream frame(s) in which Indicators (contained within the Notes Flag Sets) are sent. These indicators control the upstream slots in the shaded area. 2. In the 3.088 downstream, two successive frames contain MAC Flag Sets 1..16 3. Two successive MAC Flag Sets are used to control the 18 slots of a 3.088 upstream channel. In this case you can control max. 4 upstreams using the 1.544 downstream. 4. Four successive MAC Flag Sets are used to control the 36 slots of a 6.176 upstream channel. In this case you can control max. 2 upstreams using the 1.544 downstream and max. 4 upstreams using the 3.088 downstream. Note that this table refers to the position of US slots with respect to the positions of DS superframes at the INA receiver. NIUs should have their Time\_Offset\_Value of transmission set such that this table applies.

Table 13: Relationship of US slot to DS Indicator at the INA

**Reservation Control (b16-b17)** - When the reservation control field has the value of 0, no reservation attempts are allowed to be transmitted on the corresponding QPSK upstream channel during the slot positions associated with the next 3 msec period. When the reservation control field has the value of 1, reservation attempts can be made. The values 2 and 3 are reserved. A reservation attempt corresponds to sending a MAC Reservation Request message (see MAC section). b16 is msb.

**CRC 6 Parity (b18-b23)** - This field contain a CRC 6 parity value calculated over the previous 18 bits. The CRC 6 parity value is described in the SL-ESF frame format chapter 5.3.1.2, b18 is msb.

In the case where there is more than one OOB DS QPSK channel related to an upstream QPSK channel, the SL-ESF overhead bits and the payload R-bytes shall be identical in those OOB DS channels, with the exception of the overhead CRC (C1-C6) bits, which are specific to each of those OOB DS channels. Such related DS channels shall be synchronised (transmitted synchronously). This scenario applies for example when a lot more bandwidth is needed for DS information than US information. An NIU is but not required to have more than one QPSK tuner.

The MAC messages that are required to perform the MAC functions for the upstream channel shall be transmitted on each of its related OOB DS channels.

# **Trailer bytes**

These bytes are not used. They are equal to 0.

### 5.3.2 Forward Interaction Path (Downstream IB)

# 5.3.2.1 IB Signalling MPEG2-TS Format (MAC Control Message)

The structure that is utilised when the downstream QAM channel is carrying MPEG2-TS packets is shown in Figure 21. MSBs of each field are transmitted first.

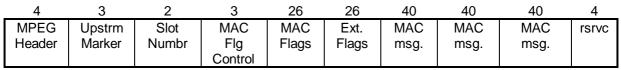


Figure 21: Frame structure (MPEG-2 TS format)

### where

**MPEG Header** is the 4 byte MPEG-2 Transport Stream Header as defined in ISO 13818-1 with a specific PID designated for MAC messages. This PID is 0x1C. The transport\_scrambling\_control field of the MPEG header shall be set to '00'.

**Upstream Marker** is a 24 bit field which provides upstream QPSK synchronisation information. (As mentioned in chapter 5.1.4, at least one packet with synchronisation information must be sent in every period of 3 msec). The definition of the field is as follows:

### bit 0: upstream marker enable (msb)

When this field has the value '1', the slot marker pointer is valid. When this field has the value '0', the slot marker pointer is not valid.

## bit 1 - 3: MAC Message Framing

Bit 1 relates to the first MAC message slot within the MPEG frame, bit 2 to the second, and bit 3 to the last slot. The meaning of each bit is:

- 0: a MAC message terminates in this slot.
- 1: a MAC message continues from this slot into the next, or the slot is unused, in which case the first two bytes of the slot are 0x0000.

# bit 4 - 7: reserved

# bit 8 - 23: upstream slot marker pointer

The slot marker pointer is a 16 bit unsigned integer which indicates the number of downstream "symbol" clocks between the next Sync byte and the next 3 msec time marker. Bit 23 is to be considered as the most significant bit of this field.

**Slot Number** is a 16 bit field which is defined as follows: (As mentioned in chapter 5.1.4, at least one packet with synchronisation information must be sent in every period of 3 msec).

## bit 0: slot position register enable (msb)

When this field has the value '1', the slot position register is valid. When this field has the value '0', the slot position register is not valid.

### bit 1-3: reserved

bit 4 is set to the value '1'. This bit is equivalent to M12 in the case of OOB downstream.

#### bit 5: odd parity

This bit provides odd parity for upstream slot position register. This bit is equivalent to M11 in the case of OOB downstream.

### bits 6-15: upstream slot position register

The upstream slot position register is a 10 bit counter which counts from 0 to n with bit 6 the msb. These bits are equivalent to M10-M1 in the case of OOB downstream.

(see chapter 5.4for more information on the functionality of the upstream slot position register)

**MAC Flag Control** is a 24 bit field (b0 (msb),b1,b2...b23) which provides control information which is used in conjunction with the 'MAC Flags' and 'Extension Flags' fields. The definition of the MAC Flag Control field is as follows:

b0-b2	Channel 0 control field
b3-b5	Channel 1 control field
b6-b8	Channel 2 control field
b9-b11	Channel 3 control field
b12-b14	Channel 4 control field
b15-b17	Channel 5 control field
b18-b20	Channel 6 control field
b21-b23	Channel 7 control field

Each of the above Channel "c" Control Fields is defined as follows:

Channel "c" control field (a,b,c) = (bn,bn+1,bn+2) where n = 3\*c

bit a: 0 - MAC Flag Set of channel "c" disabled

1 - MAC Flag Set of channel "c" enabled

'MAC Flag Set of Channel "c" enabled' means that the Mac Flags assigned to the upstream channel 'c' are valid in this TS packet. The relation between the channel number 'c' and the assigned Mac Flag sets is provided in the 'Default Configuration', 'Connect', 'Reprovision' and 'Transmission control' messages.

In case of a 3.088 Mbit/s upstream channel, two sets of MAC Flags are required. In this case, the MAC\_Flag\_Set parameter represents the first of two successively assigned MAC Flag sets. The definition of the second slot configuration field extends the boundary definition to slots 10 through 18, and the reception indicators cover slots 10 through 18.

In case of a 6.176 Mbit/s upstream channel, four sets of MAC Flags are required. In this case, the MAC\_Flag\_Set parameter represents the first of four successively assigned MAC Flag sets. The definition of the second slot configuration field extends the boundary definition to slots 10 through 18, and the reception indicators cover slots 10 through 18. The definition of the third Slot Configuration field extends the boundary definition to cover upstream slots 19 through 27, and the reception indicators to cover upstream slots 19 through 27. The definition of the fourth Slot

Configuration field extends the boundary definition to cover upstream slots 28 through 36, and the reception indicators to cover upstream slots 28 through 36.

- bit b,c: 00 all flags valid for second previous 3 msec (6 msec for 256 kbit/s Upstream) period (out-of-band signaling equivalent)
  - 01 flags valid for 1st msec (2 msec for 256 kbit/s Upstream) of previous 3 msec (6 msec for 256 kbit/s Upstream) period
  - 10 flags valid for 2nd msec (2 msec for 256 kbit/s Upstream) of previous 3 msec (6 msec for 256 kbit/s Upstream) period
  - 11 flags valid for 3rd msec (2 msec for 256 kbit/s Upstream) of previous 3 msec (6 msec for 256 kbit/s Upstream) period

**MAC Flags** is a 26 byte field containing 8 slot configuration fields (24 bits each) which contain slot configuration information for the related upstream channels followed by two reserved bytes ( The First 3 bytes correspond to MAC Flag Set 1, second 3 bytes to MAC Flag Set 2, etc). The definition of each slot configuration field is defined as follows:

b0	ranging control slot indicator for next 3 msec (6 msec for 256 kbit/s Upstream) period (msb)
b1-b6	slot boundary definition field for next 3 msec (6 msec for 256 kbit/s Upstream) period
b7	slot 1 reception indicator for [second] previous 3 msec (6 msec for 256 kbit/s Upstream) period
b8	slot 2 reception indicator for [second] previous 3 msec (6 msec for 256 kbit/s Upstream) period
b9	slot 3 reception indicator for [second] previous 3 msec (6 msec for 256 kbit/s Upstream) period
b10	slot 4 reception indicator for [second] previous 3 msec (6 msec for 256 kbit/s Upstream) period
b11	slot 5 reception indicator for [second] previous 3 msec (6 msec for 256 kbit/s Upstream) period
b12	slot 6 reception indicator for [second] previous 3 msec (6 msec for 256 kbit/s Upstream) period
b13	slot 7 reception indicator for [second] previous 3 msec (6 msec for 256 kbit/s Upstream) period
b14	slot 8 reception indicator for [second] previous 3 msec (6 msec for 256 kbit/s Upstream) period
b15	slot 9 reception indicator for [second] previous 3 msec (6 msec for 256 kbit/s Upstream) period
b16-17	reservation control for next 3 msec (6 msec for 256 kbit/s Upstream) period
b18-b23	CRC 6 parity

The slot configuration fields are used in conjunction with the MAC Flag Control field defined above. Note that when the MAC Flag Control field designates that a 1 msec (2 msec for 256 kbit/s Upstream) flag update is enabled; (1) the reception indicators refer to the previous 3 msec (6 msec for 256 kbit/s Upstream) period (the bracketed term [second] is omitted from the definition), (2) only the reception indicators which relate to slots which occur during the designated 1 msec (2 msec for 256 kbit/s Upstream) period are valid, and (3) the ranging control slot indicator, slot boundary definition field, and

reservation control field are valid and consistent during each 3 msec (6 msec for 256 kbit/s Upstream) period.

**Extension Flags** is a 26 byte field which is used when one or more 3.088 Mbit/s or 6.176 Mbit/s upstream QPSK links are used. The definition of the Extension Flags field is identical to the definition of the MAC Flags field above. The 'Extension Flags' field contains the MAC Flags from 9 to 16.

The **MAC Message** field contains a 40 byte message, the general format is defined in chapter 5.5.2.7.

**reserved field c** is a 4 byte field reserved for future use.

### 5.3.2.2 Frequency of IB Signalling Information

### **IB Downstream Time-Tick Definition**

In the case of IB, downstream time-tick T  $_{dn}$  is the 3 msec time marker Downstream (defined in chapter 5.4.2) (to derive the 6 msec period in the case of an upstream transmission bit rate of 256kbit/s, see chapter 5.4.4).

# **Upstream Marker and Slot Position Register Number**

The MAC Control Message structures must be transmitted one time every 3 msec with an enabled slot position register (slot\_position\_register\_enable = 1) and a valid upstream marker (upstream\_Marker\_enable = 1) (i.e. both are valid in the same packet).

### MAC Flag Control, MAC Flags & Extension Flags

The MAC Control Message structures containing MAC Flag Control, MAC Flags & Extension Flags must be transmitted so as to the NIU has at least 1 millisecond to process the MAC Flag Information. This information shall be received by the NIU between two downstream time-ticks (see chapter 5.3.1.3).

# **MAC Messages**

Additional MAC Control Message structures containing only MAC messages, i.e. with a disabled slot position register ( slot\_position\_register\_enable = 0), a disabled upstream marker (upstream marker enable = 0) may be transmitted at any time.

### 5.3.3 Return Interaction Path (Upstream)

### 5.3.3.1 Slot Format

The format of the upstream slot is shown in Figure 22 below. A Unique Word (UW) (4 bytes) provides a burst mode acquisition method. The payload area (53 bytes) contains a single message cell. The RS Parity field (6 bytes) provides t=3 Reed Solomon protection RS(59,53) over the payload area. The Guard band (1 byte) provides spacing between adjacent packets.

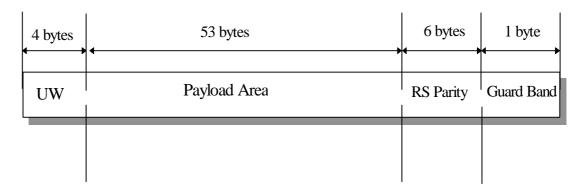


Figure 22: Slot format

The structure and field coding of the message cell shall be consistent with the structure and coding given in ITU-T Recommendation I.361 for ATM UNI.

### **Unique Word**

The unique word is four bytes long: CC CC CD D hex. The unique word for minislots is four bytes: CC CC CC DE hex, transmitted in this order.

### **ATM Cell Structure**

The format for each ATM cell structure is illustrated below. This structure and field coding shall be consistent with the structure and coding given in ITU-T Recommendation I.361 for ATM UNI.

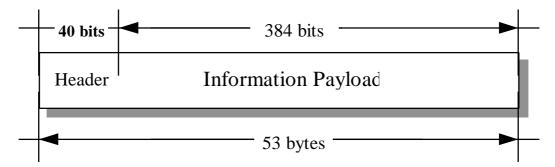


Figure 23: ATM cell format

The entire header (including the HEC byte) shall be protected by the Header Error Control (HEC) sequence. The HEC code shall be contained in the last byte of the ATM header. The HEC sequence shall be capable of:

- single-bit error correction
- multiple-bit error detection

Error detection in the ATM headere shall be implemented as defined in [21]. The HEC byte shall be generated as described in [21], including the recommended modulo-2 addition (XOR) of the pattern 01010101b to the HEC bits. The generator polynomial coefficient set used and the HEC sequence generation procedure shall be in accordance with [21].

### **Channel Coding**

Reed-Solomon encoding shall be performed on each ATM cell with T=3. This means that 3 erroneous byte per ATM cell can be corrected. This process adds 6 parity bytes to the ATM cell to give a codeword of (59,53). The shortened Reed-Solomon Code shall be implemented by appending 196 bytes, all set to zero, before the information bytes at the input of a (255,249) encoder; after the coding procedure these bytes are discarded.

The Reed-Solomon code shall have the following generator polynomials:

Code Generator Polynomial:  $g(x) = (x + \mu^0)(x + \mu^1)(x + \mu^2)...(x + \mu^5),$ 

where  $\mu = 02$  hex

Field Generator Polynomial:  $p(x) = x^8 + x^4 + x^3 + x^2 + 1$ 

#### **Guard Band**

The guard band is 1 byte long (4 QPSK symbols). It provides some extra protection against synchronisation errors.

For the minislot slot format see chapter 5.6.2.

# 5.3.4 Minimum Processing Time

The NIU has to be able to process the boundary information in the Mac flag sets within 1 millisecond.

# 5.4 Slot Timing Assignment

# 5.4.1 Downstream Slot Position Reference (Downstream OOB)

Upstream synchronisation is derived from the downstream extended superframe (OOB) by noting the slot positions as shown in Table 14.

Table 14: Downstream slot position reference

Frame	Bit	Overhead	Slot position
Number	Number	Bit	reference
1	0	M1	◆ Slot Position <sup>1</sup>
2	193	C1	
3	386	M2	
4	579	F1 = 0	
5	772	M3	
6	965	C2	
7	1158	M4	
8	1351	F2 = 0	
9	1544	M5	<ul> <li>Slot Position</li> </ul>
10	1737	C3	
11	1930	M6	
12	2123	F3 = 1	
13	2316	M7	
14	2509	C4	
15	2702	M8	
16	2895	F4 = 0	
17	3088	M9	◆ Slot Position
18	3281	C5	
19	3474	M10	
20	3667	F5 = 1	
21	3860	M11	
22	4053	C6	
23	4246	M12	
24	4439	F6 = 1	

<sup>&</sup>lt;sup>1</sup>: The first slot position is also called the 3 msec time marker in the case of 1.544 Mbit/s rate downstream. For the 3.088 Mbit/s rate downstream, the 3 msec time marker only appears once every two superframes. The M12 bit (see chapter 5.4) is used to differentiate between the two superframes.

# 5.4.2 Downstream Slot Position Reference (Downstream IB)

Upstream synchronisation is derived from the Transport Streamby noting the 3 msec time marker Downstream as shown in Figure 24. From the bits of the upstream marker field contained in the MPEG-2 TS packet, the 3 msec time marker is obtained by counting a number of symbol clocks equal to (b23-b8). This marker is equivalent to the first slot position of the superframe for the OOB case.

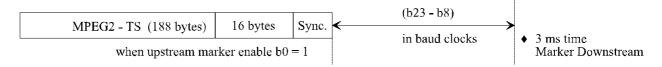


Figure 24: Position of the 3 msec time marker for IB signalling

In order to describe how the US slot position is derived from the location of the DS 3 msec time marker at the NIU, consider the following system diagram.

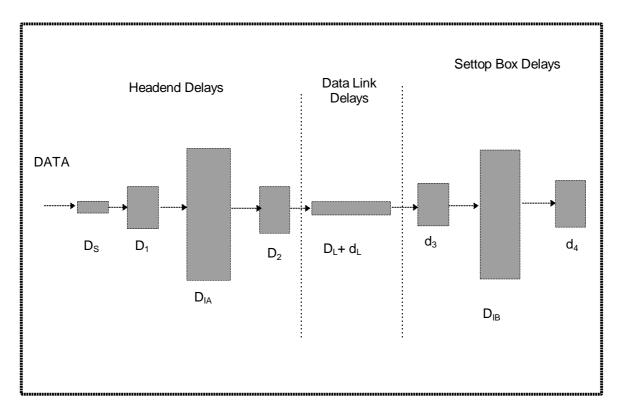


Figure 25: System Model for Timing Analysis

The delay between the location of the end of the Upstream Marker and the beginning of the next Sync byte, designated as D s, is a constant value for each bit rate equal to the equivalent time of 197 bytes, or

(197 \* 8 /x) symbol clocks

where

x = 4, for 16 QAM

5, for 32-QAM

6, for 64 QAM

7, for 128-QAM

8. for 256 QAM

There will be some processing delay in the Headend hardware between the location where the Upstream Marker is inserted in the MAC packet and the arrival of the data into the interleaver. This should be a constant delay,  $D_1$ , which is the same for every incoming byte, including the sync byte following the Upstream Marker.

The delay due to the interleaving process in the Headend is D <sub>IA</sub> and will be zero for each sync byte.

There will be some processing delay in the Headend hardware between the output of the interleaver and the output of the QAM modulator. This should be a constant delay, D  $_2$ , for every byte in the outgoing stream.

The data link is composed of two delay values, D  $_{\rm L}$  ,the constant link delay that every STU experiences, and d $_{\rm L}$ , the variable link delay for each STU which is due to the fact that each STU is located at a different distance from the Headend. This variable link delay is compensated for by the ranging operation.

There will be some processing delay in the STU hardware between the input of the QAM demodulator and the input of the de-interleaver. This delay is design dependent, d $_3$ , and may be a constant delay or a variable delay for each byte in the data stream.

The delay due to the de-interleaving process in the STU is D  $_{\rm IB}$ , and will be equal to the entire interleave delay for each sync byte.

The total interleave delay,

 $D_I = D_{IA} + D_{IB}$ 

will be constant for each byte. The value will be given by

 $D_1 = 204 * 8 * (interleave depth-1) / bit rate$ 

for example, if the modulation is QAM 64 with a baud rate of 5.0 Mbit/s,

 $D_1 = 204 * 8 * 11 / 30M = 598.4$  microseconds or 2,992 symbol clocks

There will be some processing delay in the STU hardware between the output of the de-interleaver and the circuitry that utilises the Upstream marker and following sync byte for generating the local 3 msec time marker. This delay, which includes Reed Solomon FEC, is design dependent, d  $_4$ , and may be a constant delay or a variable delay for each byte in the data stream.

The accumulated delay in the data link is composed of a number of constant terms and three variable terms. The constant terms will be identical for every STU that is utilising a particular QAM channel for in-band timing and thus becomes a fixed offset between when the counter which is loading the Upstream Marker value and the actual location of the 3 msec time marker at each STU. Each STU is responsible for compensating for the design dependent delays, d 3 and d4, before utilising the Upstream Marker value for generating the 3 msec time marker. The variable link delay,

 $d_L$ , will be compensated for via the ranging algorithm, in the same way as performed when out-of-band signaling is employed.

# 5.4.3 Upstream Slot Positions

Transmission on each QPSK upstream channel is based on dividing access by multiple NIU units by utilising a negotiated bandwidth allocation slot access method. A slotting methodology allows the transmit slot locations to be synchronised to a common slot position reference, which is provided via the related downstream MAC control channel. Synchronising the slot locations increases message throughput of the upstream channels since the ATM cells do not overlap during transmission.

The slot position reference for upstream slot locations is received via the related downstream MAC control channel by each NIU. Since each NIU receives the downstream slot position reference at a

slightly different time, due to propagation delay in the transmission network, slot position ranging is required to align the actual slot locations for each related upstream channel. The upstream slot rates are 12000 upstream slots/sec when the upstream transmission rate is 6.176 Mbit/s, 6000 upstream slots/sec when the upstream transmission bit rate is 3.088 Mbit/s, 3000 upstream slots/sec when the upstream transmission bit rate is 1.544 Mbit/s and 500 upstream slots/sec when the upstream transmision bit rate is 256 kbit/s.

The number of slots available in any one second is given by:

### number of slots/sec = upstream transmission bit rate / 512 - (extra guardband)

where extra guardband may be designated between groups of slots for alignment purposes.


The M-bits in the SL-ESF serve two purposes:

- to mark the slot positions for the upstream Contention and Reservation and Fixed Rate based signalling links (see chapter 5.4);
- to provide slot count information for upstream message bandwidth allocation management in the NIU.

M-bits M1, M5, and M9 mark the start of an upstream slot position for upstream message transmission.

#### 5.4.3.1 Rate 256 kbit/s

In the case where the upstream transmission bit rate is 256 kbit/s and the downstream OOB rate is 1.544 Mbit/s, the upstream slots are numbered as follows:

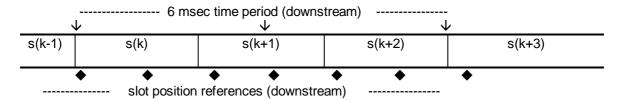


where k is a multiple of 3. In the case where the downstream OOB rate is 3.088 Mbit/s, there are 12 slot position references downstream during the transmission of 3 upstream packets. In the case of IB downstream, packet « k » is sent when the 3 msec time marker is received.

The relationship between the received slot position reference and the actual slot transmit position is given by:

slot transmit position = slot position reference (valid) + slot position offset

where only the slot\_position\_references


which cause the upstream\_slot\_position\_counter to be loaded with an integer value are valid (see chapter 5.4.4), and the slot\_position\_offset is derived from the Time\_Offset\_Value provided via the Range\_and\_Power\_Calibration\_Message in the MAC protocol.

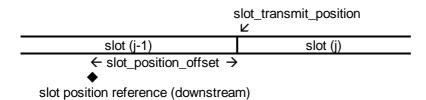

In the case where the upstream transmission bit rate is 256 kbit/s, the actual slot transmission locations correspond directly to the slot transmit positions.

### 5.4.3.2 Rate 1.544 Mbit/s

In the case where the upstream transmission bit rate is 1.544 Mbit/s and the downstream OOB rate is 1.544 Mbit/s, the upstream slots are numbered as follows:

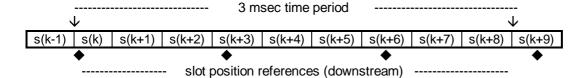


where k is a multiple of 9. In the case where the downstream OOB rate is 3.088 Mbit/s, there are 6 slot position references downstream during the transmission of 9 upstream packets. In the case of IB downstream, packet « k » is sent when the 3 msec time marker is received.

The relationship between the received slot position reference and the actual slot transmit position is given by:

slot transmit position = slot position reference(valid) + slot p osition offset

where only the slot\_position\_references which cause the upstream\_slot\_position\_counter to be loaded are valid (see chapter 5.4.4), and the slot\_position\_offset is derived from the Time\_Offset\_Value provided via the Range\_and\_Power\_Calibration\_Message in the MAC protocol.

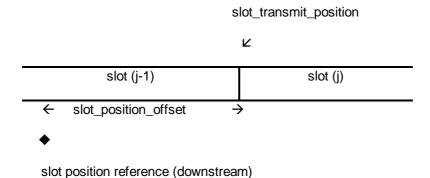

In the case where the upstream transmission bit rate is 1.544 Mbit/s, the actual slot transmission locations are given by


 $slot_{transmission_{location}}(m) = slot_{transmit_{position}} + (m \times 512);$ 

where m = 0,1,2; is the position of the slot with respect to the slot\_transmit\_position. This leaves a free time interval (FI = 8bits) before the next slot\_transmit\_position occurs, during which no NIU transmits anything.

	Slot_transmit_po	sition		slot_transmit_position ∠
	← location 0	← location 1	← location 2	
previous slot	slot 0(m=0)	slot 1(m=1)	slot 2(m=2)	F next slot
	512 bits	512 bits	512 bits	8

### 5.4.3.3 Rate 3.088 Mbit/s

In the case where the upstream transmission bit rate is 3.088 Mbit/s and the downstream OOB rate is 1.544 Mbit/s, the upstream slots are numbered as shown below, where k is a multiple of 18.

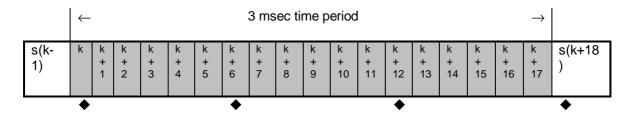


3 slot position references (downstream) per 3 msec time period

In the case where the downstream OOB rate is 3.088 Mbit/s, there are 6 slot position references downstream during the transmission of 18 upstream packets. In the case of IB downstream, packet « k » is sent when the 3 msec time marker is received.

The relationship between the received slot position reference and the actual slot transmit position is given by:

slot transmit position = slot position reference(valid) + slot position offset

where only the slot\_position\_references which cause the upstream\_slot\_position\_counter to be loaded are valid (see chapter 5.4.4), and the slot\_position\_offset is derived from the Time\_Offset\_Value provided via the Range\_and\_Power\_Calibration\_Message.

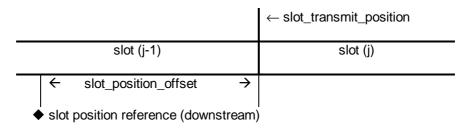

In the case where the upstream transmission bit rate is 3.088 Mbit/s, the actual slot transmission locations are given by


slot\_transmission\_location (m) = slot\_transmit\_position + (m \* 512);

where m = 0,1,2,3,4,5; is the position of the slot with respect to the slot\_transmit\_position. This leaves a free time interval (FI = 16 bits)) before the next slot\_transmit\_position occurs, during which no NIU transmits anything.

	←slot_transmit_position						←slot_transmit_position	
	← loc 0	← loc 1	← loc 2	← loc 3	← loc 4	← loc 5		
previous slot	slot 0 (m=0)	slot1 (m=1)	slot 2 (m=2)	slot 3 (m=3)	slot 4 (m=4)	slot 5 (m=5)	F L	next slot
	512 bits	512 bits	512 bits	512 bits	512 bits	512 bits	1 6 b i t s	

### 5.4.3.4 Rate 6.176 Mbit/s

In the case where the upstream transmission bit rate is 6.176 Mbit/s and the downstream OOB rate is 1,544 Mbit/s, the upstream slots are numbered as shown below, where k is a multiple of 36.

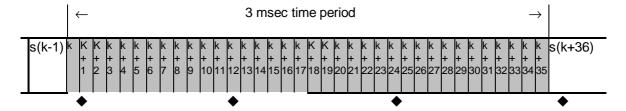


3 slot position references (downstream) per 3 msec time period

In the case where the downstream OOB rate is 3,088 Mbit/s, there are 6 slot position references downstream during the transmission of 36 upstream packets. In the case of IB downstream, packet « k » is sent when the 3 ms time marker is received.

The relationship between the received slot position reference and the actual slot transmit position is given by:

slot transmit position = slot position reference(valid) + slot position offset


where only the slot\_position\_references which cause the upstream\_slot\_position\_counter to be loaded are valid (see chapter 5.4.4), and the slot\_position\_offset is derived from the Time\_Offset\_Value provided via the Range\_and\_Power\_Calibration\_Message.

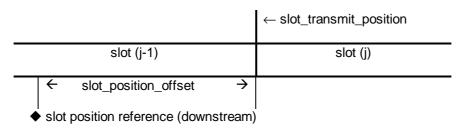

In the case where the upstream transmission bit rate is 6.176 Mbit/s, the actual slot transmission locations are given by

slot\_transmission\_location (m) = slot\_transmit\_position + (m \* 512);

where m = 0,1,2,3,4,5,6,7,8,9,10,11; is the position of the slot with respect to the slot\_transmit\_position. This leaves a free time interval (FI = 32 bits)) before the next slot\_transmit\_position occurs, during which no NIU transmits anything.

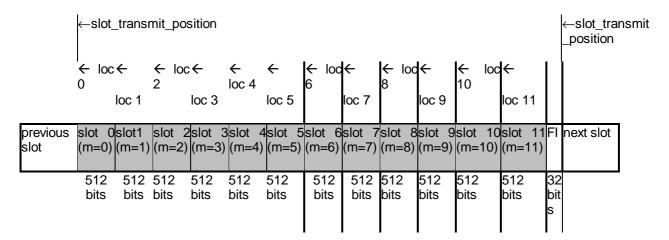

### 5.4.4 Slot Position Counter

Theink M-bits M10 - M1 are as-a register, called the upstream slot position register, which counts from 0 to N, incrementing by one every 3 msec, where N is an unsigned integer which indicates slot position cycle size (the value of N is calculated from Service\_Channel\_Last\_Slot sent in the Default Configuration Message and the upstream transmission bit rate of the service channel. For the case of a 256 kbit/s service channel, the maximum value of Service\_Channel\_Last\_Slot is 1535, for the cases of 1.544 Mbit/s and 3.088 Mbit/s the maximum value is imposed to be 8189, and for the case of 6.176 Mbit/s the maximum value is imposed to be 8171. The value of N shall be the same for all DS carriers, and N is related to the number of US slots by:

```
Number_of_US_Slots = 3 * m * (N+1), where m is related to US rate as described below.
```

The upstream slot position register indicates the upstream slot positions that will correspond to the next SL-ESF frame. There are 12 upstream slots per msec when the upstream transmission bit rate is 6.176 Mbit/s, 6 upstream slots per msec when the upstream transmission bit rate is 3.088 Mbit/s, 3 upstream slots per msec when the upstream transmission bit rate is 1.544 Mbit/s, and there is 0,5 upstream slot per msec when the upstream transmission bit rate is 256 kbit/s. The corresponding upstream slot rates are, therefore, 12000 upstream slots/sec when the upstream transmission bit rate is 3.088 Mbit/s, 3000 upstream slots/sec when the upstream transmission bit rate is 3.088 Mbit/s, 3000 upstream slots/sec when the upstream transmission bit rate is 2.56 kbit/s.

There are 36 upstream minislots per msec when the upstream data rate is 6.176 Mbit/s, there are 18 upstream minislots per msec when the upstream data rate is 3.088 Mbit/s, there are 9 upstream minislots per msec when the upstream data rate is 1.544 Mbit/s, and there are 1.5 upstream minislots per msec when the upstream data rate is 256 kbit/s. The corresponding upstream minislot rates are, therefore, 36000 upstream minislots/sec when the upstream data rate is 6.176 Mbit/s, 18000 upstream minislots/sec when the upstream data rate is 3.088 Mbit/s, 9000 upstream minislots/sec when the upstream data rate is 1.544 Mbit/s, and 1500 upstream minislots/sec when the upstream data rate is 256 kbit/s. The algorithm to determine the upstream slot position counter value is given below:

In the case of OOB downstream, the algorithm to determine the upstream slot position counter value is given below:

```
if (downstream_rate == 3.088 Mbit/s) {n = 1;}
else \{n = 0;\}
upstream slot position register = value of M -bits latched at bit position M11 (M10 - M1)
if (upstream_rate == 1.544 Mbit/s) {m = 3;}
else if (upstream_rate == 3.088 Mbit/s) {m = 6;}
     else if (upstream rate == 6.176 Mbit/s) {m = 12;}
          else \{m = 0.5\}
if (bit_position == M1 and previous M12 == 1)
      {upstream_slot_position_counter = upstream_slot_position_register * 3 * m;}
if (bit_position == M5)
      if ((n == 0)) or (n == 1) and previous M12 == 0)
            {upstream_slot_position_counter = upstream_slot_position_counter + m;}
if (bit_position == M9)
      if ((n == 0)) or (n == 1) and previous M12 == 1)
            {upstream_slot_position_counter = upstream_slot_position_counter + m;}
if (bit position == M11)
```

```
{temp_upstream_slot_position_register = (M10, M9, M8, ...., M1);}
if ( (bit_position == M12 and M12 == 1) )
{upstream_slot_position_register = temp_upstream_slot_position_register;}
```

where the M-bits will be defined as follows:

M1 - M10 = 10 bit ESF counter which counts from 0 to N with M10 the most significant bit (MSB);

M11 = odd parity for the ESF counter, i.e., M11 = 1 if the ESF Counter (M1 -M10) has an even number of bits set to 1;

M12 = 1: ESF counter valid

0; ESF counter not valid

The values assigned to M12 are as follows:

- (1) When the QPSK downstream channel bit rate is 1.544 Mbit/s, the M12 bit, is always set to the value '1'.
- (2) When the QPSK downstream channel bit rate is 3.088 Mbit/s, the information is always transmitted in pairs of superframe, where superframe-A is the first superframe in the pair, and superframe-B is the second superframe in the pair. In this case, the M12 bit of superframe-A is set to the value '0' and the M12 bit of superframe-B is set to the value '1'.
- (3) When the downstream channel is IB, M12 = 1.


In the case of IB downstream, the upstream slot timing should mimic that of the OOB downstream.

## 5.5 MAC Functionality

### 5.5.1 MAC Reference Model

The scope of this sub-clause is limited to the definition and specification of the MAC L ayer protocol. The detailed operations within the MAC layer are hidden from the above layers.

This sub-clause focuses on the required message flows between the INA and the NIU for Media Access Control. These areas are divided into three categories: Initialisation, Provisioning and Sign On Management, Connection Management and Link Management.

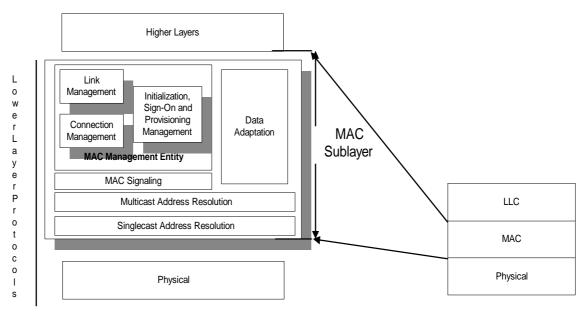

IEEE 802 Reference Model

Figure 26: MAC Reference Model

### 5.5.2 MAC Concept

### 5.5.2.1 Relationship Between Higher Layers and MAC Protocol

The goal of the MAC protocol is to provide tools for higher layer protocols in order to transmit and receive data transparently and independently of the physical layer. Higher layer services are provided by the INA to the STU. The INA is thus responsible of indicating the transmission mode and rate to the MAC layer for each type of service.

Specifically, for each connection provided by higher layers on the INA side (VPI/VCI), a connection ID is associated at the MAC layer. The maximum number of simultaneous connections that a NIU should support is defined as follows:

- Level A: Only one connection at a time can be handled by a NIU
- Level B: As many connections as needed, defined dynamically by the INA, following higher layers requests. Note that in this case all connections should be assigned to the same frequency upstream and downstream for implementation reasons.

Note however, that bandwidth (time slots) does not need to be assigned immediately by the INA for a given connection. This means that a connection ID may exist at the NIU side without associated slot numbers.

The INA is responsible of providing transmission bandwidth to the NIUs when needed by higher layers. However, since the NIU must transmit all data from the STU, the NIU is also responsible for requesting for more bandwidth if not already provided by the INA.

An initial connection is allocated to the STB by the INA, following the succesfull completion of sign-on at power up. This connection can be used to send data from higher layers leading to further interactive connections. Note that this connection can be associated to a zero transmission rate (no initial bandwidth allocation).

# 5.5.2.2 Relationship Between Physical Layer and MAC Protocol

Up to 8 QPSK Upstream channels can be related to each downstream channel which is designated as a MAC control channel. These upstream channels can be used in different, physically separated coaxial cells where space division multiplexing (SDM) is applied or within a single cell where frequency division

multiplexing (FDM) is applied. Mixed scenarios where space and frequency division multiplexing is applied in either upstream or downstream direction are also possible. Network scenarios showing when to apply SDM or FDM can be found in [D]. An example of a frequency allocation for the FDM scenario is shown in Figure 27. This relationship consists of the following items:

- Each of these related upstream channels share a common slot position. This reference is based on 1 millisecond time markers in case of OOB and 3 milliseconds time markers in case of IB that are derived via information transmitted via the downstream MAC control channel.
- 2) Each of these related upstream channels derive slot numbers from information provided in the downstream MAC control channel.
- 3) The Messaging needed to perform MAC functions for each of these related upstream channels is transmitted via the downstream MAC control channel.

The Media Access Control Protocol supports multiple downstream Channels. In instances where multiple Channels are used, the INA shall specify a single OOB frequency called the Provisioning Channel, where NIU's perform Initialisation and Provisioning Functions. If both 1.544 Mbit/s and 3.088 Mbit/s downstream OOB channels coexist on the network, there should be one provisioning channel with each rate. Also, in networks where IB NIUs exist, provisioning should be included in at least one IB channel. An aperiodic message is sent on each downstream control channel which points to the downstream Provisioning Channel. In instances where only a single frequency is in use, the INA shall utilise that frequency for Initialisation and Provisioning functions.

The Media Access Control protocol supports multiple upstream channels. One of the available upstream channels shall be designated the Service Channel. It may be necessary to provide a Backup Service Channel to make the system more reliable e.g. in a noisy environment. The Service Channel and the Backup Service Channel, respectively, shall be used by NIU's entering the network via the Initialisation and Provisioning procedure. The remaining upstream channels shall be used for upstream data transmission. In cases where only one upstream channel is utilised, the functions of the Service Channel shall reside in conjunction with regular upstream data transmission.

The Provisioning channel is the frequency channel on which the Default configuration message is transmitted. There can be several Provisioning channels in the system.

The Service channel is the frequency channel to which the Default configuration message field Service channel frequency points. The ranging following the Default configuration message is carried out on that Service channel. There can be several Service channels in the system.

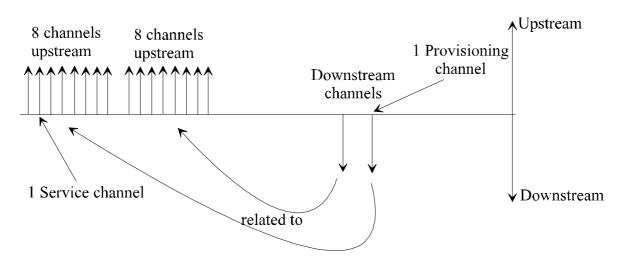


Figure 27: Example of a frequency allocation for the FDM scenario

### Upstream frequency change

All connections of a NIU are on the same frequency channel. The upstream frequency can be changed by Reprovision or Transmission control message (see chapters 5.5.10.2 and 5.5.10.4). If any of these messages change the frequency, the frequency is changed immediately, all connections remain established in any case.

When no stop\_upstream\_transmission command was given before or in the Reprovision or Transmission control message, sign-on is entered immediately after the upstream frequency change, reservation grants are lost and fixed rate slots are kept. (If the frequency change was made by the <MAC> Transmission Control Message, the fixed rate slot assignments remain the same. If the frequency change was made by the <MAC> Reprovision Message, the fixed rate slot assignments remain the same except if new slot assignments are provided in this message.)

When a stop\_upstream\_transmission command was given, sign-on is performed after a start\_upstream\_transmission command was received, reservation grants are lost and fixed rate slots are kept.

If any upstream transmission parameters besides the upstream frequency have been changed, reservation grants as well as fixed rate slots are lost, the connection is still kept.

### Downstream frequency channel types

There are three types of content in the downstream direction MAC messages and MAC flags, data and video. There can be two types of physical channels: QSPK and QAM downstream channels. The QAM downstream channel may carry either MPEG or MAC messages directly on the physical layer frame structure. The possible combinations of the content and physical channels are shown in the following

Table 15: Possible combinations of downstream content types and physical channels (NIU Capabilities)

	M	AC	Data		
Case	ООВ	IB	QPSK	QAM	
1	Х		Х		
2	Х			Х	
3	Х		Х	Х	
4		Х		Х	

table.

### Combination establishment

The NIU tunes to either a QPSK or QAM channel on which it locates the provisioning channel. The NIU tunes to it and gets its MAC information on that channel. If the Connect message gives a new downstream frequency, the MAC information is found on that frequency, if it is the same type of frequency channel.

# Change of downstream frequency

The downstream frequency can be changed by using either Reprovision or Transmission control message (see chapters 5.5.10.2 and 5.5.10.4). All NIU's connections which use the same physical frequency channel (DS QPSK or DS QAM) are located on the same frequency. When the downstream frequency changes the connections on the earlier downstream frequency remain established in any case.

When no stop\_upstream\_transmission command was given before or in the Reprovision or Transmission control message, no sign-on is performed, reservation grants are lost and fixed rate slots are kept.

When a stop\_upstream\_transmission command was given, sign-on is performed after a start upstream transmission command, reservation grants are lost and fixed rate slots are kept.

# Change of combination

The combination can be changed with Connect message only immediately after the sign-on procedure or with Reprovision message at any time. The signalling channel cannot be changed to a different type of downstream channel.

# 5.5.2.3 Relationship Between Physical Layer Slot Position Counter and MAC Slot Assignment

M10 - M1 is a 10-bit superframe counter at the INA side, whereas the upstream slot position counter is an upstream slot counter at the NIUs side. The NIU slot position counter (M10 - M1  $\times$  3  $\times$  m, where m = 0.5 for 256 kbit/s, m = 3 for 1.544 Mbit/s, m = 6 for 3.088 Mbit/s and m = 12 for 6.176 Mbit/s) may be implemented as a 16-bit counter which is compared to the 13-bit slot numbers assigned by the INA in MAC messages (list assignment). When the counter value equals any assigned value, the NIU is allowed to send a packet upstream.

## 5.5.2.4 Access Modes (Contention / Ranging / Fixed rate / Reservation)

Different access modes are provided to the NIUs within access regions specified by information contained in the slot boundary fields of the downstream superframes. The limits between access regions allow users to know when to send data on contention without risks of collision with data of Reservation or Fixed Rate regions. Also, the separation between reservation and fixed rate regions provides two ways of assigning slots to NIUs. The following rules define how to select access modes:

#### Data connections:

When the INA assigns a connection ID to the NIU, it either specifies a slot list to be used (Fixed rate access) or the NIU shall use contention or reserved access by following this algorithm:

When the NIU must send more cells for a specific VPI/VCI than what was assigned by the INA, it can use contention access only if the number of cells transmit Maximum contention access message length (specified in the MAC Connect Message from the INA). The details of the contention access mechanism is explained below under a). The NIU can send one reservation access if the number cells of Maximum\_reservation\_access\_message\_length (specified in the MAC Connect Message from the INA). If more cells must be transmitted, the NIU must send multiple requests for reservation access. If the NIU/STB is forced to use reservation access, and it has not yet been assigned a Reservation\_ID, then it shall wait for an assignment before transmitting.

### MAC messages:

MAC messages can be sent on contention access or reservation access.

Note that the VPI/VCI=0x00/0x0021 connection used for MAC messages is always set up, so the INA does not assign a particular connection ID which is normally used for reservation requests. Thus, in order to use reservation access, slots assigned for other connections may be used for MAC messages.

# a) Contention Access

Contention Access indicates that data (MAC or bursty data traffic) is sent in the slots assigned to the contention access region in the upstream channel. It can be used either to send MAC messages or data. The VPI, VCI of the ATM cells are then used to determine the type and direction of the data in higher layers. Contention based access provides instant channel allocation for the NIU.

The Contention based technique is used for multiple subscribers that will have equal access to the signalling channel. It is possible that simultanuous transmissions occur in a single slot, which is called a

collision. The INA utilizes the reception indicators to inform the NIU's whether succesful reception of ATM cells has been obtained.

The NIU executes a separate contention process for each VPI/VCI connection that requires contention access. The contention process is initiated by transmitting the first cell in a contention slot. This contention slot is randomly chosen from the available contention slots in the first frame that contains at least one contention slot. The contention process has to wait until the reception indicator of the slot is received. If the indicator contains a positive acknowledgement, the cell has been successfully received, and the next cell, if present, can be transmitted by continuing the contention process. If the indicator contains a negative acknowledgement, a collision has been detected and the cell can be retransmitted according to the procedure defined below. If the reception indicator is not received (e.g. due to CRC error), the NIU proceeds as if a positive acknowledgement would have been received.

If a collision has occured the NIU is not obliged to retransmit the cell that was originally transmitted. Instead it may choose to update the contents of the cell, transmit another cell belonging to the same VPI/VCI connection, or not to retransmit at all. In the latter case, the NIU is not allowed to restart a contention process for the same VPI/VCI connection at an earlier slot than the latest possible contention slot in which it could have retransmitted the cell in the first contention process. Note that the allowed choices make it possible for the NIU to update the queue status when the cell to be retransmitted is a grant request.

A counter at the NIU/STB records the number, denoted by backoff\_exponent, of collisions encountered by a cell. The backoff\_exponent counter starts from a value determined by the Min\_Backoff\_Exponent variable. The backoff\_exponent is used to generate a uniform random number between 1 and 2^backoff\_exponent. This random number is used to schedule retransmission of the collided cell. In particular, the random number indicates the number of contention access slots the NIU/STB shall wait before it transmits. The first transmission is carried out in a random cell within the contentionbased access region. If the counter reaches the maximum number, determined by the Max\_Backoff\_Exponent variable, the value of the counter remains at this value regardless of the number of subsequent collisions. After a successful transmission the backoff\_exponent counter is reset to a value determined by the Min\_Backoff\_Exponent variable. Informational Statement: The random access algorithm is unstable; the INA is expected to have intelligence to detect an unstable state of the random access algorithm and to solve it.

For minislot contention resolution refer to chapter 5.6.3.

### b) Ranging Access

Ranging access indicates that the data is sent in a slot preceded and followed by slots not used by other users. These slots allow users to adjust their clock depending on their distance to the INA such that their slots fall within the correct allocated time. They are either in the ranging slots region when the ranging control slot indicator **b0** received during the previous superframe was 1 (or when b1-b6 = 55 to 63), or reserved if the INA indicates to the NIU that a specific slot is reserved for ranging(via the Ranging and Power Calibration Message). In the latter case, the NIU is forbidden from ranging in the ranging slots region before the assigned slot appears..

Simultaneous transmissions in ranging slots are resolved through the procedure defined in Figure 39.

# c) Fixed rate Access

NOTE: Fixed rate is c alled contentionless in DAVIC.

Fixedrate\_Access indicates that data is sent in slots assigned to the fixed rate based access region in the upstream channel. These slots are uniquely assigned to a connection by the INA. It's not allowed that the INA changes the boundary fields such that an assigned fixed rate slot doesn't fit anymore in the fixed slot region.

## d) Reservation Access

Reservation Access implies that data is sent in the slots assigned to the reservation region in the upstream channel. These slots are uniquely assigned once to a connection by the INA. This assignment

is made at the request of the NIU for a given connection. It is also allowed to use such assignment in the fixed rate region. One reservation grant only grants consecutive slots in the same type of region.

# 5.5.2.5 MAC Error Handling Procedures

Error handling procedures are under definition (Time out windows, power outage, etc.)

### 5.5.2.6 MAC Messages in the Mini Slots

MAC reservation request messages may also be transported in the minislot structure. The Start Field (SF) for the MAC messages is defined in **Figure 28**. Error correction and/or detection is performed using a 2 byte Reed Solomon code.

Reed-Solomon encoding shall be performed on the 14 bytes following the Unique Word with T=1. This process adds 2 parity bytes to the MAC Message in the Minislot to give a code word of (16,14). Reed-Solomon encoding is performed on the MAC Message in the Minislot before upstream data randomization. The shortened Reed-Solomon code shall be implemented by appending 239 bytes, all set to zero, before the information bytes at the input of a (255,253) encoder; after the coding procedure these bytes are discarded.

The Reed-Solomon code shall have the following generator polynomials:

Code Generator Polynomial:  $g(x) = (x + m^0)(x + m^1)$ 

where m=02hex

Field Generator Polynomial:  $p(x) = x^8 + x^4 + x^3 + x^2 + 1$ 

The SF byte, the 13 payload bytes and the 2 RS bytes of the minislots are randomised and differentially encoded as defined for upstream ATM cells, whereas the unique word is sent in clear and not differentially encoded.

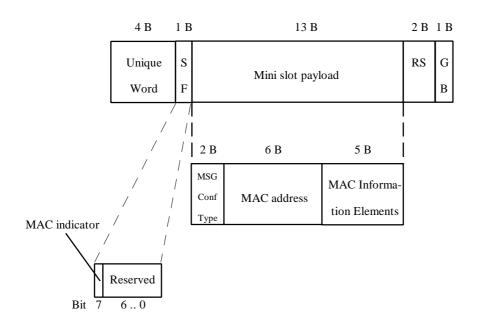


Figure 28: MAC messages in the minislots

Unique Word = 0xCCCCC0E

SF = Start Field (Bit 7: MAC indicator, always set to 1; Bit 6 .. 0: reserved, must be set to zero)

RS = Reed Solomon Bytes

GB = Guard Band

# **Reservation Request Message**

The Reservation Request Message has the same structure as in the case it is transported in the upstream ATM slot. The MAC message structure for carrying the Reservation Request Message is shown in Figure 29.

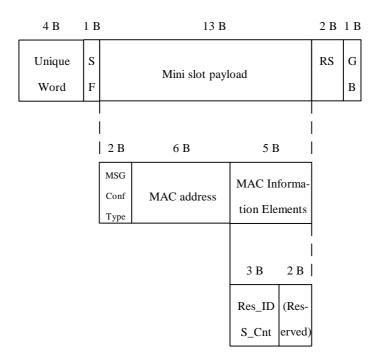


Figure 29: Reservation Request Message in the minislot MAC message structure

# 5.5.2.7 MAC Message Format

The MAC message types are divided into the logical MAC states of Initialisation, Sign On, Connection Management and Link Management. MAC messages are sent using Broadcast or Singlecast Addressing. Singlecast addressing shall utilise the 48-bit MAC address.

Table 16: MAC messages

Message Type Value		Transmit Direction	Addressing Type
raido	MAC Initialization, Provisioning and Sign-On Messages		
0x00	Used for fragmented messages (continued message) *)	up- / downstr.	Scast or Boast
0x01 0x02	Provisioning Channel Message Default Configuration Message	downstream	Broadcast Broadcast
0x03	Sign-On Request Message	downstream	Broadcast
0x04	Sign-On Response Message	upstream	Singlecast
0x05	Ranging and Power Calibration Message	downstream	Singlecast
0x06	Ranging and Power Calibration Response Message	upstream	Singlecast
0x07	Initialization Complete Message	downstream	Singlecast
0x08-0x0B	[Reserved]		
0x0C	Security Sign-on*)	downstream	Singlecast
0x0D	Security Sign-on Response *)	upstream	Singlecast
0x0E-0x1E	[Reserved]		
0x1F	Wait <sup>*)</sup>	upstream	Singlecast

	MAC Connection Establishment and Termination Msgs		
0x20	Connect Message	downstream	Singlecast
0x21	Connect Response Message	upstream	Singlecast
0x22	Reservation Request Message	upstream	Singlecast
0x23	Unused		Broadcast
0x24	Connect Confirm Message	downstream	Singlecast
0x25	Release Message	downstream	Singlecast
0x26	Release Response Message	upstream	Singlecast
0x28	Reservation Grant Message	downstream	Broadcast
0x29	Reservation ID Assignment	downstream	Singlecast
0x2A	Reservation Status Request	upstream	Singlecast
0x2B	Reservation ID Response Message	downstream	Singlecast
0x2C	Resource Request Message	upstream	Singlecast
0x2D	Resource Request Denied Message	downstream	Singlecast
0x2E-0x2F	[Reserved]		
0x30	Main Key Exchange *)	downstream	Singlecast
0x31	Main Key Exchange Response *)	upstream	Singlecast
0x32	Quick Key Exchange *)	downstream	Singlecast
0x33	Quick Key Exchange Response *)	upstream	Singlecast
0x34	Explicit Key Exchange *)	downstream	Singlecast
0x35	Explicit Key Exchange Response *)	upstream	Singlecast
0x36-0x3F	[Reserved]		
l l	MAC Link Management Messages		
0x27	Idle Message	upstream	Singlecast
0x40	Transmission Control Message	downstream	Scast or Bcast
0x41	Reprovision Message	downstream	Singlecast
0x42	Link Management Response Message	upstream	Singlecast
0x43	Status Request Message	downstream	Singlecast
0x44	Status Response Message	upstream	Singlecast
0x45-0x5F	[Reserved]		

Optional MAC messages for the security option

To support the delivery of MAC related information to and from the NIU, a dedicated Virtual Channel shall be utilised. The VPI,VCI for this channel shall be 0x00/0x0021. MAC Messages shall not be encrypted. Therefore, any ATM cell carrying a MAC Message shall have the least significant two bits of its GFC field set to 00. The most significant two bits of the GFC field are reserved for future use, and shall be set to 00.

The timer accuracy of the MAC messages shall be  $\pm 3$  msec in the NIU, and the INA shall take this into account.

## Upstream MAC messages:

AAL5 (as specified in Recommendation ITU -T I 363 ) adaptation shall be used to encapsulate each MAC PDU in an ATM cell. Upstream MAC information should be single 40 bytes cell messages.

# • Downstream OOB MAC messages:

AAL5 (as specified in Recommendation ITU -T I 363 ) adaptation shall be used to encapsulate each MAC PDU in an ATM cell. Downstream OOB MAC information may be longer than 40 bytes. All Downstream MAC messages shall be restricted to less than or equal to 120 bytes.

# Downstream IB MAC messages:

Downstream IB MAC messages are limited to a size of 120 bytes and must be carried in a single TS packet. Longer messages must be split into separate messages. No AAL5 layer is defined for MPEG-2 TS cells. MAC messages must therefore be sent as explained in chapter 5.3.2 using the three MAC Message Framing bits.

# • MAC Fragmentation Protocol (optional)

Larger security MAC messages up to 512 bytes may optionally be supported using the MAC fragmentation protocol. This cabability is indicated by the NIU in the MAC Sign On Response.

A multi-fragment MAC message is composed of consecutive individual MAC messages with Syntax Indicator equal to Fragment No MAC Address or Fragment MAC Address Included.

The Fragment\_Count field of each individual MAC message indicates the number of fragments remaining of the full message, decreasing by one for each consecutive fragment. Thus the first fragment has Fragment\_Count equal to the total number of fragments in the message, and the last fragment has Fragment\_Count == 1.

Furthermore, the type of MAC message is indicated by the Message\_Type field of the first fragment, whereas all subsequent fragments have Message\_Type == 0.

The sender of a fragmented MAC message must not interleave any other fragmented MAC messages for the same receiver into the string of fragments. This includes any fragmented broad-cast MAC messages, which must therefore not be sent while there are any incomplete fragmented messages outstanding.

MAC messages of unfragmented syntax type can be interleaved with fragments destined for the same NIU. They are deemed to have arrived before the fragmented message, and should be processed immediately.

The receiver of a fragmented MAC message must discard any message with missing fragments, as implied by the uniformly decreasing Fragment\_Count field in consecutive fragments. Likewise, it must discard any stray fragments with Message\_Type == 0, for instance in the case where the first fragment was lost during transport.

The length of each fragment is implied by its transport context: ATM/AAL-5 for upstream and OOB downstream, MPEG encapsulation for IB downstream, etc.

The MAC\_Information\_Elements fields of each fragment are concatenated to form the MAC\_Information\_Elements field of the full MAC message. The message type is conveyed in the first fragment.

In the upstream direction, all fragments must be of syntax type Fragment\_MAC\_Address\_Included, in order to allow the INA to use the MAC address to distinguish inter-mixed MAC messages and fragments coming from separate NIUs.

For a broad-cast in the downstream direction, each fragment is of syntax type Fragment\_No\_MAC\_Address. For a single-cast downstream message, the first fragment must be of syntax type Fragment\_MAC\_Address\_Included, and include the MAC address of the target NIU. Subsequent fragments can also include the same MAC address value, or can be Fragment\_No\_MAC\_Address, omitting the MAC address, when the INA ensures that the fragment is associated with the immediately preceding fragment in the transport stream, that is, not separated by messages or fragments for other NIUs.

Since MAC related information is terminated at the NIU and INA, a privately defined message structure will be utilised. The format of this message structure is illustrated below.

NOTE: All messages are sent most significant bit first.

NOTE: For all MAC messages where the parameter length is smaller than the field, the

parameter shall be right justified with leading bits set to 0. All reserved fields in the

MAC messages shall be set to 0.

NOTE: Message 0x23 is not used in the present release of the MAC protocol. It refers to

DAVIC 1.0 protocol which is not supported by this ETS.

NOTE: When no MAC\_Address is specified in the message, it means that the messag e is

sent broadcast. (Syntax indicator = 000)

NOTE: Negative integers are sent in 2's complement.

Table 17: MAC message structure

MAC_message(){	Bits	Bytes	Bit Number / Description
Message_Configuration		1	
Protocol_Version	5		
Syntax_Indicator	3		
Message_Type	8	1	
if (Syntax_Indicator == 001			
Syntax_Indicator == 011) {			
MAC_Address	(48)	(6)	
}			
if (Syntax_Indicator == 010			
Syntax_Indicator == 011)) {			
Reserved	(8)	(1)	
Fragment_Count	(8)	(1)	
}			
MAC_Information_Elements ()		N	
}			

## **MAC Information Elements**

 ${\tt MAC\_Information\_Elements} \ \ is \ a \ multiple \ byte \ field \ that \ contains \ the \ body \ of \ one \ and \ only \ one \ MAC \ message.$ 

# **Protocol Version**

Protocol\_Version is a 5-bit field used to identify the current MAC version. The value for this parameter is given in the following table.

Table 18: Protocol\_version coding

Value	Definition
0	DAVIC 1.0 Compliant device (not consistent with this document)
1	DAVIC 1.1 Compliant device
2	DAVIC 1.2 Compliant device
3-19	Reserved
20	EN 301 199 compliant device
21-28	Reserved
29	ETS 300 800 V2 and DAVIC 1.5 compliant device
30	ETS 300 800 V1 compliant device
31	Reserved

# **Syntax Indicator**

Syntax\_Indicator is a 3-bit enumerated type that indicates the addressing type contained in the MAC message.

```
Enum Syntax_Indicator {No_MAC_Address ,MAC_Address_Included, Fragment_No_MAC_Address, Fragment_MAC_Address, reserved 4..7};
```

### **MAC Address**

MAC\_Address is a 48-bit value representing the unique MAC address of the NIU. This MAC address may be hard coded in the NIU or be provided by external source.

# Fragment\_Count

Identification of fragment in a MAC message transmitted in multiple fragments. A MAC Message divided into N fragments, will be transmitted with Fragment Count = N, N-1, ... 1.

# 5.5.3 MAC Initialization and Provisioning

This sub-clause defines the procedure for Initialisation and Provisioning that the MAC shall perform during power on or Reset.

- 1) Upon a NIU becoming active (i.e. powered up), it must first find the current provisioning frequency. The NIU shall receive the <MAC> Provisioning Channel Message. This message shall be sent aperiodically (at least one in 900 msec) on all downstream channels carrying MAC information when there are multiple channels. In the case of only a single channel, the message shall indicate the current channel is to be utilised for Provisioning. Upon receiving this message, the NIU shall tune to the Provisioning Channel. In the case of IB downstream, the IB channel to be used during provisioning can additionally be given by using ETS 300 468.
- 2) After a valid lock indication on a Provisioning Channel, the NIU shall await the **CONFIGURATION MESSAGE**. When received, the NIU shall configure its parameters as defined in the default configuration message. The Default Configuration Parameters shall include default timer values, default power levels, default retry counts as well as other information related to the operation of the MAC protocol.

Figure 30 shows the signaling sequence.

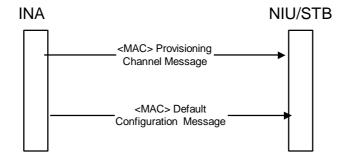


Figure 30: Initialisation and Provisioning signalling

# 5.5.3.1 <MAC> Provisioning Channel Message (Broadcast OOB Downstream)

The <MAC> PROVISIONING CHANNEL MESSAGE is sent by the INA to direct the NIU to the proper frequency where provisioning is performed. The format of the message is shown in the following table.

**Table 19: Provisioning Channel Message Structure** 

Provisioning_Channel_Message(){	Bits	Bytes	Bit Number /
		-	Description
Provisioning_Channel_Control_Field	8	1	
Reserved	7		7-1
	1		0: {no=0, yes=1}
Provisioning_Frequency_Included			
if			
(Provisioning_Frequency_Included) {			
Provisioning_Frequency	(32)	(4)	
DownStream_Type	(8)	(1)	
}			
}			

# **Provisioning Channel Control Field**

Provisioning\_Channel\_Control\_Field is used to specifywhich parameters are included in the message:

Provisioning\_Frequency\_Included is a boolean when set, indicates that a downstream frequency is specified that the NIU should tune to begin the provisioning process. When cleared, indicates that the current downstream frequency is the provisioning frequency.

### **Provisioning Frequency**

Provisioning\_Frequency is a 32-bit unsigned integer representing the Out-of-band Frequency in which NIU provisioning occurs. The unit of measure is Hz.

### **Downstream Type**

DownStream\_Type is an 8-bit enumerated type indicating the modulation format for the down stream connection. {QAM\_MPEG, QPSK\_1.544, QPSK\_3.088, , 3..255 reserved}}

# 5.5.3.2 <MAC> Default Configuration Message (Broadcast Downstream)

The <MAC> DEFAULT CONFIGURATION MESSAGE is sent by the INA to the NIU. The message provides default parameter and configuration information to the NIU. The format of the message is shown in the following table.

Table 20: Default configuration message structure

<pre>Default_Configuration_Message(){</pre>	Bits	Bytes	Bit Number / Description
Sign_On_Incr_Pwr_Retry_Count	8	1	
Service_Channel_Frequency	32	4	
Service_Channel_Control_Field		1	
MAC_Flag_Set	5		73
Service_Channel	3		20
Backup_Service_Channel_Frequency	32	4	
Backup_Service_Channel_Control_Field		1	
Backup_MAC_Flag_Set	5		73
Backup_Service_Channel	3		20
Service_Channel_Frame_Length	16	2	
Service_Channel_Last_Slot	16	2	
Max_Power_Level	8	1	
Min_Power_Level	8	1	
Upstream_Control_Field		1	
Reserved	5		73
Upstream_Transmission_Rate	3		20
Max_Backoff_Exponent	8	1	
Min_Backoff_Exponent	8	1	
Idle_Interval	16	2	
Absolute_Time_Offset	16	2	
frequency_ranging_step	8	1	
Number_of_Timeouts	8	1	
for (I=0; I <number_of_timeouts;i++) td="" {<=""><td></td><td></td><td></td></number_of_timeouts;i++)>			
Field		(1)	
Code	(4)	\	
Value	(4)		
}			
INA_Capabilities		4	
Encapsulation	8		3124
US_Bitrate	8		2316
DS_OOB_Bitrate	4		1512
Reserved	5		117
Resource_Request_Capable	1		6: {no,yes}
Fragmented_MAC_Messages	1		5: {no, yes}
Security_Supported	1		4: {no, yes}
Minislots_for_Reservation	1		3: {no,yes}
Reserved_for_DAVIC	1		2: must be 0
IB_Signalling	1		1: {no, yes}
OOB_Signalling	1		0: {no, yes}
}			, , , ,
·		4	1

# **Sign-On Increment Power Retry Count**

Sign\_On\_Incr\_Pwr\_Retry\_Count is an 8-bit unsigned integer representing the number of attempts the NIU should try to enter the system at the same power level before incrementing its power level by steps of max. 2 dB.

# **Service Channel Frequency**

Service\_Channel\_Frequency is a 32-bit unsigned integer representing the upstream frequency assigned to the service channel. The unit of measure is in Hz.

# MAC\_Flag\_Set

MAC\_Flag\_Set is a 5 bit field representing the first MAC Flag set assigned to the service channel. A downstream channel contains information for each of its associated upstream channels. This information is contained within structures known as MAC Flag Sets represented by either 24 bits (denoted b0..b23) or by 3 bytes (denoted Rxa, Rxb, Rxc). This information is uniquely assigned to a given upstream channel. Refer to chapter 5.3.1.3 and chapter 5.3.2.1 for the use of this parameter.

#### **Service Channel**

Service\_Channel is a 3-bit field which defines the channel assigned to the Service\_Channel\_Frequency. It identifies the logical channel (denoted by 'c') assigned to the NIU/STB. Refer to chapter 5.3.2.1 and chapter 5.3.3 for the use of this parameter.

### **Backup Service Channel Frequency**

Backup\_Service\_Channel\_Frequency is a 32 bit unsigned integer representing the upstream frequency assigned to the backup service channel. The backup service channel is used when entry on the primary service channel fails. The unit of measure is in Hz. If there is no Backup Service Channel, this parameter shall be equal to the Service Channel Frequency.

# Backup\_MAC\_Flag\_Set

Backup\_MAC\_Flag\_Set is an 5 bit field representing the first MAC Flag set assigned to the backup service channel. The function of this field is the same as the MAC\_Flag\_Set above but with respect to the backup service channel. If there is no Backup Service Channel, this parameter shall be equal to the MAC Flag Set.

### Backup\_Service Channel

Backup\_Service\_Channel is a 3-bit field which defines the channel assigned to the Backup Service\_Channel\_Frequency. The function of this field is the same as the Service\_Channel above but with respect to the backup channel. If there is no Backup Service Channel, this parameter shall be equal to the Service Channel.

# Service\_Channel\_Frame\_Length [reserved]

Unused in this version.

#### Service Channel Last Slot

Service\_Channel\_Last\_Slot is a 16-bit unsigned integer representing the largest slot value of the NIU's upstream slot position counter (as defined in chapter 5.4.4).

Only 13 lowest significant bits shall be considered. 3 MSB are reserved for future use.

Informative note: Since the value of <code>Service\_Channel\_Last\_Slot</code> equals ((N+1)  $\times$  3  $\times$  m) -1, where "N" is the maximum value of the upstream slot position register (M10-M1), and "m" is a constant dependent upon the upstream bit rate, (see chapter 5.4.4), one may use it to calculate the fixed number N. The NIU is capable of deriving the <code>Last\_Slot\_number</code> for each channel from N and the upstream bitrate of the respective channel.

## **Maximum Power Level**

MAX\_Power\_Level is a 8-bit unsigned integer representing the maximum power the NIU shall be allowed to use to transmit upstream. The unit of measure is in dBmicroV (RMS) on 75  $\Omega$ .

### **Minimum Power Level**

MIN\_Power\_Level is an 8-bit unsigned integer representing the minimum power the NIU shall be allowed to use to transmit upstream. The unit of measure is in dBmicroV (RMS) on 75  $\Omega$ .

# **Upstream Transmission Rate**

Upstream\_Transmission\_Rate is a 3-bit enumerated type that indicates the upstream transmission bit rate.

enum Upstream\_Transmission\_Rate {Upstream\_256K, Upstream\_1.544M, Upstream\_3.088M, Upstream\_6.176M, reserved 4..7};

### MIN\_Backoff\_Exponent

MIN\_Backoff\_Exponent is an 8-bit unsigned integer representing the minimum value of the backoff exponent counter.

# MAX\_Backoff\_Exponent

MAX\_Backoff\_Exponent is an 8-bit unsigned integer representing the maximum value of the backoff exponent counter. Only the 5 least significant bits are valid, the 3 most significant bits are reserved for future use.

# Idle Interval

Idle\_Interval is a 16-bit unsigned integer representing the predefined interval for the MAC Idle Messages. The unit of the measure is in seconds. The value of zero indicates that no Idle messages shall be sent.

### **Absolute Time Offset**

Absolute\_Time\_Offset is a 16-bit signed integer used to set the default Absolute\_Time\_Offset (defined in chapter 5.3.1.3) when first signing on. The unit of measure is 100 ns.

## **Frequency Ranging Step**

Used only for LMDS (EN 301 199).

## Number\_of\_Timeouts

Number\_of\_Timeouts is a 8-bit unsigned integer which identifies the number of timeout codes and values included in the message.

### Code

Code is a 4-bit unsigned integer which identifies the timeout or group of timeouts (according to Table 21, Table 22 and Table 51) for which the following value is given.

#### **Value**

Value is a 4-bit unsigned integer which gives the value for the timeout or group of timeouts identified by the preceeding code. The timeout can be derived from the following table:

Value	Timeout (ms)
0	Infinite (disabled)
1	9
2	30
3	60
4	90
5	300
6	600
7	900
8	3000
9	6000
10	9000
11	30000
12	60000
13	reserved
14	reserved
15	reserved

The value must be between the Min Value and the Max Value given in Table 21, Table 22 and Table 51 (if specified). If no values are given in the <MAC> Default Configuration Message, the default values apply.

**Table 21: Headend Timeout Values** 

Code	Transaction(s)	Default Value
0x0	Ranging and power calibration -> Ranging and power calibration response Connect -> Connect response (no frequency change) Release -> Release response Transmission control -> Link management response (no frequency change) Reservation ID assignment -> Reservation ID response Reprovision -> Link management response (no frequency change) Status request -> Status response message Init complete -> Connect response Init. complete -> Link management response	300
0x1	Connect -> Sign on response (only for frequency change) Reprovision -> Sign on response (only for frequency change) Transmission control -> Sign on response (only for frequency change)	3000

The Unit for the timeouts is msec.

These timeouts apply when the mentioned two messages are consecutive.

**Table 22: Terminal Timeout Values** 

Code	Transaction(s)	Default Value
0x2	Default configuration interval(time between two Def. Conf. msg) Sign on request interval	900
0x3	Sign on response -> Ranging and power calibration Sign on response -> Initialisation complete Ranging and power calibration response -> Ranging and power calibration Ranging and power calibration response -> Initialisation complete	90

	Connect response -> Connect confirm	
	Resource Request -> Release	
	Resource Request -> Reservation_ID assignement	
0x4	Initialization complete -> Connect	300
	Resource Request -> Resource Request Denied	
	Resource Request -> Connect	
	Resource Request -> Reprovision	

The Unit for the timeouts is msec.

These timeouts apply when the mentioned two messages are consecutive.

### **INA\_Capabilities**

INA\_Capabilities is a 32-bit field that indicates the capabilities of the INA. It has the following subfields:

Encapsulation is an 8-bit field that indicates the type(s) of encapsulation supported by the INA: {DIRECT\_IP, Ethernet\_MAC\_Bridging, PPP, reserved 3..7}

US\_Bitrate is an 8-bit field that indicates the upstream bitrate(s) supported by the INA: {256 kbit/s, 1.544 Mbit/s, 3.088 Mbit/s, 6.176 Mbit/s, reserved 4..7}

 $DS_OOB_Bitrate$  is a 4-bit field that indicates the downstream OOB bitrate(s) supported by the INA:  $\{1.544 \text{ Mbit/s}, 3.088 \text{ Mbit/s}, reserved 2..3}$ 

Reserved: Reserved for future use

Resource\_Request\_Capable is a 1-bit field that indicates if the INA is able to process <MAC> Resource Request Messages.

Fragmented\_MAC\_Messages is a 1-bit field that indicates that the INA is able to support MAC messages having the compound MAC\_Information\_Elements field of a single up to 512 bytes in size. This flag is also for backwards compatibility with INAs not supporting MAC message fragmentation and re-assembly. By not setting this bit, the INA indicates that it does not support fragmented MAC messages at all, and will not understand or utilise the Fragment\_No\_MAC\_Address and Fragment\_MAC\_Address\_Included MAC message syntax types.

Security\_Suported is a 1-bit field that indicates that the INA is able to support the security extensions specified in this protocol.

Minislots\_for\_Reservation is an 1-bit field that indicates that the INA is capable of utilizing minislots.

 ${\tt Reserved\_for\_DAVIC:} \ \textbf{Reserved for compatibility with DAVIC.}$ 

IB\_Signalling is an 1-bit field that indicates that the INA is capable of utilizing IB signaling.

OOB\_Signalling is an 1-bit field that indicates that the INA is capable of utilizing OOB signaling.

## 5.5.4 Sign On and Calibration

The NIU shall Sign On via the Sign-On Procedure. The signalling flow for Sign-On is described below.

- The NIU shall tune to the downstream Provisioning channel and the upstream service channel with the information provided in the Initialisation and Provisioning sequence.
- The NIU shall await the <MAC> Sign-On Request Message from the INA Entity.

- Upon receiving the <MAC> Sign-On Request Message, the NIU shall respond with the <MAC> Sign-On Response Message. The Sign-On Response Message shall be transmitted on a Ranging Slot. The NIU/STB shall either use settings of the last successful Sign-on procedure if it is enabled by the INA or the Min\_Power\_Level contained in the <MAC> Default Configuration Message.
- The INA, upon receiving the Sign-On Response Message shall validate the NIU, either sending
   <MAC> Initialisation Complete Message or the
   <MAC> Ranging and Power Calibration Message.
- The NIU shall respond to the <MAC> Ranging and Power Calibration Message with the <MAC> Ranging and Power Calibration Response Message. The <MAC> Ranging and Power Calibration Response Message shall be transmitted on a Ranging Slot (which can either be in the ranging region (b0=1) or reserved region (if a ranging slot number is given in the message). The calibration sequence is not always necessary.
- The INA shall send the <MAC> Initialisation Complete Message when the NIU is calibrated. The NIU is assumed to be calibrated if the message arrives within a window of +/-0.75 symbols (upstream rate) and a power within a window of +/- 1.5 dB from their optimal value.

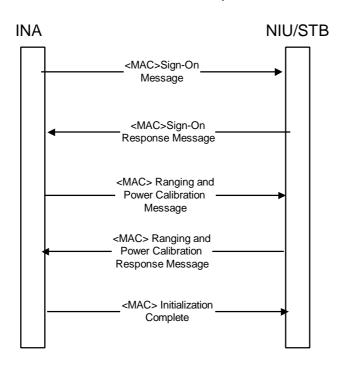


Figure 31: Ranging and Calibration Signalling

A more detailed description of the ranging and calibration process, including state diagrams and time outs, is given in chapter 7 (Informative Note A).

# 5.5.4.1 <MAC> Sign-On Request Message (Broadcast Downstream)

The <MAC> Sign-On Request message is issued periodically by the INA to allow a NIU to indicate its presence in the network. The format of this subcommand is shown in the following table.

Table 23: Sign-On Request Message Structure

Sign-On_Request_Message(){	Bits	Byte	Bit Number / Description
		S	-
Sign-On_Control_Field		1	
Reserved	6		72
Need_Calibration	1		1: {0=enable rapid sign-on,
			1=disable rapid sign-on}
Address_Filter_Params_Included	1		0: {no,yes}
Response_Collection_Time_Window	16	2	
if (Sign-On_Control_Field &=			
Address_Filter_Params_Included {			
Address_Position_Mask	(8)	(1)	
Address_Comparison_Value	(8)	(1)	
}			
}			

# Sign-On Control Field

Sign-On\_Control\_Field specifies what parameters are included in the SIGN-ON REQUEST:

Need\_Calibration indicates to the NIU that it has to enter the sign-on process starting with the Min\_Power\_Level and Absolute\_Time\_Offset (and Frequency\_Offset for LMDS) defined in the <MAC> Default\_Configuration\_message. This bit is not to be taken into account the first time the NIU engages the sign-on process after power on, in this case it always starts with the parameters defined in the <MAC> Default\_Configuration\_message.

Address\_Filter\_Params\_Included is a boolean, when set, indicates that the NIU should respond to the SIGN-ON REQUEST only if its address matches the filter requirements specified in the message.

# **Response Collection Time Window**

Response\_Collection\_Time\_Window is a 16-bit unsigned integer that specifies the maximum time for the SIGN-ON RESPONSE message transmission randomisation . The unit of measure is the millisecond (ms).

### **Address Position Mask**

Address\_Position\_Mask is an 8-bit unsigned integer that indicates the bit positions in the NIU MAC address that are used for address filtering comparison. The bit positions are comprised between bit number Mask and Mask+7. Mask = 0 corresponds to the 8 LSBs of the address, i.e., it represents the number of bits shifted to the left. The maximum value is 40.

### **Address Comparison Value**

Address\_Comparison\_Value is an 8-bit unsigned integer that specifies the value that the NIU should use for MAC address comparison.

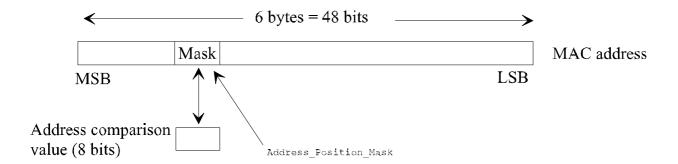


Figure 32: Position of Mask in MAC address

# 5.5.4.2 <MAC> Sign-On Response Message (Upstream Ranging)

The <MAC> Sign-On Response Message is sent by the NIU in response to the <MAC> Sign-On Request Message issued by the INA Entity. The NIU shall wait for a random time less than Response\_Collection\_Time\_Window to send this message.

If the sign-on procedure did not start at the Min\_Power\_Level (see chapter 5.5.4), when the NIU has not received any response from the INA after Sign\_On\_Incr\_Pwr\_Retry\_Count attempts, it must retry with the Min\_Power\_Level.

Table 24: Sign-On response Message structure

Sign-On_Response_Message(){	Bits	Bytes	Bit Number /
Oigh On_recoponioc_wecouge()[	Dito	Dytos	Description
NIU/STB_Status		4	Bocomption
Reserved	29	-	313
Network_Address_Registered	1		2:{no, yes}
Connection_Established	1		1:{no, yes}
Reserved for compatibility	1		0
NIU/STB Error Code	'	2	-
Reserved	13	_	153
Connect_Confirm_Timeout	1		2:{no, yes}
First_Connection_Timeout	1		1:{no, yes}
Range_Response_Timeout	1		0:{no, yes}
NIU/STB_Retry_Count	8	1	( , 1 )
NIU/STB_Capabilities	-	4	
Encapsulation	8	-	3124
US_Bitrate	8		2316
DS_OOB_Bitrate	4		1512
Reserved	5		117: {no, yes}
Resource_Request_Capable	1		6: {no,yes}
Fragmented_MAC_Messages	1		5:{no, yes}
Security_Supported	1		4:{no, yes}
Minislots_for_Reservation	1		3: {no,yes}
Reserved_for_DAVIC	1		2: must be zero
IB_Signalling	1		1: {no, yes}
OOB_Signalling	1		0: {no, yes}
}			

### **NIU/STB Status**

 ${\tt NIU/STB\_Status}$  is a 32-bit field that indicates the current state of the NIU/STB. It has the following subfields:

Network\_Address\_Registered indicates that the Network Interface Module has registered its NSAP Address with the Application Module. The NSAP Address is not currently used but remains reserved for this purpose.

Connection\_Established indicates that the Network Interface Module has been assigned Connection parameters.

### **NIU/STB Error Code**

NIU/STB\_Error\_Code is an 16-bit field that indicates the error condition within the NIU/STB. It has the following subfields:

Connect\_Confirm\_Timeout (set to 1 for transition SCE:E4 or DCE:E8)

First Connection Timeout (set to 1 for transition DCE:E2)

Range Response Timeout (set to 1 for transition RC:E13, Figure 39)

In case of a timeout in the current signalling, the corresponding subfield is set to one, see chapter (Informative Note A).

## NIU/STB\_Retry\_Count

NIU/STB\_Retry\_Count is a 8-bit unsigned integer that indicates the number of transmissions of the <MAC> Sign-On Response. This field is always included in the response to the <MAC> Sign-On Request. This field shall be initialized to zero whenever a Sign-On procedure is started, and this field shall be incremented by one each time the message is transmitted until the Sign-On procedure completes or the value reaches it's maximum value (255). In the case that this field reaches it's maximum value, it shall remain at the maximum value for the remainder of the current Sign-On procedure.

## **NIU/STB** Capabilities

NIU/STB\_Capabilities is a 32-bit field that indicates the capabilities of the NIU/STB. It has the following subfields:

Encapsulation is an 8-bit field that indicates the type(s) of encapsulation supported by the NIU/STB: {DIRECT\_IP, Ethernet\_MAC\_Bridging, PPP, reserved 3..7}

US\_Bitrate is an 8-bit field that indicates the upstream bitrate(s) supported by the NIU/STB: {256 kbit/s, 1.544 Mbit/s, 3.088 Mbit/s, 6.176 Mbit/s, reserved 4..7}

 $DS_OOB_Bitrate$  is a 4-bit field that indicates the downstream OOB bitrate(s) supported by the NIU/STB: {1.544 Mbit/s, 3.088 Mbit/s, reserved 2..3}

Reserved: Reserved for future use

Resource\_Request\_Capable is a 1-bit field that indicates if the NIU is able to send <MAC> Resource Request Messages.

Fragmented\_MAC\_Messages is a 1-bit field that indicates that the NIU/STB is able to support MAC messages having the compound MAC\_Information\_Elements field of a single up to 512 bytes in size. This flag is also for backwards compatibility with NIU/STBs not supporting MAC message fragmentation and re-assembly. By not setting this bit, the NIU/STB indicates that it does not support fragmented MAC messages at all, and will not understand or utilise the Fragment\_No\_MAC\_Address and Fragment\_MAC\_Address\_Included MAC message syntax types.

Security\_Supported is a 1-bit field that indicates that the NIU/STB is able to support the security extensions specified in this protocol.

Minislots\_for\_Reservation is a 1-bit field that indicates that the NIU/STB is capable of utilizing minislots.

Reserved\_for\_DAVIC: Reserved for compatibility with DAVIC.

IB\_Signalling is an 1-bit field that indicates that the NIU/STB is capable of utilizing IB signaling.

OOB\_Signalling is an 1-bit field that indicates that the NIU/STB is capable of utilizing OOB signaling.

### 5.5.4.3 <MAC> Ranging and Power Calibration Message (Singlecast Downstream)

The <MAC> RANGING AND POWER CALIBRATION MESSAGE is sent by the INA to the NIU to adjust the power level or time offset the NIU is using for upstream transmission. The format of this message is shown in the following table. Minislots are not used for ranging.

**Table 25: Ranging and Power Calibration Message structure** 

Ranging_and_Power_Calibration_Message(){	Bits	Bytes	Bit Number / Description
Range_Power_Control_Field		1	
Reserved	5		7-3:
Ranging_Slot_Included	1		2: {no, yes}
Time_Adjustment_Included	1		1: {no, yes}
Power_Adjustment_Included	1		0: {no, yes}
if (Range_Power_Control_Field &=			
Time_Adjustment_Included ) {			
Time_Offset_Value	(16)	(2)	
}			
if (Range_Power_Control_Field &=			
Power_Adjustment_Included) {			
Power_Control_Setting	(8)	(1)	
}			
if (Range_Power_Control_Field &=			
Ranging_Slot_Included) {			
Ranging_Slot_Number	(16)	(2)	
}			
}			

# **Range and Power Control Field**

Range\_Power\_Control\_Field specifies which Range and Power Control Parameters are included in the message.

# **Time Adjustment Included**

time\_adjustment\_included is a boolean when set, indicates that a relative Time Offset Value is included that the NIU should use to adjust its upstream slot transmit position.

## **Power Adjust Included**

power\_adjust\_included is a boolean when set, indicates that a relative Power Control Setting is included in the message

## **Ranging Slot Included**

Ranging\_Slot\_Included is a boolean when set, indicates the calibration slot available. When this bit equals 1, the NIU must send its response on the slot number given by bit equals 0, the NIU must respond on a ranging slot as mentioned in Figure 39.

# **Time Offset Value**

Time\_Offset\_Value is a 16-bit short integer representing a relative offset of the upstream transmission timing. A negative value indicates an adjustment forward in time (later). A positive value indicates an adjustment back in time (earlier). The unit of measure is 100 ns (The NIU will adjust approximately its time offset to the closest value indicated by the Time\_Offset\_Value parameter, which implies that no extra clock is needed to adjust to the correct offset).

## **Power Control Setting**

Power\_Control\_Setting is an 8-bit signed integer to be used to set the new power level of the NIU. (A positive value represents an increase of the ouput power level)

New output\_power\_level = current output\_power\_level + power\_control\_setting × 0,5 dB

# **Ranging Slot Number**

Ranging\_Slot\_Number is a 16-bit unsigned integer that represents the reserved access Slot Number assigned for Ranging the NIU. It shall be assigned by the INA in the reservation area. The INA shall assure that an unassigned slot precedes and follows the ranging slot.

Only 13 lowest significant bits shall be considered. 3 MSB are reserved for future used.

# 5.5.4.4 <MAC> Ranging and Power Calibration Response Message (Upstream Ranging or reserved)

The <MAC> RANGING AND POWER CALIBRATION RESPONSE Message is sent by the NIU to the INA in response to the <MAC> RANGING AND POWER CALIBRATION MESSAGE. The format of the message is shown in the following table.

Table 26: Ranging and Power Calibration Response Message Structure

Ranging_Power_Response_Message(){	Bits	Bytes	Bit Number / Description
Power_Control_Setting	8	1	
}			

## **Power Control Setting**

Power\_Control\_Setting is an 8-bit unsigned integer representing the actual power used by the NIU for upstream transmission. The unit of measure is 0.5dB  $\mu$ V.

## 5.5.4.5 <MAC> Initialization Complete Message (Singlecast Downstream)

The <MAC> INITIALIZATION COMPLETE Message is sent by the INA to the end of the MAC Sign-On and Provisioning procedure. The STB/ NIU shall reenter the initialization process after receiving a non-zero Completion\_Status\_Field value. The <MAC> Transmission Control Message can be used to stop the NIU from sending upstream messages.

Initialization_Complete_Message(){	Bits	Bytes	Bit Number / Description
Completion_Status_Field		1	
Reserved	4		74
Invali d_STB/NIU	1		3:{no, yes}
Timing_Ranging_Error	1		2:{no, yes}
Power_Ranging_Error	1		1:{no, yes}
Other_Error	1		0:{no, yes}
}			

## **Completion Status Field**

Completion\_Status\_Field is an 8-bit field that indicates errors in the initialization phase. It has the following subfields:

Invalid STB/NIU is a boolean that (when set to 1) indicates that the STB/ NIU is invalid.

Timing\_Ranging\_Error is a boolean that (when set to 1) indicates that the ranging has not succeeded.

Power\_Ranging\_Error is a boolean that (when set to 1)indicates that the power ranging has not succeeded.

Other Error is a boolean that (when set to 1) indicates an error with unspecified type.

#### 5.5.5 Connection Establishment

Two cases must be considered:

- (1) Establishment of the first (initial) connection.
- (2)- Establishment of additional connections.

## 5.5.5.1 Establishment of the First (Initial) Connection

After Initialisation, Provisioning and Sign On Procedures are complete, the INA shall assign an upstream and downstream connection to the NIU. This connection can be assigned on any of the upstream channels. The INA shall assign the connection by sending the <MAC> Connect Message to the NIU. This message shall contain the upstream connection parameters and downstream frequency on which the connection is to reside.

The NIU, upon receiving the <MAC> Connect Message shall tune to the required upstream and downstream frequencies and send the <MAC> Connect Response Message confirming receipt of the message. However, if the US and/or the DS frequency contained in the <MAC> Connect Message is different than the current US and/or DS frequency, the NIU/STB shall tune to the new frequency(ies) and enter the Sign-On procedure as defined in chapter 5.5.4, the Connection\_Established flag being set and the NIU/STB retry count reseted. The NIU/STB shall send the <MAC> Connect Response Message after the <MAC> Initialization Complete Message.

Upon receipt of the <MAC> Connect Response Message, the INA shall confirm the new connection by sending the <MAC> Connect Confirm Message.

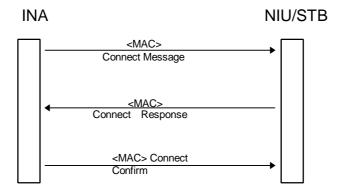


Figure 33: Connection Signalling for the Initial Connection

A more detailed description of the connection establishment process, including state diagrams and time outs, is given in chapter 7 (Informative Note A).

# <MAC> Connect Message (Singlecast Downstream)

**Table 27: Connect Message Structure** 

Connect_Message (){	Bits	Bytes	Bit Number/
		,	Description
Connection_ID	32	4	
Session_Number	32	4	
Connection_Control_Field_Aux		1	
Reserved	6		72: must be 0
Encapsulation_Included	1		1: {no, yes}
DS_Multiprotocol_CBD_Included	1		0: {no, yes}
Resource_Number	8	1	
Connection_Control_Field		1	
DS_ATM_CBD_Included	1		7: {no, yes}
DS_MPEG_CBD_Included	1		6:{no, yes}
US_ATM_CBD_Included	1		5:{no, yes}
Upstream_Channel_Number	3		42
Slot List Included	1		1:{no, yes}
Cyclic_Assignment	1		0:{no, yes}
Frame_Length	16	2	0.\(\)10, yes}
Maximum_Contention_Access_Message_Length	8	1	
Maximum_Reservation_Access_Message_Length	8	1	
if(Connection_Control_Field &=	-		
DS_ATM_CBD_Included) {			
Downstream_ATM_CBD()	(64)	(8)	
}	(04)	(0)	
if (Connection_Control_Field &=			
DS_MPEG_CBD_Included) {			
Downstream_MPEG_CBD()	(48)	(6)	
DOWNStream_MPEG_CBD()	(40)	(6)	
if (Connection_Control_Field &=			
US_ATM_CBD_Included) {			
Upstream_ATM_CBD()	(64)	(8)	
}	(04)	(0)	
if (Connection_Control_Field &=			
Slot_List_Included) {			
Number_Slots_Defined	(8)	(1)	
for (i=0;i <number_slots_defined; i++{<="" td=""><td>(-)</td><td>(-)</td><td></td></number_slots_defined;>	(-)	(-)	
Slot Number	(16)	(2)	
}	` ′	` '	
}			
<pre>if (MAC_Control_Params == Cyclic_Assignment){</pre>			Fixed RateAccess
Fixedrate_Start	(16)	(2)	
Fixedrate_Dist	(16)	(2)	
Fixedrate End	(16)	(2)	
}	` /	` /	
if (Connection_Control_Field_Aux &=			
DS_Multiprotocol_CBD_Included) {			
Downstream_Multiprotocol_CDB()	(48)	(6)	
}	. ,		
if (Connection_Control_Field_Aux &=			
Encapsulation_Included) {			
Encapsulation	(8)	(1)	
}			
}	]	]	

#### Connection ID

Connection\_ID is a 32-bit unsigned integer representing a connection Identifier for the NIU Dynamic Connection.

#### Session Number

Session\_Number is a 32-bit unsigned integer representing the Session that the connection parameters are associated. This parameter is not used by this ETS specification.

### Connection Control Field\_Aux

Reserved is a 6 bit field, for future extensions. This field must be zero.

Encapsulation\_Included is a boolean that indicates that the type of encapsulation is included in the message.

DS\_Multiprotocol\_CBD\_Included is a boolean that indicates that the Downstream Multiprotocol Descriptor is included in the message.

### Resource Number

Resource\_Number is a 8-bit unsigned integer providing a unique number to the resource defined in the message. If the Connect Message is the result of a Resource Request by the NIU, it must be equal to the Resource Request ID of the Resource Request, otherwise it must be 0.

#### Connection Control Field

DS\_ATM\_CBD\_Included is a boolean that indicates that the Downstream ATM Descriptor is included in the message.

DS\_MPEG\_CBD\_Included is a boolean that indicates that the Downstream MPEG Descriptor is included in the message.

US\_ATM\_CBD\_Included is a boolean that indicates that the Upstream ATM Descriptor is included in the message.

Upstream\_Channel\_Number is a 3-bit unsigned integer which identifies the logical channel (denoted by 'c') assigned to the NIU/STB. Refer to chapter 5.3.2.1 for the use of this parameter.

Slot\_List\_Included is a boolean that indicates that the Slot List is included in the message.

Cyclic\_Assignment is a boolean that indicates Cyclic Assignment.

The connection type can be deduced from the presence or the absence of the Connection Control Fields relative to the CBDs. The following table summarizes the valid combinations:

DS_ATM_CBD	DS_MPEG_CBD	Connection Type
YES	NO	ООВ
NO	YES	DVB Multiprotocol Encapsulation over MPEG [12]
YES	YES	Reserved for ATM over DVB Data piping over MPEG [19]

All other combinations will not be used by the INA. If so, the message shall be ignored by the NIU/STB (no <MAC>Connect Response Message shall be sent).

## Frame Length

Frame\_length - This 16-bit unsigned number represents the number of successive slots in the fixed rate access region associated with each fixed rate slot assignment. In the slot\_list method of allocating slots it represents the number of successive slots associated with each element in the list. In the cyclic method of allocating slots it represents the number of successive slots associated with the Fixedrate\_Start\_slot and those which are multiples of Fixedrate\_Distance from the Fixedrate\_Start\_slot within the Fixed rate access region.

## Maximum Contention Access Message Length

Maximum\_contention\_access\_message\_length is an 8-bit number representing the maximum length of a message in ATM sized cells that may be transmitted using contention access. Any message greater than this should use reservation access.

## Maximum Reservation Access Message Length

Maximum\_reservation\_access\_message\_length is an 8-bit number representing the maximum length of a message in ATM sized cells that may be transmitted using a single reservation access. Any message greater than this shall be transmitted by making multiple reservation requests.

Downstream ATM Connection Block Descriptor

Table 28: Downstream\_ATM\_CBD substructure

Downstream_ATM_CBD(){	Bits	Bytes	Bit Number / Description
Downstream_Frequency	32	4	
Downstream_VPI	8	1	
Downstream_VCI	16	2	
Downstream_Type	8	1	
}			

Downstream\_Frequency is a 32-bit unsigned integer representing the Frequency where the connection resides. The unit of measure is in Hz.

Downstream\_VPI is an 8-bit unsigned integer representing the ATM Virtual Path Identifier that is used for downstream transmission over the Dynamic Connection.

Downstream\_VCI is an 16-bit unsigned integer representing the ATM Virtual Channel Identifier that is used for downstream transmission over the Dynamic Connection.

 ${\tt DownStream\_Type} \ \ is \ an \ 8-bit \ enumerated \ type \ indicating \ the \ modulation \ format \ for \ the \ down \ stream \ connection. \\ \{QAM\_MPEG, QPSK\_1.544, QPSK\_3.088, , \ 3..255 \ reserved\}$ 

Downstream MPEG Connection Block Descriptor

Table 29: Downstream\_MPEG\_CBD substructure

Downstream_MPEG_CBD(){	Bits	Bytes	Bit Number /
			Description
Downstream_Frequency	32	4	
Program_Number	16	2	
}			

Downstream\_Frequency is a 32-bit unsigned integer representing the Frequency where the connection resides. The unit of measure is in Hz.

Program\_Number is a 16-bit unsigned integer uniquely referencing the downstream virtual connection assignment (PID of the MPEG-2 header, **not** equal to the program number defined by MPEG-2!). Only the 13 least significant bits are valid, the three most significant bits are reserved for future use.

Upstream ATM Connection Block Descriptor

Table 30: Upstream\_ATM\_CBD substructure

Upstream_ATM_CBD(){	Bits	Bytes	Bit Number / Description
Upstream_Frequency	32	4	
Upstream_VPI	8	1	
Upstream_VCI	16	2	
		1	
MAC_Flag_Set	5		73
Upstream_Rate	3		20
}			

Upstream\_Frequency is a 32-bit unsigned integer representing the channel on assigned to the connection. The unit of measure is in Hz.

Upstream\_VPI is an 8-bit unsigned integer representing the ATM Virtual Path Identifier that is used for upstream transmission over the Dynamic Connection.

Upstream\_VCI is an 16-bit unsigned integer representing the ATM Virtual Channel Identifier that is used for upstream transmission over the Dynamic Connection.

MAC\_Flag\_Set is a 5 bit field representing the first MAC Flag set assigned to the logical channel. A downstream channel contains information for each of its associated upstream channel. This information is contained within structures known as MAC Flag Sets represented by either 24 bits (denoted b0..b23) or by 3 bytes (denoted Rxa, Rxb, Rxc). This information is uniquely assigned to a given upstream channel. Refer to chapter 5.3.1.3 and chapter 5.3.2.1 for the use of this parameter.

Upstream\_Rate is an 3-bit enumerated type indicating the upstream transmission bit rate for the upstream connection. { Upstream\_256K, Upstream\_1.544M, Upstream\_3.088M, Upsteam\_6.176M, 4..7 reserved}

## Number of Slots Defined

 ${\tt Number\_Slots\_Defined} \ \ is \ an \ 8-bit \ unsigned \ integer \ that \ represents \ the \ number \ of \ slot \ assignments \ contained in the \ message. \ The unit of \ measure is \ slots.$ 

## Slot Number

<code>Slot\_Number</code> is a 16-bit unsigned integer that represents the Fixed rate based Slot Number assigned to the NIU. Only 13 lowest significant bits shall be considered. 3 MSB are reserved for future used.

#### Fixed Rate Start

Fixedrate\_Start - This 16-bit unsigned number represents the starting slot within the fixed rate access region that is assigned to the NIU. The NIU may use the next Frame\_length slots of the fixed rate access regions. Only 13 lowest significant bits shall be considered. 3 MSB are reserved for future used.

# Fixed Rate Distance

Fixedrate\_Distance - This 16-bit unsigned number represents the distance in slots (taking into account all slots of all regions) between additional slots assigned to the NIU. The NIU is assigned all slots

that are a multiple of Fixedrate\_Distance from the Fixedrate\_Start\_slot which don't exceed Fixedrate\_End\_slot. The NIU may use the next Frame\_length slots of the fixed rate access regions from each of these additional slots.

#### Fixed Rate End

Fixedrate\_End - This 16-bit unsigned number indicates the last slot that may be used for fixed rate access. The slots assigned to the NIU, as determined by using the Fixedrate\_Start\_slot, the Fixedrate\_Distance and the Frame\_length, cannot exceed this number. Only 13 lowest significant bits shall be considered. 3 MSB are reserved for future use.

Downstream Multiprotocol Connection Block Descriptor

Table 31: Downstream Multiprotocol CBD substructure

Downstream_Multiprotocol_CBD(){	Bits	Bytes	Bit Number / Description
MAC_Address	48	6	
}			

MAC\_Address is a 48-bit MAC address, identifying an additional MAC address (used for example for multicast) to filter on in the DVB Multiprotocol Encapsulation header, according to EN 301 192 [12]. By default the NIU filters on its own MAC address and the Broadcast MAC address FF:FF:FF:FF:FF:FF.

Encapsulation is an 8-bit field that indicates the type of encapsulation provided: {Direct\_IP, Ethernet\_MAC\_Bridging, PPP, reserved 3..7}

## <MAC> Connect Response (Upstream Contention or Reserved)

The <MAC> CONNECT RESPONSE MESSAGE is sent to the INA from the NIU in response to the <MAC> CONNECT MESSAGE. The message shall be transmitted on the upstream frequency specified in the <MAC> CONNECT MESSAGE. If the Upstream frequency is different than the current upstream frequency, then the procedure described in chapter 5.5.4 shall be used before the <MAC> Connect Response Message is sent. If the Connect Confirm message does not arrive within the specified time interval, the NIU shall resend the Connect Response message.

Table 32: Connect response message structure

Connect_Response(){	Bits	Bytes	Bit Number /
			Description
Connection_ID	32	4	
}			

## Connection ID

Connection\_ID is a 32-bit unsigned integer representing a global connection Identifier for the NIU Dynamic Connection.

## <MAC> Connect Confirm (Singlecast Downstream)

The <MAC> Connect Confirm message is sent from the INA to the NIU.

Table 33: Connect Confirm message structure

Connect_Confirm(){	Bits	Bytes	Bit Number / Description
Connection_ID	32	4	
}			

## Connection ID

Connection\_ID is a 32-bit unsigned integer representing a global connection Identifier for the NIU Dynamic Connection.

#### 5.5.5.2 Establishment of Additional Connections

The INA can assign additional connections by using the <MAC> Connect Message described previously. The NIU can request such connections using the <MAC> Resource Request Message. Besides from that, the message sequence is the same as for the initial connection, with the following restrictions:

- For one NIU, the US frequency shall be the same for all connections, and the OOB and IB frequencies shall be the same for all OOB and IB connections respectively.
- If a <MAC>Connect Message is received with new values of US and/or DS frequency, the NIU/STB will ignore the message.
- If needed, the INA will use one of the resource management procedure to modify the US or DS frequency (see chapters TDMA Allocation Management and Link Management) before sending the additional <MAC>Connect Message.

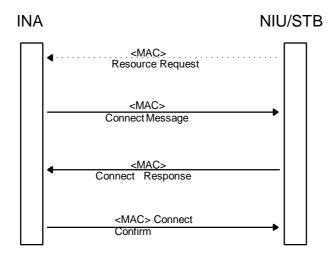


Figure 34: Connection signalling for additional connections

A more detailed description of the connection establishment process, including state diagrams and time outs, is given in chapter 7 (Informative Note A).

## <MAC> Resource Request Message (Upstream)

The NIU may request a new connection, may request to change the parameters of an existing connection and may request to release an existing connection by sending a <MAC> Resource Request Message to the INA. The INA can answer to that request by sending a <MAC> Connect Message, a <MAC> Reservation\_ID Assignment Message / <MAC> Reprovision Message or a <MAC> Release Message, respectively, to the NIU or by sending a <MAC> Resource Request Denied Message to the NIU.

**Table 34: Resource Request Message Structure** 

Resource_Request_Message() {	Bits	Bytes	Bit Number /
			Description
Resource_Request_ID	8	1	
Connection_ID	32	4	
Field		1	
Reserved	5		73: must be zero
Release_Requested	1		2: {no, yes}
Reservation_ID_Requested	1		1: {no, yes}
Cyclic_Assignment_Needed	1		0: {no, yes}
Requested_Bandwidth	24	3	The unit is
-			slots/1200msec
Maximum_Distance_Between_Slots	16	2	The unit is slots
Encapsulation	8	1	
}			

Resource\_Request\_ID is an 8-bit unsigned integer which identifies the resource request. The value of the Resource\_Request\_ID is incremented by one for every new resource request of the NIU. <u>The value may not be 0.</u>

Connection\_ID is a 32-bit field which identifies the connection for which changes are requested. If the value of Connection\_ID is zero, a new connection is requested.

Reserved: Reserved for future use. Must be zero.

Release\_Requested: If set to one, the release of the connection is requested. In this case, all following parameters of the message shall be ignored by the INA.

Reservation\_ID\_Requested: If set to one, a Reservation\_ID is requested for the connection.

Cyclic\_Assignment\_Needed: If set to one, cyclic assignment is requested for fixed rate access for the connection. If Requested\_Bandwidth is zero, this field is ignored by the INA.

Requested\_Bandwidth: Gives the requested bandwidth for fixed rate access for the connection in slots/1200msec.

Maximum\_Distance\_Between\_Slots: Gives the requested maximum distance between assigned fixed rate slots. If Requested\_Bandwidth is zero, this field is ignored by the INA.

Encapsulation is an 8-bit field that indicates the type of encapsulation requested: {Direct\_IP, Ethernet\_MAC\_Bridging, PPP, reserved 3..7}

## <MAC> Resource Request Denied Message (Singlecast Downstream)

The INA may respond to a resource request of the NIU with a <MAC> Resource Request Denied Message:

**Table 35: Resource Request Denied Message Structure** 

Resource_Request_Denied_Message() {	Bits	Bytes	Bit Number / Description
Resource_Request_ID	8	1	
}			

Resource\_Request\_ID is an 8-bit unsigned integer which identifies the resource request which is denied.

#### 5.5.6 Connection Release

This subclause defines the MAC signaling requirements for connection release. Figure 35 below displays the signaling flow for releasing a connection. The NIU can request the release of a connection using the **<MAC> Resource Request Message**..

- 1) The NIU may request the release of a connection using the <MAC> Resource Request Message, or the INA itself can initiate the release process.
- 2) Upon receiving the **<MAC> Release Message** from the INA, the NIU shall tear down the upstream connection established for the specified Connection ID.
- 3) Upon teardown of the upstream connection, the NIU shall send the <MAC> Release Response Message on the upstream channel previously assigned for that connection. If the Connection\_ID is unknown by the NIU, it shall send zero in the response message. If the Number\_of\_Connections in the Connection Release Message is zero, then the NIU shall release all open connections.

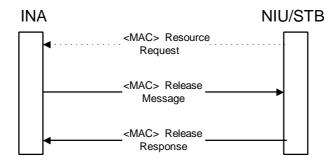


Figure 35: Connection release signalling

A more detailed description of the connection release process, including state diagrams and time outs, is given in chapter 7 (Informative Note A).

## <MAC> Release Message (Singlecast Downstream)

The <MAC> Release Message is sent from the INA to the NIU to terminate a previously established connection.

Release_Message(){	Bits	Bytes	Bit Number / Description
Number_of_Connections	8	1	
for(i=0;i <number_of_connections;i++){< td=""><td></td><td></td><td></td></number_of_connections;i++){<>			
Connection_ID	(32)	(4)	
}			
}			

**Table 36: Release Message Structure** 

## Connection ID

Connection\_ID is a 32-bit unsigned integer representing a global connection Identifier for the NIU Dynamic Connection.

## <MAC> Release Response (Upstream contention or reserved)

The <MAC> RELEASE RESPONSE MESSAGE is sent by the NIU to the INA to acknowledge the release of a connection. The format of the message is shown in the following table.

**Table 37: Release Response Message structure** 

Release_Response_Message (){	Bits	Bytes	Bit Number / Description
Connection_ID	32	4	
}			

### Connection ID

Connection\_ID is a 32-bit unsigned integer representing the global connection Identifier used by the NIU for this connection.

#### 5.5.7 Fixed Rate Access

Fixed rate access is provided by the INA using the <MAC> Connect Message. The INA is also allowed to assign slots in fixed rate access to a connection in response to a <MAC> Reservation Request Message.

#### 5.5.8 Contention Based Access

The NIU shall use contention based slots specified by the slot boundary definition fields (Rx) to transmit contention based messages or payload (see chapter 5.3.1.3). The format of contention based MAC messages is described by the MAC message format (see chapter 5.5.2.7). The format for payload transmission is described in chapter 6.

#### 5.5.9 Reservation Access

This sub-clause defines the MAC signalling requirements for reservation access. Figure 36 below displays the signalling flow for reserving an access.

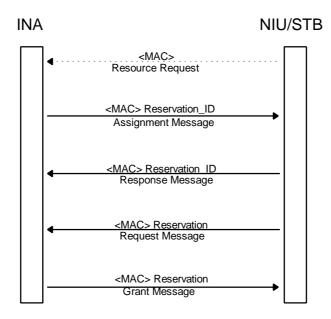


Figure 36: Reservation access signalling

- The NIU can request a Reservation\_ID using the <MAC> Resource Request Message.
- 2) The NIU shall wait for a <MAC> Reservation ID Assignment Message from the INA before it can request reservation access.
- 3) At any time when needed after receiving the reservation ID, the NIU can request a certain number of slots to the INA using the <MAC> Reservation Request Message.
- 4) The INA shall respond to that message using the <MAC> Reservation Grant Message.

5) If the NIU has not received the <MAC> Reservation Grant Message before the Grant\_Protocol\_Timeout, it shall send a <MAC> Reservation Status Request to the INA. This leads back to 3.

A more detailed description of the reservation process, including state diagrams and time outs, is given in chapter 7 (Informative Note A).

## <MAC> Reservation ID Assignment Message (Singlecast Downstream)

The <MAC> Reservation ID Assignment Message is used to assign the NIU a Reservation\_ID. The NIU identifies its entry in the Reservation\_grant\_message by comparing the Reservation\_ID assignment to it by the Reservation\_ID\_assignment\_message and the entries in the Reservation\_Grant\_message.

The format of the message is given in the following table.

Table 38: Reservation ID assignment message structure

Reservation_ID_Assignment_Message (){	Bits	Bytes	Bit Number / Description
Connection_ID	32	4	
Reservation_ID	16	2	
Grant_protocol_timeout	16	2	
}			

#### Connection ID

Connection\_ID is a 32-bit unsigned integer representing a global connection identifier for the NIU Dynamic Connection.

## Reservation\_ID

Reservation\_ID is a 16-bit unsigned number representing an identifier for the connection. This is used as a short identifier by the NIU to identify the appropriate Reservation\_Grant\_Messages.

# Grant\_protocol\_timeout

Grant\_protocol\_timeout is a 16-bit unsigned number representing the time in milliseconds that the NIU should wait before verifying the status of pending grants. This parameter specifies the time that the NIU should wait after receiving the last <MAC> Reservation\_grant\_message, with an entry addressed to the NIU, before initiating a reservation status request. If the NIU has pending grants and the timeout occurs, it should send the Reservation\_status\_request message to the INA. The INA will respond with the Reservation\_grant\_message (probably without granting any slots) to inform the NIU of any remaining slots left to be granted. This allows the NIU to correct any problems should they exist such as issuing an additional request for slots or waiting patiently for additional grants.

# <MAC> Reservation ID Response Message (Upstream contention or reserved)

The <MAC> Reservation ID Response Message is used to acknowledge the receipt of the <MAC> Reservation\_ID\_Assignment message.

The format of the message is given below.

Reservation_ID_Response_Message (){	Bits	Bytes	Bit Number /
			Description
Connection_ID	32	4	
Reservation_ID	16	2	
}			

Connection\_ID is a 32-bit unsigned integer representing a global connection identifier for the NIU/STB Dynamic Connection.

## Reservation\_ID

Reservation\_ID is a 16 bit unsigned number representing an identifier for the connection. This is used as a short identifier by the NIU/STB to identify the appropriate Reservation\_Grant\_Messages.

## <MAC> Reservation Request Message (Upstream contention or reserved)

**Table 39: Reservation Request Message structure** 

Reservation_Request_message (){	Bits	Bytes	Bit Number / Description
Reservation_ID	16	2	
Reservation_request_slot_count	8	1	
}			

This message is sent from the NIU to the INA.

### Reservation ID

Reservation\_ID is a 16-bit unsigned number representing an identifier for the connection. This is used as a short identifier by the NIU to identify the appropriate Reservation\_Grant\_Messages.

### Reservation Request Slot Count

Reservation\_request\_slot\_count is an 8-bit unsigned number representing the number of slots requested by the NIU. This is the number of sequential slots that will be allocated in the reservation region of the upstream channel. The INA will respond with the Reservation\_Grant message granting the request.

## <MAC> Reservation Grant Message (Broadcast Downstream)

The <MAC> RESERVATION GRANT MESSAGE is used to indicate to the NIU which slots have been allocated in response to the Reservation Request message. The NIU identifies its entry in the Reservation\_grant\_message by comparing the Reservation\_ID assignment to it by the Reservation\_ID\_assignment\_message and the entries in the Reservation\_Grant\_message.

The format of the message is given in the following table.

**Table 40: Reservation Grant Message structure** 

Reservation_grant_message (){	Bits	Bytes	Bit Number/ Description
Reference slot	16	2	2 coonpact
Number_grants	8	1	
for (I=0; I <number_grants; i++){<="" td=""><td></td><td>-</td><td></td></number_grants;>		-	
Reservation_ID	(16)	(2)	
Troot ration_is	(10)	(2)	
Grant_Slot_count	(4)	(2)	1512
Remaining_slot_count	(5)		117
Grant_slot_offset	(7)		60
}	(, )		00
Number of US Channels	8	1	
for(I=0; I <number_of_us_channels;i++) td="" {<=""><td></td><td>-</td><td></td></number_of_us_channels;i++)>		-	
Minislot Control Field		(1)	
Upstream_Channel_Number	(3)	(.,	75
MS_Feedback_Included	(1)		4:{no, yes}
MS_Allocation_Included	(1)		3:{no, yes}
Reserved	(3)		20
if (MS_Feedback_Included			
MS_Allocation_Included) {			
MS_Reference_Field	(16)	(2)	
}	, ,		
if (MS_Feedback_Included) {			
Number_of_Feedbacks	(8)	(1)	
for(I=0;I <number_of_feedbacks; i++)="" td="" {<=""><td></td><td>` /</td><td></td></number_of_feedbacks;>		` /	
Feedback_Offset	(8)	(1)	
Feedback_Collision_Number_1	(8)	(1)	
Feedback_Collision_Number_2	(8)	(1)	
Feedback_Collision_Number_3	(8)	(1)	
}	\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \	(-)	
}			
if (MS_Allocation_Included) {			
Entry_Field		(2)	
Stack_Entry	(1)	(-)	15
Reserved	(3)		1412
Entry_Spreading	(12)		110
Number_of_Allocations	(8)	(1)	
for(I=0;I <number_of_allocations; i++)="" td="" {<=""><td>` '</td><td>, ,</td><td></td></number_of_allocations;>	` '	, ,	
Allocation_Offset	(8)	(1)	
Allocation Collision Number	(8)	(1)	
}	\-'\		
}			
}			
}			
,	<u> </u>	1	1

# Reference\_slot

Reference\_slot is an 16-bit unsigned number indicating the reference point for the remaining parameters of this message. This represents a physical slot of the upstream channel. Since the upstream and downstream slots are not aligned, the INA shall send this message in a downstream slot such that it is received by the NIU before the Reference\_slot exists on the upstream channel. Only 13 lowest significant bits shall be considered. 3 MSB are reserved for future used.

## Number\_grants

Number\_grants is an 8-bit unsigned number representing the number of grants contained within this message. This can either correspond to grants for different NIUs, or to different connection\_IDs for the same NIU.

#### Reservation ID

Reservation\_ID is a 16-bit unsigned number representing an identifier for the connection. This is used as a short identifier by the NIU to identify the appropriate Reservation Grant Messages.

#### Grant slot count

Grant\_slot\_count is a 4-bit unsigned number representing the number of sequential slots currently granted for the upstream burst. A value of zero indicates that no slots are being granted. This would typically be the case in a response to a Reservation status request message.

Upon receipt of this message the NIU is assigned Grant\_slot\_count sequential slots in the region of the upstream channel starting at the position indicated by the Reference\_slot and Grant\_slot\_offset values (jumps are needed in the case where the number of slots granted exceeds the length of this region).

### Remaining\_slot\_count

Remaining\_slot\_count is a 5-bit unsigned number representing the remaining slots to be granted by the INA with subsequent grant messages. A value of 0x1f indicates that 31 or more slots will be made available in the future. A value of 0x00 indicates that no additional slots will be granted in the future and that the slots granted in this message represent the only remaining slots available for the connection. The NIU should monitor this count to determine if sufficient slots remain to satisfy current needs. Should additional slots be required because of lost grant messages or additional demand, additional slots should be requested using the Reservation\_request\_message. Additional Reservation\_request\_messages shall be sent only when the Remaining\_slot\_count is less than 15. To minimise contention on the upstream channel, the Reservation\_request\_message may be sent in one of the slots granted by the Reservation\_grant\_message. The remaining slot count is calculated for each grant in a Reservation Grant message.

#### Grant slot offset

Grant\_slot\_offset is a 7-bit unsigned number representing the starting slot to be used for the upstream burst. This number is added to the Reference slot to determine the actual physical slot.

### Number of US Channels

Number\_of\_Channels is a 8-bit unsigned integer representing the number of Upstream channels in this message.

## Minislot Control Field

Upstream\_Channel\_Number is a 3-bit unsigned integer representing the upstream channel concerned by this iteration.

MS\_Feedback\_Included is a boolean that indicates that Minislot Feedback Section is included in the message.

MS\_Allocation\_Included is a boolean that indicates that Minislot Allocation Section is included in the message.

#### Minislot Reference Field

Minislot\_Reference\_Field is a 16-bit field of which the 13 LSBs represent the reference ATM slot number.

### Number of Feedbacks

Number\_of\_Feedbacks is a 8-bit unsigned integer representing the number of three minislot feedback groups in this message.

## Feedback Offset

Feedback\_Offset is a 8-bit unsigned integer representing the offset of the group of three minislots in ATM slots. This number is added to the Minislot Reference Field to determine the actual physical slot.

## Feedback Collision Number 1

Feedback\_Collision\_Number\_1 is a 8-bit unsigned integer representing the first minislot collision identification in the group of three minislots. The values 0xFF and 0xFE represent for idle and successful transmission, respectively. Other values are called Collision\_Number and are used to resolve contentions (see Allocation Collision Number field).

## Feedback\_Collision\_Number\_2

Feedback\_Collision\_Number\_2 is a 8-bit unsigned integer representing the second minislot collision identification in the group of three minislots. The values 0xFF and 0xFE represent for idle and successful transmission, respectively. Other values are called Collision\_Number and are used to resolve contentions (see Allocation\_Collision\_Number field).

## Feedback Collision Number 3

Feedback\_Collision\_Number\_3 is a 8-bit unsigned integer representing the third minislot collision identification in the group of three minislots. The values 0xFF and 0xFE represent for idle and successful transmission, respectively. Other values are called Collision\_Number and are used to resolve contentions (see Allocation\_Collision\_Number field).

## Entry\_Field

Stack\_Entry is a boolean parameter. When it is set to 0, collision resolution is according to the tree algorithm (see chapter 5.6.3) and NIUs with new requests have to wait for mini-slots with the Allocation\_Collision\_Number equal to 0 to enter the request contention process. When Stack\_Entry is set to one, NIUs with new requests can enter the request contention process in any minislot (independent of the value of Allocation\_Collision\_Number). After entering in this way to the contention process, the collision resolution is identical to the tree mode. So, the difference between Stack\_Entry set to 0 or 1 is that in the latter case NIUs don't have to wait for minislots with Allocation\_Collision\_Number equal to 0 before they can start sending a new request in contention mode.

Entry\_Spreading is a 14-bit unsigned integer that is used to control the number of NIUs that enter the request contention process in minislots. The NIU generates a random number between 0 and Entry\_Spreading (the random number generator in the NIU shall have a uniform distribution). If this number falls within the window from 0 to 2, then the NIU contends for access in the corresponding minislot, otherwise it will not transmit a request but wait for the next appropriate set of minislots and follow the same procedure again.

# Number\_of\_Allocations

 ${\tt Number\_of\_Allocations} \ \ is \ a \ 8-bit \ unsigned \ integer \ representing \ the \ number \ of \ contention \ resolution \ allocations \ in \ this \ message.$ 

## Allocation Offset

Allocation\_Offset is a 8-bit unsigned integer representing the offset of the group of three minislots in ATM slots to be added to the Minislot\_Reference\_Field to determine the physical slot number of the group of three minislots.

## Allocation\_Collision\_Number

Allocation\_Collision\_Number is a 8-bit unsigned integer associated with the group of three minislots. Only NIUs having their Collision\_Number equalt to Allocation\_Collision\_Number are allowed to transmit in these minislots.

## <MAC> Reservation Status Request (Upstream contention or reserved)

The <MAC> RESERVATION STATUS REQUEST Message is used to determine the status of the outstanding grants to be assigned by the INA. This message is only sent after the Grant protocol time-out is exceeded. The INA will respond with the Reservation\_grant\_message (possibly without granting any slots) to inform the NIU of any remaining slots left to be granted. This allows the NIU to correct any problems should they exist such as issuing an additional request for slots or waiting patiently for additional grants.

The format of the message is given in the following table.

Table 41: Reservation status request message structure

Reservation_Status_Request_Message (){	Bits	Bytes	Bit Number / Description
Reservation_ID	16	2	
Remaining_request_slot_count	8	1	
}			

## Reservation\_ID

Reservation\_ID is a 16-bit unsigned number representing an identifier for the connection. This is used as a short identifier by the NIU to identify the appropriate Reservation\_Grant\_Messages.

Remaining\_request\_slot\_count

Remaining\_request\_slot\_count is an 8-bit unsigned number representing the number of slots that the NIU is expecting to be granted.

## 5.5.10 MAC Link Management

The MAC Link Management tasks provide continuous monitoring and optimisation of upstream resources. These functions include:

- Power and Timing Management
- Fixed rate Allocation Management
- Channel Error Management

# 5.5.10.1 Power and Timing Management

Power and Timing Management shall provide continuous monitoring of upstream transmission from the NIU. The <MAC> Ranging and Power Calibration Message is used to maintain a NIU within predefined thresholds of power and time.

The Upstream Burst Demodulator shall continuously monitor the upstream burst transmissions from an NIU. Upon detection of an NIU outside the predefined range, the INA shall send the **<MAC> Ranging** and Power Calibration Message to the NIU.

The NIU/STB upstream power accuracy shall be better than or equal to +/- 1.5 dB. The NIU/STB power resolution shall be 0.5 dB nominally.

A detailed description of the recalibration process, including state diagrams and time outs, is given in chapter 7 (Informative Note A).

## 5.5.10.2 TDMA Allocation Management

To ensure optimum assignment of TDMA resources, the INA shall ensure the upstream allocation of TDMA resources for various connections remain intact when allocating resources to a new connection. However, in the event that reconfiguration is required to minimise fragmentation of resources, then the INA shall dynamically reconfigure the upstream TDMA assignments to a NIU or group of NIUs. The **<MAC> Reprovision Message** is utilised to change previously established connection parameters.

The NIU can request the change of some parameters of existing connections by use of the **CNAC** Resource Request Message, in which case the **CNAC** Reprovision Message can be used by the INA to confirm the requested changes.

A detailed description of the reprovisioning process, including state diagrams and time outs, is given in chapter 7 (Informative Note A).

For a description of upstream and downstream frequency changes, see chapter 5.5.2.2.

## <MAC> Reprovision Message (Singlecast Downstream)

The <MAC> REPROVISION MESSAGE is sent by the INA to the NIU to reassign upstream resources (maintaining the originally requested QoS parameters at the establishment of the connection.) This message is intended for Fixed rate based channel maintenance by the INA to redistribute or reassign resources allocated to a NIU.

**Table 42: Reprovision Message structure** 

Reprovision_Message (){	Bits	Bytes	Bit Number / Description
Reprovision_Control_Field		1	Description
Reserved	1	•	7
Delete Reservation IDs	1		6 : {no,yes}
New_Downstream_IB_Frequency	1		5 : {no,yes}
New_Downstream_OOB_Frequency	1		4 : {no,yes}
New_Upstream_Frequency_Included	1		3 : {no,yes}
New Frame Length Included	1		2 : {no,yes}
New_Cyclical_Assignment_Included	1		1 : {no,yes}
New_Slot_List_Included	1		0 : {no,yes}
if (Reprovision_Control_Field &=	-		(,)
New_Downstream_IB_Frequency) {			
New_Downstream_IB_Frequency	(32)	(4)	
}		•	
if (Reprovision_Control_Field &=			
New_Downstream_OOB_Frequency) {			
New_Downstream_OOB_Frequency	(32)	(4)	
DownStream_Type	(8)	(1)	
}			
if (Reprovision_Control_Field &=			
New_Upstream_Frequency_Included) {			
New_Upstream_Frequency	(32)	(4)	
New Upstream Parameters		(2)	
New_Upstream_Channel Number	(3)	, ,	1513
Reserved	(2)		1211
Upstream_Rate	(3)		108:enum
MAC_Flag_Set	( <del>`</del> 5)		73
Reserved	(3)		20
}	, ,		
if (Reprovision_Control_Field &=			
New_Frame_Length_Included){			
New_Frame_Length	(16)	(2)	9-0 : Unsigned
}			

if (Reprovision_Control_Field &=			
New_Slot_List_Included			
New_Cyclical_Assignment_Included			
Delete_Reservation_IDs){			
Number_of_Connections	(8)	(1)	
for(i=0;i <number_of_connections;i++){< td=""><td></td><td></td><td></td></number_of_connections;i++){<>			
Connection_ID	(32)	(1)	
if(Reprovision_Control_Field &=			Fixed Rate
new_slot_list_included){			Access
Number_Slots_Defined	(8)	(1)	
for(i=0;i <number_slots_assigned;i++){< td=""><td></td><td></td><td></td></number_slots_assigned;i++){<>			
Slot_Number	(16)	(2)	
}			
}			
if (Reprovision_Control_Field &=			Fixed Rate
new_cyclic_Assignment_included){			Access
Fixedrate_Start	(16)	(2)	
Fixedrate_Dist	(16)	(2)	
Fixedrate_End	(16)	(2)	
}			
}			
}			
}			

### Reprovision Control Field

Reprovision\_Control\_Field specifies what modifications to upstream resources are included. It consists of the following subfields:

Delete\_Reservation\_IDs is a Boolean that indicates that the NIU/STB shall delete all Reservation\_IDs that have been assigned to the Connection\_IDs contained in this message.

New\_Downstream\_IB\_Frequency is a boolean that indicates that a new downstream IB frequency is specified in the message

New\_Downstream\_OOB\_Frequency is a boolean that indicates that a new downstream OOB frequency is specified in the message

New\_Upstream\_Frequency\_Included is a boolean that indicates that a new upstream frequency is specified in the message.

New\_Frame\_Length\_Included is a boolean that indicates that a new upstream frame is specified in the message. In the Reprovision Message the Frame\_Length is a global value which applies to all connection\_ID refered in this message.

New\_Cyclical\_Assignment\_Included is a boolean that indicates that a new cyclical assignment is specified in the message. If the connection has already cyclic fixed rate slots, they are lost. If the connection has already a slot list assigned, these slots are kept.

New\_Slot\_List\_Included is a boolean that indicates that a new slot list is specified in the message. If the connection has already a slot list assigned, these slots are lost. If the connection has already cyclic fixed rate slots, they are kept.

## New Downstream IB Frequency

New\_Downstream\_IB\_Frequency is a 32-bit unsigned integer representing the reassigned downstream IB carrier center frequency. The unit of measure is Hz.

### New Downstream OOB Frequency

New\_Downstream\_OOB\_Frequency is a 32-bit unsigned integer representing the reassigned downstream OOB carrier center frequency. The unit of measure is Hz.

## DownStream Type

DownStream\_Type is an 8-bit enumerated type indicating the modulation format for the down stream connection. { reserved, QPSK 1.544, QPSK 3.088, , 3..255 reserved}

## New Upstream Frequency

New\_Upstream\_Frequency is a 32-bit unsigned integer representing the reassigned upstream carrier center frequency. The unit of measure is Hz.

New Upstream Parameters

New\_Upstream\_Channel\_Number is a 3-bit unsigned integer which identifies the new logical channel (denoted by 'c') assigned to the NIU/STB. Refer to chapter 5.3.2.1 for the use of this parameter.

Upstream\_Rate is an 3-bit enumerated type indicating the upstream transmission bit rate for the upstream connection. { Upstream\_256K, Upstream\_1.544M, Upstream\_3.088M, Upstream\_6.176M, 4..7 reserved}

MAC\_Flag\_Set is an 5 bit field representing the first MAC Flag set assigned to the new logical channel. A downstream channel contains information for each of its associated upstream channel. This information is contained within structures known as MAC Flag Sets represented by either 24 bits (denoted b0..b23) or by 3 bytes (denoted Rxa, Rxb, Rxc). This information is uniquely assigned to a given upstream channel. Refer to chapter 5.3.1.3 and chapter 5.3.2.1 for the use of this parameter.

#### New Frame Length

New\_Frame\_Length is a 16-bit unsigned integer representing the size of the reassigned upstream Fixed rate based frame. The unit of measure is in slots. This field is ignored by the NIU when no connection referred in the message has a new cyclic assignement.

## Number of Slots Defined

 ${\tt Number\_Slots\_Defined} \ \ is \ an \ 8-bit \ unsigned \ integer \ that \ represents \ the \ number \ of \ slot \ assignments \ contained in the \ message. \ The unit of \ measure is \ slots.$ 

## Slot Number

Slot\_Number is a 16-bit unsigned integer that represents the Fixed rate based Slot Number assigned to the Network Interface Unit. Only 13 lowest significant bits shall be considered. 3 MSB are reserved for future used.

## Fixed rate Start

Fixedrate\_Start - This 16-bit unsigned number represents the starting slot within the fixed rate access region that is assigned to the NIU. The NIU may use the next Frame\_length slots of the fixed rate access regions. Only 13 lowest significant bits shall be considered. 3 MSB are reserved for future used.

## Fixed rate Distance

Fixedrate\_Distance - This 16-bit unsigned number represents the distance in slots between additional slots assigned to the NIU. The NIU is assigned all slots that are a multiple of Fixedrate\_Distance from the Fixedrate\_Start\_slot which don't exceed Fixedrate\_End\_slot. The NIU may use the next Frame\_length slots of the fixed rate access regions from each of these additional slots.

#### Fixed rate End

Fixedrate\_End - This 16-bit unsigned number indicates the last slot that may be used for fixed rate access. The slots assigned to the NIU, as determined by using the Fixedrate\_Start\_slot, the Fixedrate\_Distance and the Frame\_length, cannot exceed this number. Only 13 lowest significant bits shall be considered. 3 MSB are reserved for future use.

# 5.5.10.3 Channel Error Management

During periods of connection inactivity (no upstream <MAC> transmission by an NIU), the NIU shall enter an Idle Mode. Idle mode is characterised by periodic transmission by the NIU of a <MAC> Idle Message. The Idle Mode transmission shall occur at a periodic rate sufficient for the INA to establish Packet Error Rate statistics. The Idle Message shall be sent only when the NIU/STB has at least one connection, after the <MAC> Connect Confirm Message is received.

A detailed description of idle message transmission, including state diagrams and time outs, is given in chapter 7 (Informative Note A).

## <MAC> Idle Message (Upstream contention or reserved)

The **<MAC> Idle Message** is sent by the NIU within the STB to the INA at predefined intervals (between 1 and 10 minutes) when the NIU is in idle mode.

Idle_Message(){	Bits	Bytes	Bit Number / Description
Idle_Sequence_Count	8	1	
Power_Control_Setting	8	1	
}			

Table 43: Idle Message structure

## Idle Sequence Count

Idle\_Sequence\_Count is a 8-bit unsigned integer representing the count (modulo 256) of <MAC> IDLE MESSAGES transmitted while the NIU is Idle. It counts the number of transmitted Idle Messages since the last sign-on, thus it starts counting at 0.

#### Power Control Setting

Power\_Control\_Setting is an 8-bit unsigned integer representing the actual power used by the NIU/STB for upstream transmission. The unit of measure is 0.5dB  $\mu$ V.

# 5.5.10.4 Link Managment Messages

## <MAC> Transmission Control Message (Singlecast or Broadcast Downstream)

The <MAC> TRANSMISSION CONTROL MESSAGE is sent to the NIU from the INA to control several aspects of the upstream transmission. This includes stopping upstream transmission, re-enabling transmission from a NIU or group of NIU's and rapidly changing the upstream frequency being used by a NIU or group of NIU's (see chapter 5.5.2.2). To identify a group of NIU's for switching frequencies, the <MAC> TRANSMISSION CONTROL MESSAGE is sent in broadcast mode with Old\_Downstream\_IB\_Frequency or Old\_Downstream\_OOB\_Frequency message. When broadcast with the Old\_Downstream\_IB\_Frequency Old\_Downstream\_OOB\_Frequency, the NIU shall compare its current frequency value to Old\_Downstream\_IB\_Frequency / Old\_Downstream\_OOB\_Frequency. When equal, the NIU shall switch to the new frequency specified in the message. When unequal, the NIU shall ignore the new frequency and remain on its current channel.

It is possible to give both a new downstream and a new upstream frequency in one message. In this case, every NIU takes into account only the new frequencies, for which the old frequency field matches.

A detailed description of the transmission control process, including state diagrams and time outs, is given in chapter 7 (Informative Note A).

**Table 44: Transmission Control Message structure** 

Transmission_Control_Message(){	Bits	Bytes	Bit Number /
Transmission Ossets L. Field		4	Description
Transmission_Control_Field		1	-
Reserved	1		7
Change_Timeouts	1		6: {no, yes}
Switch_Downstream_IB_Frequency	1		5: {no, yes}
Stop_Upstream_Transmission	1		4: {no, yes}
Start_Upstream_Transmission	1		3: {no, yes}
Old_Frequency_Included	1		2: {no, yes}
Switch_Downstream_OOB_Frequency	1		1: {no, yes}
Switch_Upstream_Frequency	1		0: {no, yes}
if (Transmission_Control_Field &=			
Switch_Upstream_Frequency &&			
Old_Frequency_Included){			
Old_Upstream_Frequency	(32)	(4)	
}			
if (Transmission_Control_Field &=			
Switch_Upstream_Frequency){			
New_Upstream_Frequency	(32)	(4)	
		(1)	
New_Upstream_Channel_Number	(3)		75
Reserved	(2)		43
Upstream_Rate	(3)		20
·	, ,	(1)	
MAC_Flag_Set	(5)	, ,	73
Reserved	(3)		20
}	, ,		
if (Transmission_Control_Field &=			
Switch_Downstream_OOB_Frequency &&			
Old_Frequency_Included){			
Old_Downstream_OOB_Frequency	(32)	(4)	
}	(0-)	( '/	
if (Transmission Control Field &=			
Switch_Downstream_OOB_Frequency){			
New Downstream OOB Frequency	(32)	(4)	
Downstream_Type	(8)	(1)	
	(0)	(.,	
}			
if (Transmission_Control_Field &=			
Switch_Downstream_IB_Frequency &&			
Old_Frequency_Included){			
Old Downstream IB Frequency	(32)	(4)	
}	()	\ ',	
if (Transmission_Control_Field &=			
Switch_Downstream_IB_Frequency){			
New Downstream IB Frequency	(32)	(4)	
}	(02)	(7)	
if (Transmission_Control_Field &=			
Change_Timeouts){			
Number_of_Timeouts	(8)	/1\	
	(0)	(1)	
for (I=0; I <number_of_timeouts;i++) td="" {<=""><td></td><td></td><td></td></number_of_timeouts;i++)>			
		/41	
Field Code	(4)	(1)	
Value	(4)		
value 1	(4)		1
<i>)</i>			
}			
}			

#### Transmission Control Field

Transmission Control Field specifies the control being asserted on the upstream channel:

Change\_Timeouts is a boolean when set indicates that timeout codes and values are included in the message. These timeouts are to be taken into account by the NIU in any case, even if the parameters Old\_Upstream\_Frequency, Old\_Downstream\_IB\_Frequency or Old\_Downstream\_OOB\_Frequency don't match.

Switch\_Downstream\_IB\_Frequency is a boolean when set indicates that a new downstream IB frequency is included in the message.

Stop\_Upstream\_Transmission is a boolean when set indicates that the NIU should halt its upstream transmission. The NIU shall respond to the ranging and power calibration message regardless of the setting of the start\_upstream\_transmission bit.

Start\_Upstream\_Transmission is a boolean when set indicates that the Network Interface Unit should resume transmission on its upstream channel.

Old\_Frequency\_Included is a boolean when set indicates that the Old Frequency value is included in the message and should be used to determine if a switch in frequency is necessary

Switch\_Downstream\_OOB\_Frequency is a boolean when set indicates that a new downstream OOB frequency is included in the message.

 $\label{thm:continuity:continuit$ 

## Old Upstream Frequency

Old\_Upstream\_Frequency is a 32-bit unsigned integer representing the frequency that should be used by the NIU to compare with its current frequency to determine if a change in channel is required.

## New Upstream Frequency

New\_Upstream\_Frequency is a 32-bit unsigned integer representing the reassigned upstream carrier center frequency. The unit of measure is Hz.

New\_Upstream\_Channel\_Number is a 3-bit unsigned integer which identifies the new logical channel (denoted by 'c') assigned to the NIU/STB. Refer to chapter 5.3.2.1 for the use of this parameter.

Upstream\_Rate is an 3-bit enumerated bype indicating the upstream transmission bit rate for the upstream connection. { Upstream\_256K, Upstream\_1.544M, Upstream\_3.088M, 3..7 reserved}

MAC\_Flag\_Set is a 5 bit field representing the first MAC Flag set assigned to the logical channel. A downstream channel contains information for each of its associated upstream channel. This information is contained within structures known as MAC Flag Sets represented by either 24 bits (denoted b0..b23) or by 3 bytes (denoted Rxa, Rxb, Rxc). This information is uniquely assigned to a given upstream channel. Refer to chapter 5.3.1.3 and chapter 5.3.2.1 for the use of this parameter.

## Old Downstream OOB Frequency

Old\_Downstream\_OOB\_Frequency is a 32-bit unsigned integer representing the frequency that should be used by the NIU to compare with its current frequency to determine if a change in channel is required.

## New Downstream OOB Frequency

New\_Downstream\_OOB\_Frequency is a 32-bit unsigned integer representing the reassigned downstream OOB carrier centre frequency. The unit of measure is Hz.

DownStream\_Type is an 8-bit enumerated type indicating the modulation format for the down stream connection. { reserved, QPSK\_1.544, QPSK\_3.088, , 3..255 reserved}

#### Old Downstream IB Frequency

Old\_Downstream\_IB\_Frequency is a 32-bit unsigned integer representing the frequency that should be used by the NIU to compare with its current frequency to determine if a change in channel is required.

#### New Downstream IB Frequency

New\_Downstream\_IB\_Frequency is a 32-bit unsigned integer representing the reassigned downstream IB carrier centre frequency. The unit of measure is Hz.

## Number\_of\_Timeouts

Number\_of\_Timeouts is a 8-bit unsigned integer which identifies the number of timeout codes and values included in the message.

### Code

Code is a 8-bit unsigned integer which identifies the timeout or group of timeouts (according to Table 21, Table 22 and Table 51) for which the following value is given.

#### Value

Value is a 8-bit unsigned integer which gives the value for the timeout or group of timeouts identified by the preceeding code. The unit of measure is 100 msec. The value must be between the Min Value and the Max Value given in Table 21, Table 22 and Table 51 (if specified). If no values are given in the <MAC> Default Configuration Message, the default values apply. Values for single timeouts overwrite values for groups of timeouts for the specified timeout.

#### <MAC> Link Management Response Message (Upstream contention or reserved)

The <MAC> LINK MANAGEMENT RESPONSE MESSAGE is sent by the NIU to the INA to indicate reception and processing of the previously sent Reprovision or Transmission Control Message. The format of the message is shown in the following table.

Table 45: Link Management Response Message structure

Link_Management_Acknowledge(){	Bits	Bytes	Bit Number / Description
Link_Management_Msg_Number	16	2	
}			

## Link Management Message Number

Link\_Management\_Msg\_Number is a 16-bit unsigned integer representing the previously received Reprovision or Transmission Control Message. The valid values for Link\_Management\_Msg\_Number are shown in the following table.

**Table 46: Link Management Message Number** 

Message Name	Link_Management_Msg_Number
Transmission Control Message	Transmission Control Message Type Value

Reprovision Message	Reprovision Message Type Value

# <MAC> Status Request Message (Downstream Singlecast)

The STATUS REQUEST message is sent by the INA to the NIU to retrieve information about the NIU's health, connection information and error states. The INA can request either the address parameters, error information, connection parameters or physical layer parameters from the NIU. The INA can only request one parameter type at a time to a particular NIU.

A detailed description of the status request process, including state diagrams and time outs, is given in chapter 7 (Informative Note A).

**Table 47: Status Request Message structure** 

Status_Request(){	Bits	Bytes	Bit Number / Description
Status_Control_Field		1	
Status_Type	8		07:{enum type}
}			

### Status Control Field

Status\_Type is a 8-bit enumerated type that indicates the status information the NIU should return

enum Status\_Type {Address\_Params, Error\_Params, Connection\_Params, Physical\_Layer\_Params, reserved 4..255};

# <MAC> Status Response Message (Upstream contention or reserved)

The <MAC> STATUS RESPONSE MESSAGE is sent by the NIU in response to the <MAC> STATUS REQUEST MESSAGE issued by the INA. The contents of the information provided in this message will vary depending on the request made by the INA and the state of the NIU. The message must be dissociated into separate messages if the resulting length of the message exceeds 40 bytes, even if fragmentation of <MAC> messages is supported.

**Table 48: Status Response Message Structure** 

Status_Response(){	Bits	Bytes	Bit Number/ Description
NIU_Status		4	2 ccc i puori
Reserved	29	-	313
Network Address Registered	1		2
Connection Established	1		1
Calibration_Operation_Complete	1		Ö
Response_Fields_Included	•	1	
Reserved	4		47:
Address_Params_Included	1 1		3:{no,yes}
Error Information Included	1 1		2:{no,yes}
Connection Params Included	1		1:{no,yes}
Physical_Layer_Params_Included	1 1		0:{no,yes}
if (Response_Fields_Included &=	<u> </u>		0.(110,ycs)
Address_Params_Included){			
NSAP Address	(160)	(20)	
MAC Address	(48)	(6)	
IVIAC_Address	(40)	(6)	
if (Response_Fields_Included &=			
· • = =			
Error_Information_Included){	(0)	(4)	
Number_Error_Codes_Included	(8)	(1)	
for(i=0;i <number_error_codes_included;< td=""><td></td><td></td><td></td></number_error_codes_included;<>			
i++){	(2)	(4)	
Error_Param_code	(8)	(1)	
Error_Param_Value	(16)	(2)	
}			
}			
if (Response_Fields_Included &=			
Connection_Params_Included) {			
Number_of_Connections	(8)	(1)	
for(i=0;i <number_of_connections;i++){< td=""><td></td><td></td><td></td></number_of_connections;i++){<>			
Connection_ID	(32)	(4)	
}			
}			
if (Response_Fields_Included &=			
Physical_Layer_Params_Included) {			
Power_Control_Setting	(8)	(1)	
Reserved	(16)	(2)	
Time_Offset_Value	(16)	(2)	
Upstream Frequency	(32)	(4)	
OOB_Downstream_Frequency	(32)	(4)	
IB_Downstream_Frequency	(32)	(4)	
SNR Estimated	(8)	(1)	
Power Level Estimated			
rowei_Levei_EStilliated	(8)	(1)	
<i>J</i>			
}			

# NIU Status

NIU\_Status is a 32-bit unsigned integer that indicates the current state of the NIU.

NIU_Status	NIU Status Code
Calibration_Operation_Complete	0x01
Connection_Established	0x02
Network_Address_Registered (reserved)	0x04

The state Calibration\_Operation\_Complete is reached after an Initialisation Complete Message with status zero. The Connection\_Established state indicates that the NIU has received a Connect Message indicating a connection which has not been released yet.

## Response Fields Included

Response\_Fields\_Included is an 8-bit unsigned integer that indicates what parameters are contained in the upstream status response.

#### NSAP Address

NSAP\_Address is a 20 byte address assigned to the NIU.

#### MAC Address

MAC\_Address is a 6 byte address assigned to the NIU.

#### Number of Error Codes Included

Number\_Error\_Codes\_Included is an 8-bit unsigned integer that indicates the number of error codes are contained in the response.

#### Error Parameter Code

Error\_Parameter\_Code is a 8-bit unsigned integers representing the type of error reported by the NIU. Error\_Parameter\_Codes not supported by the NIU are not send.

**Table 49: Error Parameter Code** 

Error Parameter Code Name	Error Parameter Code		
Reserved for compatibility	0x00		
Slot_Configuration_CRC_Error_Count	0x01		
Reed_Solomon_Error_Count	0x02		
ATM_Packet_Loss_Count	0x03		
Slot_Configuration_Count	0x04		
SL-ESF_CRC_Error_Count	0x05		
Reed_Solomon_Errors_Correctable	0x06		
Reed_Solomon_Errors_Non_Correctable	0x07		
SL-ESF Frame Count	0x08		

Reserved\_For\_Compatibility is reserved for compatibility with ETS 300 800 Version 1.

Slot\_Configuration\_CRC\_Error\_Count refers to the number of errors in Slot\_Configuration\_Count R bytes, as found by the CRC decoder.

Reed\_Solomon\_Error\_Count refers the number of errors as corrected by the Reed\_Solomon decoder.

ATM\_Packet\_Loss\_Count refers to the number of received ATM cells that were lost, either due to unrecoverable Reed-Solomon errors or because of an erroneous HEC of the ATM cells header.

Slot\_Configuration\_Count refers to the number of R-byte sets (Rxa-Rxc) used to calculate Slot\_Configuration\_CRC\_Error\_Count. This parameter is included so that NIUs can either measure only the errors in the R-byte set it is allocated to, or measure the errors in all R-byte sets.

SL-ESF\_CRC\_Error\_Count refers to the number of CRC errors found in consecutive C1-C6.

 ${\tt Reed\_Solomon\_Errors\_Correctable} \ \ \textbf{refers} \ \ \textbf{to} \ \ \textbf{MPEG} \ \ \textbf{frames} \ \ \textbf{received} \ \ \textbf{with} \ \ \textbf{correctable} \ \ \textbf{Reed} \ \ \textbf{Solomon} \ \ \textbf{Errors} \ \ \textbf{(IB only)}.$ 

Reed\_Solomon\_Errors\_Non\_Correctable refers to MPEG frames received with non correctable Reed Solomon Errors (IB only).

SL-ESF Frame Count refers to the number of frames the statistics in this message apply on.

#### Error Parameter Value

Error\_Parameter\_Value is a 16-bit unsigned integer representing error counts detected by the NIU. These values are set to 0 after they are transmitted to the INA. If the counter reaches its maximum value, it stops counting. The counter resumes counting after it is set to 0.

#### Number of Connections

Number\_of\_Connections is an 8-bit unsigned integer that indicates the number of connections that are specified in the response. Specifically, if the number of connections is too large to have a MAC message with less than 40 bytes, it is possible to send separate messages with only the number of connections indicated in each message.

#### **ConnectionID**

Connection\_ID is a 32-bit unsigned integer representing the global connection Identifier used by the NIU for this connection.

### Power Control Setting

Power\_Control\_Setting is an 8-bit unsigned integer representing the actual power used by the NIU/STB for upstream transmission. The unit of measure is 0.5dB  $\mu$ V.

#### Time Offset Value

Time\_Offset\_Value is a 16-bit short integer representing a relative offset of the upstream transmission timing. A negative value indicates an adjustment forward in time. A positive value indicates an adjustment back in time. The unit of measure is 100 nsec.

# Upstream Frequency

Upstream\_Frequency is a 32-bit unsigned integer representing the channel assigned to the connections. The unit of measure is in Hz.

## Downstream Frequencies

OOB\_Downstream\_Frequency is a 32-bit unsigned integer representing the Frequency where the connections on Out Of Band channel resides. The unit of measure is in Hz. When not significant field, this field is set to 0.

IB\_Downstream\_Frequency is a 32-bit unsigned integer representing the Frequency where the connections on In Band channel resides. The unit of measure is in Hz. When not significant field, this field is set to 0.

SNR\_Estimated is an 8 bit unsigned integer specifying the NIU estimated signal to noise ratio of the downstream carrying MAC messages. The unit is dB\*2. If the NIU is not able to estimate the value, the value zero (0) is used.

Power\_Level\_Estimated is an 8 bit unsigned integer specifying the NIU estimated power level of the downstream carrying MAC messages. The unit is dBuV\*2. If the NIU is not able to estimate the value, the value zero (0) is used.

### 5.6 Minislots


## 5.6.1 Carrying Minislots

Minislots may only be used to send <MAC> Reservation\_Request messages. Only contention access is allowed for minislots.

Minislots can be utilized in both in-band signaled and out-of-band signaled systems. The in-band signaling uses the same control fields as the out-of-band signaling inside the MAC flags, and the MAC messages are the same for both in-band and out-of-band signaling case. The phrase minislot refers to a physical frame structure of the upstream channel. The 64 byte upstream slots are called ATM slots.

## 5.6.2 Minislot framing structure

In case minislots are used, the upstream slot structure is sub-divided into three 21 byte long mini-slots. Each of these minislots can be sent by different user terminals. The upstream channel can support a mixture of ATM slots and minislots. The format of the minislot is shown in the following figure. It contains a 4 byte Unique Word (the minislot UW and the ATM slot UW will differ to enable simple decoding of the ATM slots and the minislots by the PHY), a single byte Start field, a 16 byte payload and a single byte guard band.

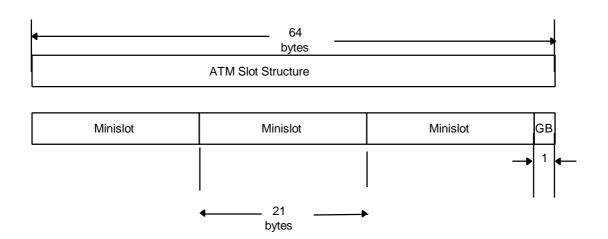

**Figure 37: Minislot Framing Structure.** 

For the structure of the minislot itself see chapter 5.5.2.6.

## 5.6.3 Contention resolution for minislots

Minislots may carry the Reservation Request MAC message. The message is sent in a contention based minislot. In the case of collision, the resolution is carried out according to a INA controlled ternary splitting algorithm (see Figure 38). All necessary information is transmitted in the minislot feedback and minislot allocation sections of the Reservation\_Grant\_Message.

If Stack\_Entry is not set a NIU may enter the contention process only when the Allocation\_Collision\_Number is equal to zero. If Stack\_Entry is set, the NIU may enter the contention resolution in any of the contention based minislots, independent of the value of Allocation\_Collision\_Number. In both cases the random number for the minislot selection in the range between 0 and Entry\_Spreading must be in the window from 0 to 2 before sending the request.

The Feedback\_Collision\_Number equals to 0xFF and 0xFE for idle and successful transmission, respectively. All other values of the Collision\_Number are numbered as collisions and used to select the retransmission minislots: the NIU must retransmit in a minislot having an Allocation\_Collision\_Number equal to Collision\_Number

The retransmission of the collided request takes place in a minislot that is randomly selected among the group of three minislots with the corresponding Allocation\_Collision\_Number.

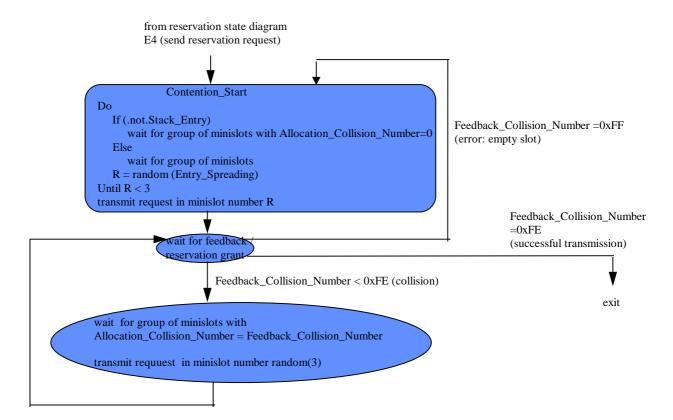


Figure 38: Ternary Splitting Algorithm

## 5.7 Security (optional)

The security solution consists of two separate sub-systems:

- A new set of MAC messages used for authentication and key-agreement between INA and NIU.
   These messages are used for key negotiation during connection setup as well as for on-the-fly update of keys (see chapter 5.7.7).
- On-the-fly encryption and decryption of payload data streams passed between INA and NIU.

When a connection is being setup, before payload data is transferred, one of three new request/response MAC message-pairs is used to generate a session key specific to the payload stream associated with the connection.

The session key is a shared secret between the INA and the NIU: even if every MAC message is intercepted, the cryptographic properties of the protocol ensure that an eavesdropper cannot determine the session key value.

This is achieved by using a public-key protocol, which requires no up-front shared secret, or a simpler protocol based on a long-term shared secret between INA and NIU called a cookie. The cookie is 160 bits long. It is also used for authenticating the NIU to the INA during connection-setup.

Each NIU will store its own cookie in non-volatile storage, whereas the INA will maintain a data-base of the cookie values of the NIUs on its network. Cookie values will be updated occasionally as dictated by security policy, but they are less vulnerable than session keys: a successful brute-force attack on a session key reveals nothing about the cookie value, nor any other session key.

The new MAC messages also implement a defence against clones: a NIUs that is a physical copy of an existing NIU and attempts to operate on the network under the cloned identity (when the cloned NIU itself is not registered on the network). The anti-cloning measure is a simple non-volatile 8-bit counter that is incremented synchronously at the INA and NIU over time: if a clone NIU engages in traffic with the INA, this will be detected the next time the cloned NIU connects because the counter value will be out of synchronisation.

If the clone attempts to operate concurrently with the cloned unit, there will be an immediate break-down of functionality for both units, due to confusion within the MAC protocol. This amounts to a denial-of-service attack, and the INA should be prepared for this kind of protocol failure.

Used mathematical operators and symbols in this chapter:

\* multiplication power

concatenation modulo division

(unsigned char)x ANSI C cast operator: converts value x to unsigned char

empty string (zero length)

nonce1 random string (INA) nonce2 random string (NIU)

## 5.7.1 Cryptographic primitives

The key exchange protocols and data stream encryption is based on a set of well-established primitive cryptographic functions. The functions and their associated key sizes can be changed in the future, in case crypt-analytic or brute-force attacks become a realistic threat.

The specific set of functions and key sizes are negotiated between INA and NIU at sign-on time. The functions supported at the present time are Diffie-Hellman, HMAC-SHA1, and DES. Check current cryptographic literature for any updates regarding their security and use.

The following sections give a brief overview of the cryptographic primitives, and details on how they are used in the protocol. Later sections describe the exact field layout of the new MAC messages.

The protocol parameters are described in terms of byte strings, where concatenation is denoted by the ~ operator. Integer quantities are represented as base-256 byte strings. Big-endian byte-ordering is used, that is, the most significant byte comes first. If necessary to reach a fixed length, the string is padded with zeros at the most significant end.

# 5.7.1.1 Public key exchange

A public key exchange primitive is used to allow the INA and NIU to agree on a secret, although communicating in public. The Diffie-Hellman scheme is based on unsigned integer arithmetic and works as follows (^ denotes exponentiation):

The NIU chooses a secret value y < m, and responds to the INA with the value  $Y = g^{y} \mod m$ .

The NIU now calculates  $s = X^y \mod m = (g^x)^y \mod m = g^(x^y) \mod m$ , whereas the INA calculates  $y^x \mod m = (g^y)^x \mod m = g^(y^x) = s$ , so the INA and NIU now agree on the value s.

The value of s is a secret shared between INA and NIU. To determine its value from the publicly communicated values m, g, X, and Y, an eavesdropper must determine x or y by solving an equation of the form  $Z = g^z \mod m$  for unknown z. This is known as the discreet logarithm problem and is computationally infeasible with current algorithms for sufficiently large values of m.

The parameter size supported are 512 bits for the prime number m, and hence also for the remaining values since all arithmetic is modulo m.

In the applicable MAC messages, the unsigned integer quantities m, g, X, and Y are encoded into fixed-size fields (64, 96, or 128 bytes) using big-endian byte-ordering.

# 5.7.1.2 Hashing

The protocol makes use of a keyed hash function that computes secure checksums which can only be verified with the possession of a secret key. The function has the one-way property, meaning that it is computationally infeasible to find an input value that maps to a given output value.

The hash function is also used to generate derived secret material based on a master secret. Because of the one-way property, the master secret is protected even if the derived secret is discovered.

In generic terms, the keyed hash function takes two byte strings as input, the key and a data string, and produces another string of bytes, the digest:

```
digest = H (key, data)
```

The H function must accept key and data parameters of any size, whereas the protocol is designed to accept digests of any size.

The specification currently supports the HMAC-SHA1 function defined in IETF RFC2104. It produces a 20-byte digest.

## 5.7.1.3 Encryption

Payload data is encrypted and decrypted using a symmetric-key block cipher, which is used in Cipher Block Chaining (CBC) mode with special handling of any final odd-size block.

In generic terms, the encryption and decryption functions take two byte strings as input, the key and a data block, and produce as output another data block of the same length:

```
ciphertext = E ( key, plaintext )

D ( key, ciphertext ) = plaintext
```

The key length and block length is given by the chosen cipher, and the payload stream processing logic will apply it as appropriate to data units of various sizes.

The specification currently supports the DES algorithm, which has a block size is 8 bytes, and various options for key length based on an 8-byte raw key block (see 5.7.5).

#### 5.7.1.4 Pseudo-random numbers

The protocols used for generating secret values depend on the availability of a pseudo-random, that is, practically unpredictable, endless string of bytes. This will typically be produced with a Pseudo-Random Number Generator, PRNG, algorithm.

The random bytes are used to generate the secret Diffie-Hellman values, x and y, and for nonce values used during key exchange. The unpredictable nature of the random input ensures that different secret values are produced each time, and also prevents replay of old intercepted messages.

This specification does not require any particular algorithm, only that the INA and NIU each choose one that is well-established and cryptographically analysed.

The hardest aspect of using a PRNG is to initialise it with an unpredictable seed value. The seed should contain multiple high-granularity device-dependent time-samples, samplings of cable line noise, as well as any other available pseudo-random material, like file allocation tables, etc. These random source values are then hashed together to squeeze out the entropy for the seed value.

## 5.7.2 Main Key Exchange, MKE

Main Key Exchange uses Diffie-Hellman to develop a shared secret between the INA and NIU, which is independent of the cookie value. Furthermore, it uses the cookie value to authenticate the NIU to the INA. It optionally uses the newly developed shared secret to update the cookie value. Finally, it derives a shared secret key used for the security context that is used to process payload stream data.

The exchange is initiated by the INA sending a message containing the Diffie-Hellman values, m, g, X, and a random nonce string, nonce1. The NIU responds with a message containing its Diffie-Hellman value, Y, a random nonce string, nonce2, and an authentication string, auth.

The INA and NIU each use the same formula to calculate the authentication string ( ~ means concatenation):

```
auth = H (cookie, nonce1 ~ nonce2)
```

which is communicated by the NIU and checked by the INA. This proves the identity of the NIU, since it requires knowledge of the cookie to calculate the correct value of auth.

The NIU and INA each use the Diffie-Hellman values (see 5.7.1.1) to arrive at the same secret value, s:

```
s = g^{(x^*y)} \mod m.
```

This unsigned integer value is encoded as a byte string, of length specified by the Diffie-Hellman parameter size, using big-endian byte ordering. It is then used to calculate a temporary shared secret string, temp:

```
temp = H (encode (s), nonce2 ~ nonce1).
```

If the cookie is to be updated, the new value is computed in sections for n = 1, 2, ...

```
newcookie(n) = H (temp ~ (unsigned char)1 ~ (unsigned char)n, "")
```

where (unsigned char) is the cast operator of the C programming language, and "" is the empty string (zero length). These string values are computed and concatenated until the total length matches or exceeds the length of the cookie. The cookie is then obtained by taking the first 20 bytes out of the concatenated sections, starting from the beginning.

The session key used for payload stream encryption is likewise computed in sections:

```
key(n) = H (temp \sim (unsigned char) 2 \sim (unsigned char) n, "")
```

where, again, a sufficient number of sections are calculated to produce enough bytes to cover the length of the key. The session key is obtained "in the same manner as the cookie" by taking the required number of bytes out of the concatenated sections, starting from the beginning.

## 5.7.3 Quick Key Exchange, QKE

Quick Key Exchange uses the existing cookie value to authenticate the NIU to the INA, and then derive a shared secret key used for the security context that is used to process payload stream data.

The exchange is initiated by the INA sending a message containing a random nonce string, nonce1. The NIU responds with a message containing a random nonce string, nonce2, and an authentication value, auth.

The value of auth is calculated in the same way as for Main Key Exchange, and is likewise used to verify the identity of the NIU (see 5.7.2).

The NIU and INA then each calculate a temporary shared secret string, temp:

```
temp = H (cookie ~ (unsigned char)3, nonce2 ~ nonce1).
```

This value is used to produce the payload encryption key in the same way as for Main Key Exchange (see 5.7.2).

## 5.7.4 Explicit Key Exchange, EKE

Explicit Key Exchange is used by the INA to deliver a pre-determined session key to the NIU. The session key is encrypted under a temporary key derived from the cookie value, and is used for the security context that is used to process payload stream data.

The delivery is performed by the INA sending a message containing a random nonce string, nonce1, and a byte string value, encryptedkey, which has the same length as a key used for payload encryption. The NIU responds with a message containing a random nonce string, nonce2, and an authentication value, auth.

The value of auth is calculated in the same way as for Main Key Exchange, and is likewise used to verify the identity of the NIU (see 5.7.2).

Both the INA and NIU calculate a temporary shared secret string, temp:

```
temp = H (cookie ~ (unsigned char)4, nonce1)
```

which is used to produce sections of a temporary key, in the same way as for Main Key Exchange (see 5.7.2). The INA uses these temporary key string sections to XOR with the session key to obtain the encryptedkey value, and the NIU performs a second XOR operation to decrypt the session key value.

For normal DES, 8 bytes of raw key data are delivered, which are used to derive the actual key with the appropriate number of effective bits, as described below (see 5.7.5).

# 5.7.5 Key derivation

The actual key value used for processing payload data is derived from the key sections developed during key exchange. For DES, 8 bytes of raw key data is required, so a single 20-byte section, key(1), computed by HMAC-SHA1 is sufficient.

In each byte, the least significant bit is not used (it can be used as an odd-parity bit of the remaining 7 bits), bringing the effective key size down to 56 bits.

Furthermore, when used in 40-bit mode, the two most significant bits of each byte in the key are zeroed.

## 5.7.6 Data stream processing

Security can be applied to various payload data streams selectively. The elementary unit is called a security context, which contains two session keys used for encrypting and decrypting a stream of payload data. Only one of the keys is used to process any particular payload unit. Each key can be used for processing both upstream and downstream payload data.

Having two keys allows negotiation of a new key to take place while payload data is processed using the old one, and then do an immediate switch-over once the new key is agreed upon, without interrupting payload traffic. The INA initiates the key exchanges, and can start using a session key for downstream traffic encryption once the key exchange is complete. For upstream traffic encryption, the NIU should use whichever key was used by the INA in the most recent payload unit.

# 5.7.6.1 Payload streams

A payload stream is identified by either of:

- a 24-bit (UNI) ATM virtual circuit VPI/VCI: this is used for ATM-based IB downstream, OOB downstream, and upstream payload data. The ATM circuit can be one-to-one, or one end-point of a multi-cast circuit.
- a 48-bit MAC-address: this is used for DVB Multiprotocol Encapsulation downstream payload data.
   The MAC-address can be the physical address of the STB or a pseudo address used for MAC-address based multi-casting.

When a payload stream is secured, the NIU and the INA will have matching security contexts, which are used to encrypt/decrypt both upstream and downstream traffic. For unsecured payload streams there is no security context, and payload data is not encrypted.

To support encrypted multi-cast traffic, the same security context will be created for each member using EKE (see 5.7.4), so that each NIU can decrypt the common payload data stream.

## 5.7.6.2 Data encryption

Within a payload data stream, data is carried in individual units at the various protocol layers. Encryption is applied at the lowest layer possible, consistent with the payload stream:

• ATM-based payload streams: the unit of encryption is a single ATM cell. The 48-byte cell payload is encrypted using the security context implied by the 24-bit VPI/VCI of the cell header.

Encryption is transparent to higher-level protocol layers, which see only unencrypted cell payloads.

DVB Multiprotocol Encapsulation payload streams: the unit of encryption is a single DVB Multiprotocol Encapsulation section. The datagram\_data\_bytes (between the MAC-address and the CRC/checksum) are encrypted using the security context implied by the 48-bit MAC address in the section header. The DVB Multiprotocol Encapsulation payload to be encrypted will be adjusted to have a length of n \* 8 bytes (n is an integer) by adding an appropriate amount (0 .. 7 bytes) of stuffing bytes before the CRC/checksum according to [12].The CRC/checksum is calculated on the encrypted datagram bytes, while higher-level protocol layers see only unencrypted datagrams.

# 5.7.6.3 Encryption flags

There are flags in the header of each encryption unit specifying which of the two sessions keys of the security context is used.

The receiver will use the security context of the payload stream to see if decryption shall be done.

- ATM cells: the least significant two bits of the Generic Flow Control, GFC, field of the cell header are used:
  - · 00: not encrypted

- · 01: reserved
- · 10: encrypted using session key 0
- · 11: encrypted using session key 1

The most significant two bits of the GFC field are reserved for future use, and shall be set to 00.

- DVB Multiprotocol Encapsulation sections, according to EN 301 192: the 2-bit payload\_scrambling\_control field in the section header is used:
  - 00: not encrypted
  - 01: reserved
  - 10: encrypted using session key 0
  - 11: encrypted using session key 1

The 2-bit address\_scrambling\_control field in the section header is 00 all the time (the address is not scrambled).

#### 5.7.6.4 Chaining and initialisation vector

Within encryption units, the block encryption algorithm is used in Cipher Block Chaining mode, CBC: the first plain-text block is XOR'ed with an initialisation vector (IV), and subsequent blocks are XOR'ed with the previous cipher-text block, before the block is encrypted. Decryption is opposite: each cipher-text block is first decrypted and then XOR'ed with the previous chaining value.

The value of the IV for a given encryption unit is zero.

# 5.7.7 Security Establishment

Security issues are handled in the following situations:

When a NIU registers on the network it will do an initial handshake with the INA to establish the level
of security support, in particular the cryptographic algorithms and key sizes to be used subsequently.

The handshake consists of <MAC>Security Sign-On and <MAC>Security Sign-On Response messages (see 5.7.9.1 & 5.7.9.2) which are exchanged immediately prior to the **Complete** message.

A failure during this stage of the protocol causes the INA to revert to non-secure interaction with the NIU.

The security context of a secured payload stream is established when the underlying MAC connection
is created, before any stream data is transmitted. One session key is agreed, and the cookie and/or
clone counter values may be updated as part of the exchange.

The key exchange consists of <MAC>Main/Quick/Explicit Key Exchange and <MAC>Main/Quick/Explicit Key Exchange Response messages (see 5.7.9.3-5.7.9.8) which are exchanged immediately prior to the < MAC>Connect Confirm message.

A failure during this stage of the protocol causes the connection-setup operation to fail.

After a connection is in use, each session key of the security context of the payload stream can be
updated on-the-fly, that is, without re-establishing the underlying connection, and without interrupting

payload data traffic. The cookie and/or clone counter values cannot be updated as part of the exchange.

A new session key is negotiated using the same MAC messages used during connection-setup. There is no **<MAC>Connect Confirm** message.

A failure during this stage of the protocol causes the connection to be dropped.

While a session key of the security context is being updated for a particular connection, payload stream data traffic should be encrypted using the other session key or not at all. Once the key exchange is complete, the INA can start using it for subsequent downstream traffic, thereby directing the NIU to use it for upstream traffic.

All three variants of key exchange messages authenticate the NIU based on the existing cookie value. They also perform the clone detection counter check, and optionally increment the clone counter. Only MKE can update the cookie.

The security MAC message flow is naturally serialised within the context of the particular connection that is being setup. But, in as far as multiple connections are being established concurrently, there can also be multiple concurrent key exchanges whose messages are interleaved. The NIU is free to complete outstanding key exchanges on separate connections in any order it chooses

#### 5.7.8 Persistent state variables

To facilitate authentication, key exchange, and clone detection, the NIU has a set of state variables whose values are retained across registrations and power cycles:

Name	Function	Size
Cookie	authentication cookie	160 bits
Cookie_SN	cookie sequence number	1 bit
Clone_Counter	clone detection counter	8 bits
Clone_Counter_SN	clone counter sequence number	1 bit

Table 50: Persistent NIU variables

The sequence numbers are used to ensure that the INA and NIU can stay synchronised even in case the NIU drops off the net in the middle of a protocol exchange.

# 5.7.8.1 Guaranteed delivery

Within the setup protocol for a MAC connection, the INA will ensure that a protocol exchange is complete before proceeding. If it doesn't receive a response MAC message within a given time-interval, it will retransmit the original message unchanged. The NIU will do likewise in situations where it requires a response. If the number of re-transmissions exceeds three, the protocol fails.

Due to race conditions, superfluous re-transmissions may be generated by both INA and NIU. They must discard such messages after the first message has in fact been received.

If the NIU is not ready to respond within the specified time-out, it can send <MAC>Wait messages (see 5.7.9.9) to extend the time it has available to generate a proper response. Upon receiving the wait message, the INA will restart its timer and reset the retry count.

The protocol time-out values can be set by the <MAC> Default Configuration Message, otherwise the following default values apply:

Table 51: Protocol time-out values

Code	Protocol stage	Default Value
0xD	Security Sign-On	90
0xE	Main Key Exchange	600
0xF	Quick Key Exchange	300
	Explicit Key Exchange	

The Unit for the timeouts is msec.

# 5.7.9 Security MAC Messages

# 5.7.9.1 <MAC>Security Sign-On (Single-cast Downstream)

As part of the registration process when a NIU attaches to the network, the INA and NIU will negotiate the specific set of cryptographic algorithms and parameters used in the key exchange protocols and for payload encryption.

The selections are global, and apply to all subsequent security exchanges for as long as the NIU is registered on the network.

The selections affect the layout of the subsequent key exchange messages, since they have fields that vary in size according to the choice of algorithms and parameters.

The INA indicates which algorithms and parameters it supports by setting the appropriate bits in the **<MAC>Security Sign-On** message. There are four classes of algorithms, and the INA will set one or more bits in each of the four fields to indicate which specific choices it supports:

Table 52: Security Sign-On message structure

Security_Sign-On (){	Bits	Bytes	Bit Number / Description	Parameter bytes
Public_Key_Alg PKA_Reserved PKA_DH_512	7	1	Public key algorithm choices: 71: Reserved, must be 0 0:(yes/no) Diffie-Hellman, 512 bits	P <sub>pka</sub> : 64
Hash_Alg HA_Reserved HA_HMACSHA1	7	1	Hash algorithm choices: 71: Reserved, must be 0 0:(yes/no) HMAC-SHA1	P <sub>ha</sub> :
Encryption_Alg EA_Reserved EA_DES_56 EA_DES_40	6 1 1	1	Encryption algorithm choices: 72: Reserved, must be 0 1:(yes/no) DES, 56 bit key 0:(yes/no) DES, 40 bit key	P <sub>ea</sub> : 8
Nonce_Size NS_Reserved NS_64	7	1	Nonce size choices: 71: Reserved, must be 0 0: (yes/no) 8 random bytes	P <sub>ns</sub> :
Reserved }	32	4	Reserved for future use, must be 0	

If the security option is supported, the minimum subset to support is PKA\_DH\_512, HA\_HMACSHA1, EA\_DES\_40, and NS\_64.

EA\_DES\_56 is optional.

# 5.7.9.2 <MAC>Security Sign-On Response (Upstream)

In its security sign-on response, the NIU indicates which specific algorithms and parameters to use. It does so by choosing one of the suggestions offered by the INA within each of the four classes.

The fields of the response message have the same definition as the message from the INA, except that exactly one bit will be set in each field.

If the NIU is unable to support any of the suggested algorithms for any class, it must return an all-zero field value, and the INA will revert to non-secure communication or re-issue the **MAC>Security Sign-On** message with different choices.

Table 53: Security Sign-On Response message structure

Security_Sign- On_Response() {	Bits	Bytes	Bit Number / Description	Paramet er bytes
Public_Key_Alg		1	Public key algorithm choices:	P <sub>pka</sub> :
PKA_Reserved PKA DH 512	1		71: Reserved, must be 0 0:(yes/no) Diffie-Hellman, 512 bits	64
FRA_DI1_512	'		0.(yes/110) Diffie-Fieliffian, 312 bits	
Hash_Alg		1	Hash algorithm choices:	P <sub>ha</sub> :
HA_Reserved	7		71: Reserved, must be 0	20
HA_HMACSHA1	1		0:(yes/no) HMAC-SHA1	
Encryption_Alg		1	Encryption algorithm choices:	P <sub>ea</sub> :
EA_Reserved	6		72: Reserved, must be 0	8
EA_DES_56	1		1:(yes/no) DES, 56 bit key	
EA_DES_40	1		0:(yes/no) DES, 40 bit key	0
				8
Nonce_Size		1	Nonce size choices:	P <sub>ns</sub> :
NS_Reserved	7		71: Reserved, must be 0	8
NS_64	1		0: (yes/no) 8 random bytes	
Reserved	32	4	Reserved for future use, must be 0	
}				

# 5.7.9.3 <MAC>Main Key Exchange (Single-cast Downstream)

The Main Key Exchange message is used to start a cookie-independent key exchange with the NIU, and also instructs the NIU whether to update its cookie value and clone counter value.

Table 54: Main Key Exchange message structure

Main_Key_Exchange () {	Bits	Bytes	Bit Number / Description
Connection_ID	32	4	MAC connection identifier
Flags		1	
Reserved	4		74: must be 0
FL_Initialising	1		3:(yes/no) first ever key exchange
FL_Update_Cookie	1		2:(yes/no) make new cookie value
FL_Update_Counter	1		1:(yes/no) increment clone counter
FL_Session_Key	1		0: select session key 0 or 1
Reserved	8	1	Reserved for future use, must be 0
Nonce		P <sub>ns</sub>	Random string nonce1
DH_Modulus		$P_{pka}$	Diffie-Hellman modulus m
DH_Generator		$P_{pka}$	Diffie-Hellman generator g
DH_Public_X		$P_{pka}$	Diffie-Hellman public value X
}			

The FL Session Key bit specifies which session key of the security context to update.

If the FL\_Update\_Counter bit is set, it instructs the NIU to increment its clone detection counter.

If the FL\_Update\_Cookie bit is set, it instructs the NIU to generate a new cookie value to be used for future authentications and key exchanges, and to reset the clone detection counter to zero.

Any updates to the cookie, clone counter, or their associated sequence number bits do not take effect until the following **<MAC>Connect Confirm** message is received by the NIU.

If the FL\_Initialising bit is set, it tells the NIU that the Authenticator field in the response will be ignored.

The sizes of the multi-byte fields are determined by the parameters of the algorithms selected during security sign-on (see 5.7.9.1).

The INA will use its own private Diffie-Hellman value, x, together with the fields of the response message from the NIU to derive the new session key value, as well as any new value for the cookie (see 5.7.2).

# 5.7.9.4 <MAC>Main Key Exchange Response (Upstream)

The Main Key Exchange Response message authenticates the NIU and completes the cookie-independent key exchange with the INA. It also contains the current value of the clone detection counter.

Table 55: Main Key Exchange Response message structure

Main_Key_Exchange_Re-sponse () {	Bits	Bytes	Bit Number / Description
Connection_ID	32	4	MAC connection identifier
Flags		1	
Reserved	6		72: must be 0
FL_Cookie_SN	1		1: cookie sequence number
FL_Counter_SN	1		0: clone counter sequence number
Clone_Counter	8	1	Current clone counter value
Nonce		P <sub>ns</sub>	Random string nonce2
Authenticator		P <sub>ha</sub>	Authentication value auth
DH_Public_Y		$P_{pka}$	Diffie-Hellman public value Y

}

The FL\_Counter\_SN bit is the current sequence number of the clone detection counter. The Clone\_Counter field is the current value of the counter. A clone collision has been detected if the INA finds a mis-match from the expected value.

The FL\_Cookie\_SN bit is the sequence number of the cookie used for authentication.

If the FL\_Update\_Cookie bit was set by the INA, the NIU will generate a new cookie value and complement the cookie sequence number bit. It will also reset the clone counter value to zero and clear the clone counter sequence number bit.

If the FL\_Update\_Counter bit was set by the INA, the NIU will increment the value of the clone counter (modulo 256) and complement the clone counter sequence number bit.

Any updates to the cookie, clone counter, or their associated sequence number bits do not take effect, and must not be committed to non-volatile storage, until the following **<MAC>Connect Confirm** message is received by the NIU.

The NIU uses its private Diffie-Hellman value, y, together with the message fields to derive the new session key value, as well as any new value for the cookie (see 5.7.2).

# 5.7.9.5 <MAC>Quick Key Exchange (Single-cast Downstream)

The Quick Key Exchange message is used to start a cookie-dependent key exchange with the NIU, and also instructs the NIU whether to update its clone counter value.

Quick_Key_Exchange () {	Bits	Bytes	Bit Number / Description
Connection_ID	32	4	MAC connection identifier
Flags	8	1	
Reserved	6		72: must be 0
FL_Update_Counter	1		1:(yes/no) increment clone counter
FL_Session_Key	1		0: select session key 0 or 1
Reserved	8	1	Reserved for future use, must be 0
Nonce		P <sub>ns</sub>	Random string nonce1
}			

Table 56: Quick Key Exchange message structure

The FL\_Session\_Key bit specifies which session key of the security context to update.

If the FL\_Update\_Counter bit is set, it instructs the NIU to increment its clone detection counter.

The INA will use its knowledge of the cookie value together with the fields of the response message from the NIU to derive the session key value (see 5.7.3).

#### 5.7.9.6 <MAC>Quick Key Exchange Response (Upstream)

The Quick Key Exchange Response message authenticates the NIU and completes the cookiedependent key exchange with the INA. It also contains the current value of the clone detection counter.

Table 57: Quick Key Exchange Response message structure

Quick_Key_Exchange_Re-sponse () {	Bits	Bytes	Bit Number / Description
Connection_ID	32	4	MAC connection identifier
Flags		1	
Reserved	6		72: must be 0
FL_Cookie_SN	1		1: cookie sequence number
FL_Counter_SN	1		0: clone counter sequence number
Clone_Counter	8	1	Current clone counter value
Nonce		P <sub>ns</sub>	Random string nonce2
Authenticator		P <sub>ha</sub>	Authentication value auth
}			

The FL\_Cookie\_SN bit is the sequence number of the cookie used for authentication.

The FL\_Counter\_SN bit is the current sequence number of the clone detection counter. The Clone\_Counter field is the current value of the counter. A clone collision has been detected if the INA finds a mis-match from the expected value.

If the FL\_Update\_Counter bit was set by the INA, the NIU will increment the value of the clone counter (modulo 256) and complement the clone counter sequence number bit. The updated values do not take effect, and must not be committed to non-volatile storage, until the following <a href="MAC>Connect Confirm">MAC>Connect Confirm</a> message is received by the NIU.

The NIU uses the cookie value together with the message fields to derive the session key value (see 5.7.3).

# 5.7.9.7 <MAC>Explicit Key Exchange (Single-cast Downstream)

The Explicit Key Exchange message is used to securely deliver an existing session key value to the NIU, and also instructs the NIU whether to update its clone counter value.

Table 58: Explicit Key Exchange message structure

Explicit_Key_Exchange (){	Bits	Bytes	Bit Number / Description
Connection_ID	32	4	MAC connection identifier
Flags		1	
Reserved	6		72: must be 0
FL_Update_Counter	1		1:(yes/no) increment clone counter
FL_Session_Key	1		0: select session key 0 or 1
Reserved	8	1	Reserved for future use, must be 0
Nonce		P <sub>ns</sub>	Random string nonce1
Encryptedkey		P <sub>ea</sub>	Encrypted session key
liciypicukey		rea	Life ypted session key
}			

The FL\_Session\_Key bit specifies which session key of the security context to update.

If the FL\_Update\_Counter bit is set, it instructs the NIU to increment its clone detection counter.

The INA has used its knowledge of the cookie value to encrypt the session key value (see 5.7.4).

# 5.7.9.8 <MAC>Explicit Key Exchange Response (Upstream)

The Explicit Key Exchange Response message authenticates the NIU and acknowledges receipt of the delivered key. It also contains the current value of the clone detection counter.

Table 59: Explicit Key Exchange Response message structure

Explicit_Key_Exchange_Response () {	Bits	Bytes	Bit Number / Description
Connection_ID	32	4	MAC connection identifier
Flags		1	
Reserved	6		72: must be 0
FL_Cookie_SN	1		1: cookie sequence number
FL_Counter_SN	1		0: clone counter sequence number
Clone_Counter	8	1	Current clone counter value
Nonce		P <sub>ns</sub>	Random string nonce2
Authenticator		P <sub>ha</sub>	Authentication value auth
}			

The FL\_Cookie\_SN bit is the sequence number of the cookie used for authentication and session key decryption. If the INA determines that it has used the wrong cookie for session key encryption it will reissue the **<MAC>Explicit Key Exchange** using the old cookie value.

The FL\_Counter\_SN bit is the current sequence number of the clone detection counter. The Clone\_Counter field is the current value of the counter. A clone collision has been detected if the INA finds a mis-match from the expected value.

If the FL\_Update\_Counter bit was set by the INA, the NIU will increment the value of the clone counter (modulo 256) and complement the clone counter sequence number bit. The updated values do not take effect, and must not be committed to non-volatile storage, until the following <a href="MAC>Connect Confirm">MAC>Connect Confirm</a> message is received by the NIU.

The NIU uses the cookie value together with the message fields to decrypt the session key value (see 5.7.4).

# 5.7.9.9 <MAC>Wait (Upstream)

The Wait message is used by the NIU to extend the time the INA waits for a reply to a given message. Upon receiving it, the INA will reset its time-out value and retry count (see 5.7.8.1).

Table 60: Wait message structure

Wait () {	Bits	Bytes	Bit Number / Description
Connection_ID	32	4	MAC connection identifier
Message_Type	8	1	Type of message from INA
Reserved	8	1	Reserved for future use, must be 0
}			

The Message\_Type field is the message type value of the message received from the INA being processed. If the message is specific to a connection, the Connection\_ID field identifies which; otherwise this field is zero. The NIU indicates that it is currently unable to send a reply to the message.

# 6 Interactive Cable STB / Cable Data Modem Mid Layer Protocol

This chapter describes the mid layers to be used when the present standard is used to implement Interactive Cable STB respectively Cable Data Modem applications. Three solutions are given for this application, Direct IP, Ethernet MAC bridging and PPP. Direct IP is mandatory for both INA and NIU, the other two solutions are optional. Interoperability testing will be performed on Ethernet MAC bridging until end 99.

# 6.1 Direct IP

The goal of this chapter is to allow compatible and interoperable implementations for transmitting IP datagrams [16] over ATM AAL5 [13] and DVB Multiprotocol Encapsulation [12], as used by this document for upstream and downstream transmission.

# 6.1.1 Framing

INA and NIU/STB must support an MTU size of 1500 Byte.

## 6.1.1.1 Upstream and OOB Downstream

The IP datagram shall be carried as such in the paylaod of the AAL5 CPCS-PDU. This method is described in RFC 1483 [13] as VC based multiplexing for routed protocols and is generally also known as null encapsulation.

#### 6.1.1.2 IB Downstream

The IP datagram shall be carried as such in the DVB Multiprotocol Encapsulation sections of EN 301 192 [12], LLC SNAP flag is set to zero. Each IP datagram shall be carried in a single section.

#### 6.1.2 Addressing

In upstream framing structure and in downstream out-of-band framing structure, the addressing of a specific NIU/STB is done with a VPI/VCI pair. At least one VPI/VCI pair is assigned per NIU/STB. The following VPI/VCI pairs are reserved:

VPI / VCI	remark
any / 0x00000x001F	reserved for ATM use
0x00 / 0x0020	reserved for DAVIC use
0x00 / 0x0021	reserved for DVB MAC messages
0x00 / 0x0022	reserved for broadcast

All other VPI/VCI pairs can be assigned by the INA for carrying IP traffic. The VPI/VCI is provided through the DVB MAC protocol.

# 6.1.2.1 IP Broadcast and Multicast from STB/NIU to INA

All upstream IP broadcast and multicast packets shall be transmitted with an upstream VPI/VCI given in a MAC connect message.

#### 6.1.2.2 IP Broadcast and Multicast from INA to STB/NIU

#### **IB** downstream

For IB downstream, IP broadcast and multicast shall be carried out according to EN 301 192 as described below:

IB downstream IP broadcast shall be transmitted with the broadcast MAC address FF:FF:FF:FF:FF. An IP multicast group is joined according to the IGMP protocol [18]. Additionally, the INA may assign a new DVB MAC connection to the NIU/STB for that purpose, including a multicast MAC address. IB downstream multicast shall than be transmitted with that multicast MAC address.

#### **OOB** downstream

OOB downstream IP broadcast shall be transmitted with a VPI/VCI value of 0x00/0x0022. An IP multicast group is joined according to the IGMP protocol [18]. Additionally, the INA may assign a new MAC connection to the NIU/STB for that purpose. QPSK downstream multicast shall than be transmitted with the VPI/VCI given in the corresponding MAC connect message.

#### 6.1.3 IP Address Assignment

After receiving the MAC Connect confirm message, the NIU/STB must use either the BOOTP or the DHCP protocol according to RFC 951 / RFC 2131 to get an IP address from the network, unless a fixed IP address was assigned to the NIU/STB by the operator and made known to the INA. All additional IP addresses of customer premises equipment connected to the NIU/STB must be assigned through BOOTP or DHCP, unless fixed IP addresses have been assigned by the operator. Singlecast downstream traffic with a destination IP address not assigned through BOOTP, DHCP or the operator must be discarded by the INA. Upstream traffic with a source host IP address not assigned through BOOTP, DHCP or the operator must be discarded by the NIU/STB and by the INA.

# 6.1.4 INA Interfaces (Informative)

t.b.d.

# 6.1.5 NIU/STB Interfaces (Informative)

t.b.d.

# 6.2 Ethernet MAC Bridging

The goal of this chapter is to allow compatible and interoperable implementations for transmitting ISO 8802.3 Ethernet MAC frames [20] over ATM AAL5 [13] and DVB Multiprotocol Encapsulation [12], as used by the present standard for upstream and downstream transmission.

# 6.2.1 Framing

# 6.2.1.1 Upstream and OOB Downstream

The Ethernet MAC frame shall be carried in the paylaod of the AAL5 CPCS-PDU as described in RFC 1483 [13] as LLC encapsulation for bridged Ethernet/802.3 PDUs, using PID 0x00-07 (LAN FCS is not transmitted). No padding bytes are inserted between the LLC/SNAP header and the Ethernet MAC frame.

#### 6.2.1.2 IB Downstream

The Ethernet MAC frame shall be carried in the payload of the DVB Multiprotocol Encapsulation sections as described in EN 301 192 [12], LLC\_SNAP\_flag is set to one. The value of the LLC/SNAP header is 0xAA-AA-03-00-80-C2-00-07. Each Ethernet MAC frame shall be carried in a single section.

#### 6.2.2 Addressing

In upstream framing structure and in downstream out-of-band framing structure, the addressing of a specific NIU/STB is done with a VPI/VCI pair. At least one VPI/VCI pair is assigned per NIU/STB. The following VPI/VCI pairs are reserved:

VPI / VCI	remark
any / 0x00000x001F	reserved for ATM use
0x00 / 0x0020	reserved for DAVIC use
0x00 / 0x0021	reserved for DVB MAC messages
0x00 / 0x0022	reserved for broadcast

All other VPI/VCI pairs can be assigned by the INA for carrying Ethernet traffic. The VPI/VCI is provided through the DVB MAC protocol.

#### 6.3 PPP

The goal of this chapter is to allow compatible and interoperable implementations for transmitting PPP packets over ATM AAL5 and DVB Multiprotocol Encapsulation [12], as used by the present standard for upstream and downstream transmission.

#### 6.3.1 Framing

The implementation must be done according to the RFC2364, as mentioned in paragraph 5.

# 6.3.1.1 Upstream and OOB Downstream

The PPP frame shall be carried as such in the payload of the AAL5 CPCS-PDU. This method is described in RFC 2364 (Figure 1) [13]. The flag sequences, that delimit the beginning and the end of each frame, don't exist any more. The Asynchronous-Control-Character-Map (ACCM) is not negotiated. In this way, the stuffing procedure is no longer necessary.

# 6.3.1.2 IB Downstream

The PPP datagrams shall be carried in the payload of the DSM-CC sections as described in EN 301 192 [12] (DVB multiprotocol encapsulation) with the LLC\_SNAP\_flag set to one. The encapsulation of PPP into LLC/SNAP is defined in RFC2364 "PPP over AAL5" (with the NLPID value for PPP set to 0xCF). Each PPP frame shall be carried in a single section.

## 6.3.2 Addressing

In upstream framing structure and in downstream out-of-band framing structure, the addressing of a specific NIU/STB is done with a VPI/VCI pair. At least one VPI/VCI pair is assigned per NIU/STB. The following VPI/VCI pairs are reserved:

VPI / VCI	remark
any / 0x00000x001F	reserved for ATM use
0x00 / 0x0020	reserved for DAVIC use
0x00 / 0x0021	reserved for DVB MAC messages
0x00 / 0x0022	reserved for broadcast

All other VPI/VCI pairs can be assigned by the INA for carrying PPP traffic. Each PPP connection will be associated to one VPI/VCI provided through the MAC DVB RC protocol.

## 6.3.3 IP Address Assignment

After receiving the MAC Connect confirm message, the NIU/STB uses IPCP protocol included in the PPP protocol, according to RFC 1332 to get an IP address from the network. The PPP protocol supports the case of a fixed IP address assigned to the STB/NIU.

In the case a fixed IP address has been assigned to the NIU/STB by the operator, the IPCP protocol shall be used to make this IP address known to the INA. The PPP IPCP *Configure-Request* of the NIU/STB states which IP-address is used.

The INA can provide an(other) IP address by NAKing this option, and returning a valid IP-address. The NIU/STB shall use this IP address even in the case, the NIU/STB has a fixed one.

#### 6.3.4 Additional IP addresses

In the case the NIU/STB is also connected to customer premises equipment by a LAN, one of the following IP address assignment schemes shall be implemented:

- 1. the LAN has its own IP subnet address and subnet mask, in this case the NIU/STB acts like a router i.e. the IP subnet address and subnet mask of the LAN is completely independent of the INA. Or,
- 2. BOOTP/DHCP messages from the LAN are sent transparently through the PPP link to a server at the INA side.

Singlecast downstream traffic with a destination IP address not assigned through PPP or BOOTP/DHCP must be discarded by the INA. Upstream traffic with a source host IP address not assigned PPP or BOOTP/DHCP must be discarded by the NIU/STB and by the INA.

# 6.3.5 Security

The PAP or CHAP protocols will supply authentication and authorisation mechanisms both included in PPP.

## 6.3.6 INA Interfaces (Informative)

t.b.d.

# 6.3.7 NIU/STB Interfaces (Informative)

t.b.d.

# 7 (Informative Note A) MAC State Transitions and Time Outs

# 7.1 Ranging and Calibration

Figure 39 describes the ranging and calibration procedure in detail:

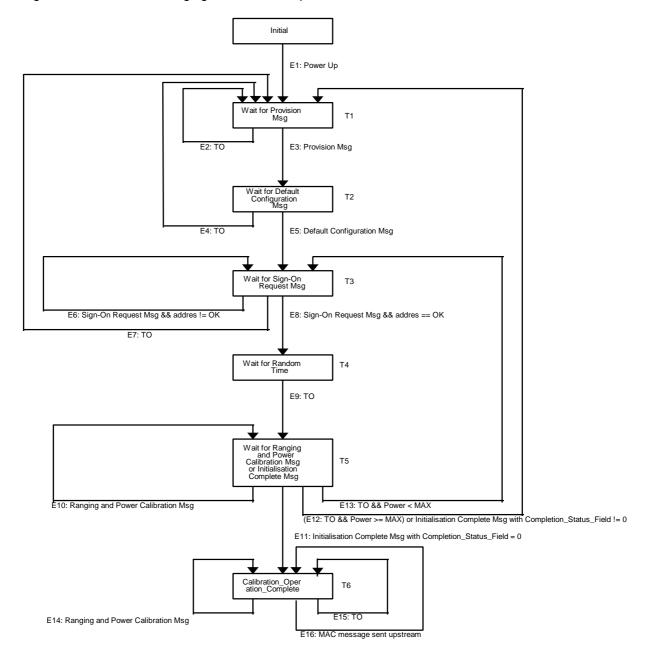


Figure 39: State Diagram for Ranging and Calibration

The boxes represent states, state-transitions are represented by arrows. State-transitions are triggered by events, denoted by: "Ex: <event>". Triggers are either the reception of MAC-messages or Time-Outs. An event can lead to a state-transition depending on a condition, this is denoted by "Ex: <event> && <condition>.

A time-out timer runs in all the states. The values of these time-out counters are denoted by Tx.

On the following pages the events are acompagnied by actions that are performed by the state machine during the state transition. Some actions are performed only under a certain condition. To make this clear, "if then else" constructions are used.

E1 Power up: Tune to any downstream channel (re)set timeout to T1 E2 Time Out received: Tune to next downstream channel (re)set timeout to T1 E3 Provision Msg received: IF current DS freq. != provision Freq. Tune provision channel (re)set timeout to T2 E4 Time Out received: Do nothing (re)set timeout to T1 Default Configuration Msg received: E5 Tune to service channel TimeOffset = Absolute Time Offset Output Power Level = MIN Power Level Power\_Retry\_Count = 0  $Sign-On_Retry_Count = 0$ (re)set timeout to T3 E6: Sign-On Msg && addres != OK: Do nothing (re)set timeout to T3 E7: Time Out received: Do nothing (re)set timeout to T1 E8: Sign-On Msg && addres == OK: Sign-On\_Retry\_Count = min (Sign-On\_Retry\_Count+1, 255) (re)set timeout to T4 E9: Time Out received: Send Sign-On Response Msg in ranging area (re)set timeout to T5 E10: Ranging and Power Calibration Msg: Time Offset = Time Offset + Time Offset Value Output\_Power\_Level = Output\_Power\_Level + Power\_Control\_Setting x 0.5 dB IF Ranging\_Slot\_Included send Ranging and Power Calibration Response Msg on Ranging\_Slot\_Number **ELSE** send Ranging and Power Calibration Response Msg in ranging area (re)set timeout to T5 E11 Initialisation Complete Msg with Completion\_Status\_Field = 0: (re)set timeout to T6 E12 (Time Out received && Power >= MAX) or Initialisation Complete Msg with

(re)set timeout to T1

E13 Time Out received && Power < MAX:

Power\_Retry\_Count++

Do nothing

Completion\_Status\_Field != 0:

 $IF\ Power\_Retry\_Count < Sign\_On\_Incr\_Pwr\_Retry\_Count\\ Do\ Nothing$ 

ELIF Tuned to Backup Service Channel

Tune to Service Channel

Output\_Power\_Level = min (O utput\_Power\_Level + x dB , MAX\_Power\_Level)

Power Retry Count = 0

ELIF Service Channel != Backup Service Channel

 $(x \in [0.5..2])$ 

Tune to Backup Service Channel

Power Retry Count = 0

**ELSE** 

Output\_Power\_Level = min (Output\_Power\_Level + x dB , MAX\_Power\_Level)

Power\_Retry\_Count = 0

(re)set timeout to T3  $(x \in [0.5..2])$ 

E14 Ranging and Power Calibration Msg:

 $Absolute\_Time\_Offset = Absolute\_Time\_Offset + Time\_Offset\_Value$ 

Output\_Power\_Level = Output\_Power\_Level + Power\_Control\_Setting x 0.5 dB

IF Ranging\_Slot\_Included

send Ranging and Power Calibration Response Msg on Ranging Slot Number

ELSE

send Ranging and Power Calibration Response Msg in ranging area

(re)set timeout to T6

E15 Time Out received

Send Idle Mgs

(re)set timeout to T6

E16 MAC message sent upstream

(re)set timeout to T6

The following table links the timeout of the State Transition Diagram to the timeouts in the ETS 300 800.

Table 61: TimeOuts NIU SignOn STD

Timeout	Description	Code (see Def. Conf. Msg.)
T1	Provision Interval	fixed 900 msec
T2	Default Configuration Interval	0x2
T3	Sign-On Message Interval	0x2
T4	Random ( ResponseCollectionTimeWindow )	see Sign on Requ. Msg.
T5	Sign On Response -> Rang. and Power Calibr. Sign On Resp> Initial. Complete Rang. and Power Calibr. Resp> Rang. and Poer Cal. Rang. and Power Calibr. Resp> Initial. Complete	0x3
T6	Idle Interval	see Def. Conf. Msg.


#### 7.2 Connection Establishment

Two cases of connection establishment exist: connection establishment of the 1 st or default connection, and connection establishment of additional connections after the default connection has been successfully established.

If the STB detects the continuous loss of carrier or framing for longer than LofTimeout, then the STB will consider all connections released and will go to the Wait for Login state (T0?).


#### Default Connection Establishment

This procedure is started after a successful Sign-On and Calibration procedure. A special case exists when the STB loses the Initialization Complete Message but receives a Connect Message. In this special case, the STB shall proceed as if the Initialization Complete Message had been received.

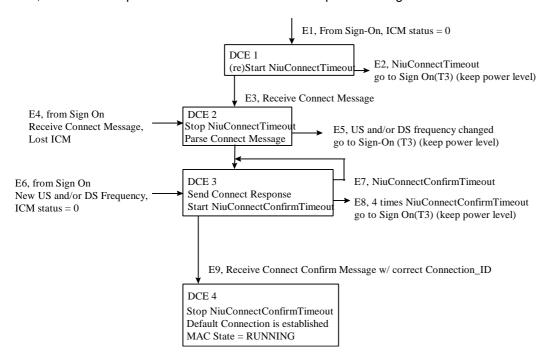


#### Subsequent Connection Establishment

This procedure can be entered only when the STB has at least one operating (i.e. not STOPPED via a TCM) connection.

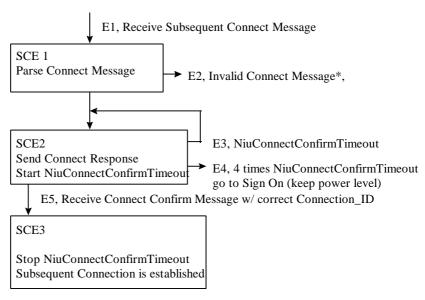

#### 7.3 Connection Release

The STB may release connections only when it has at least one operating (i.e. not STOPPED by TCM) connection. If the STB has it's number of connections reduced to one connection then the remaining connection is considered the default connection.

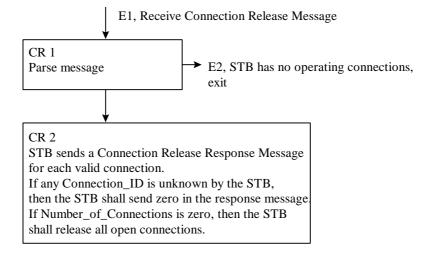


# 7.4 Reservation Process

The figure below gives a state diagram of the reservation process. The boxes represent states, state-transitions are represented by arrows. State-transitions are triggered by events, denoted by: "Ex:<event>". Triggers are either the reception of MAC messages or time outs. An event can lead to a state-transition depending on a condition; this is denoted by "Ex:<event>&&<condition>".

A pending slot is defined as a slot for which no reservation request has been sent yet.

A requested slot is defined as a slot for which a reservation request has already been sent, but which is not yet granted.

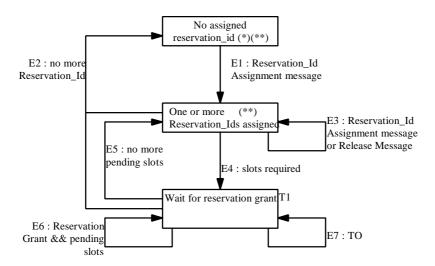

- (\*) 'No assigned Reservation\_id' State is to be linked to the state diagram of connection establishment process.
- (\*\*) No Time-Out is associated to this state since when transition shall occur is not in the scope of the specification.
- E1 Reservation\_ld Assignment message :

If a 'Reservation\_Id assignement' message is received with a valid connection\_id send a 'Reservation\_id response' message consider new parameters go to 'One or more Reservation\_Ids assigned'

#### E2 No more reservation Id:

If a 'Release' message closes the last connection with an assigned reservation\_id,

Delete all slots allocated in reservation region for this connection

go to 'No assigned reservation\_id' state

If a 'Reprovisioning' message is received with 'Delete\_Reservation\_IDs' bit set,
Delete all slots allocated in reservation region
go to 'No assigned reservation id' state

#### E3 'Reservation Id Assignment' message or 'Release' message

If a 'Release' message closes the connection with an assigned reservation\_id (but not the last),

Delete all slots allocated in reservation region for this connection Stay in same state

If a 'Reservation\_Id assignement' message is received with a valid connection\_id consider new parameters send a 'Reservation\_ID\_Response' message

# E4 Reservation slots are required by the NIU:

Stay in same state

Send a 'Reservation Request' message

with reservation\_id corresponding to the connection maintain count of pending slots and requested slots for this connection Set a timer to T1 (equal to 'grant\_protocol\_timeout' associated to the reservation\_id)

Go to 'Wait for reservation grant' state

E5 Reservation Grant message granting all requested slots :

if a 'reservation grant' message grants all the previous requests (ie with 'remaining slot count' field set to 0) and no pending slots

Disable active timers

Go to 'One or more Reservation IDs assigned' state

E6 Reservation Grant message but requested slots still to be granted:

if a 'reservation grant' message grants previous requests (but not all or some with 'remaining slot count' field different from 0)

For connection with request not completely granted

Set timer of the connection to T1 (equal to 'grant\_protocol\_timeout' associated to the reservation id)

Update number of requested slots with 'granted slot count' field

If 'remaining\_slot\_count' < 15 and (pending\_slot\_count != 0 or requested slot count!= remaining slot count)

Send a 'Reservation Request' message

with reservation\_id corresponding to the connection

maintain count of pending slots and requested slots for this connection

For completely granted connection

disable timer of the connection

set number of requested slots to 0 for this connection

If pending slots exist

Send a 'Reservation Request' message

with reservation\_id corresponding to the connection

maintain count of pending slots and requested slots for this connection

Set timer of the connection to T1 (function of 'grant\_protocol\_timeout' associated to the reservation\_id)

If new slots are required for a connection, update number of pending slots.

Stay in same status

#### E7 Time Out received:

If an active timer ellapsed

Send a reservation status request message for the associated connection Set timer of the connection to T1 (function of 'grant\_protocol\_timeout' associated to the reservation\_id)

If new slots are required for a connection, update number of pending slots.


Stay in same status

Time-out T1 is dynamically set by the INA in the 'Reservation\_Id\_Assignment' message (grant\_protocol\_timeout parameter).

#### 7.5 Resource Request


The NIU uses the <MAC> Resource Request Message to request a new connection or to change the parameters associated with an existing connection. In the above cases the resource allocation process is initiated by the NIU. After this initiation, the connections are allocated or changed by the INA using the MAC processes previously defined.

The following gives a state diagram of the Resource Request Processes, in terms of the processes already described and using the terminology as in the previous sections.

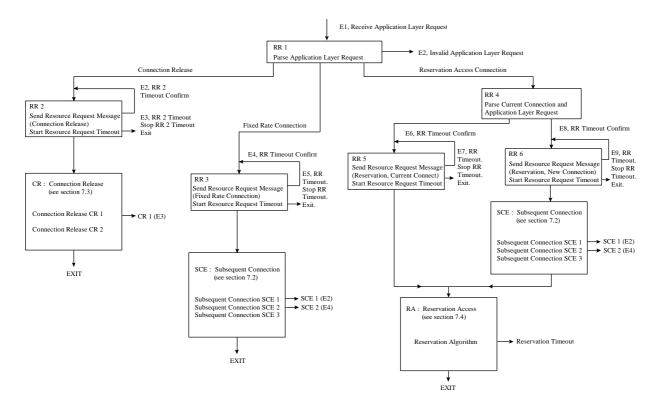


# 7.6 Recalibration

The STB may be recalibrated whenever it has at least one open (i.e. STOPPED or RUNNING) connection.

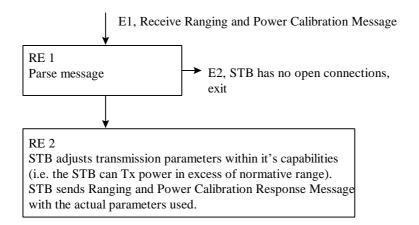

#### 7.7 Reprovision Message


The STB can be reprovisioned whenever it has at least one operating connection.

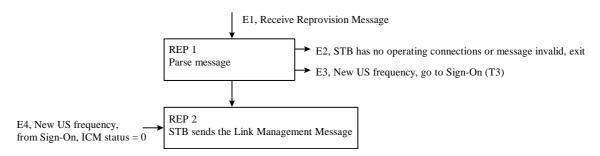

#### 7.8 Transmission Control Message

The Transmission Control Message (TCM) controls aspects of upstream and downstream transmission. The commands are sent to the STB in either broadcast or singlecast mode. The STB is in one of the following MAC states:

- RUNNING, the STB has at least one operating connection,
- STOPPED, the STB has received a TCM Stop Upstream Transmission command, and
- ERROR, the STB has received a ICM with non-zero Completion\_Status\_Field.
- NONE, the STB has no open connections

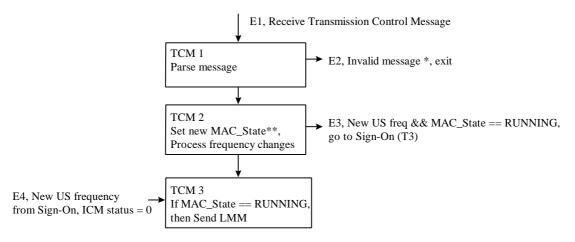

\* Invalid TCM

Besides invalid parameter values, the received TCM will be considered invalid if


 $(Start\_Upstream\_Transmission \&\& Stop\_Upstream\_Transmission) \ or \ (Old\_Frequency != CurrentFrequency) in which case the STB will ignore the message.$ 

```
** new MAC state

if (Start_Upstream_Transmission == 0 && Stop_Upstream_Transmission == 0) {
	New_MAC_State = Old_MAC_State
} else if (Start_Upstream_Transmission == 0 && Stop_Upstream_Transmission == 1) {
	if (Old_MAC_State == ERROR) New_MAC_State = ERROR
	else New_MAC_State = STOPPED
} else if (Start_Upstream_Transmission == 1 && Stop_Upstream_Transmission == 0) {
	If (Old_MAC_State == ERROR && Broadcast) New_MAC_State = ERROR
	else New_MAC_State = RUNNING
}
```

# 7.9 Status Request Message

The STB can be queried for status whenever it has at least one operating connection.

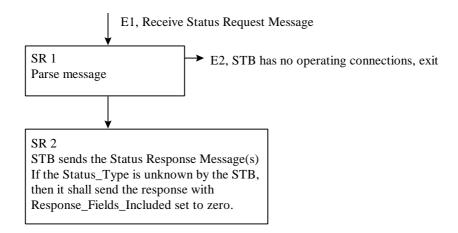

# 7.10 Idle Message

The Idle Message is sent during periods of Upstream MAC message inactivity that exceeds a non-zero Idle\_Interval by the STB whenever it has at least one operating connection.

# 8 (Informative Note B) Bibliography

For the purposes of this ETS, the following informative references apply:

- [A] DVB-A008 October 1995 "Commercial requirements for asymmetric interactive services supporting broadcast to the home with narrowband return channels"
- [B] DAVIC 1.5 Specification. DAVIC System Reference Model
- [C] 91/263/EEC Directive on Terminal equipment
- [D] TR 101 196 Digital Video Broadcasting (DVB); Guidelines for the implementation of the DVB Interaction Channel on Cable.

# 9 (Informative Note C) History

Document history		
7 June 1996	(az) TMDVB document converted to ETS and returned to Peter MacAvock (DVB Project Office).	
9 July 1996	SAT included new changes after DVB-RC meeting and submitted it to DVB-TM	
19 July 1996	PMA a few editorials, change of ref. Model and sent to YL (SAT) for final editorials	
29 September	PMA update of TM1640Rev.3 with TM1752	
April 22, 1998	Changes according to the DVB-RCCL Meeting in Paris, April 21 - 22, 1998	
June 17, 1998 (rccl_10.doc)	Changes acc. to the DVB-RCCL Meeting in Kuala Lumpur, June 15 - 17, 1998	
August 20, 1998 (rccl_10a.doc)	<ul><li>- Editorial changes.</li><li>- 3.088 Mbit/s is mandatory data rate.</li><li>- 6.176 Mbit/s upstream added.</li></ul>	
August 26, 1998 (rccl_11.doc)	Changes acc. to the DVB-RCCL Meeting in Geneva, August 24 - 26, 1998: - Security option added Mid Layers for Interactive Cable STBs / Cable Data Modems added Chapter 5.2.3.8 "Interference (spurious) suppression" added.	
September 16, 1998 (rccl_11a.doc)	- Editorial changes <mac> state diagrams included Minislots included.</mac>	
September 27, 1998 (rccl_12.doc)	Changes acc. to the DVB-RCCL Meeting in Clearwater, September 25 - 27, 1998: - Editorial changes NIU / INA capabilities extended / introduced MAC Extension (Resource Request) added.	
November 6, 1998 (rccl_13.doc)	Changes acc. to the DVB-RCCL Meeting in Geneva, November 4 - 6, 1998: - Editorial changes.	
March 8, 1999 (rccl_13a.doc)	- Editorial changes Clarifications according to the discussions on the E-Mail reflectors.	
March 12, 1999 (rccl_14.doc)	Changes acc. to the DVB-RCCL Meeting in Geneva, March 10 - 12, 1999: - Editorial changes.	
April 16, 1999 (rccl_15.doc)	Changes acc. to the DVB-RCCL Meeting in Hamamatsu, April 12 - 16, 1999: - Editorial changes.	
May 28, 1999 (rccl_16.doc)	Clarifications acc. to the DVB-RCCL Meeting in Geneva, May 27 – 28, 1999.	