

Amstrad_Monitor

COLLABORATORS

	<i>TITLE :</i> Amstrad_Monitor		
<i>ACTION</i>	<i>NAME</i>	<i>DATE</i>	<i>SIGNATURE</i>
WRITTEN BY		August 24, 2024	

REVISION HISTORY

NUMBER	DATE	DESCRIPTION	NAME

Contents

1	Amstrad_Monitor	1
1.1	Connecting an Amstrad Monitor to your Amiga	1

Chapter 1

Amstrad_Monitor

1.1 Connecting an Amstrad Monitor to your Amiga

Connecting An Amstrad Monitor To Your Amiga

Typed in by PARASITE of LSD.

WHAT YOU NEED

1 female 23 pin D-connector.
1 Amstrad CPC 8-pin DIN connector.
Cable length as required (5 core).
Soldering iron.
Solder.
Small screwdriver.

ASSEMBLY


Connect the following pins;

AMIGA		AMSTRAD
Pin 3	to	Pin 1 (red)
Pin 4	to	Pin 2 (green)
Pin 5	to	Pin 3 (blue)
Pin 10	to	Pin 4 (sync)
Pin 16	to	pin 5 (ground)

THE AMIGA SOCKET



THE AMSTRAD SOCKET (This is really round, which is hard to draw in text)

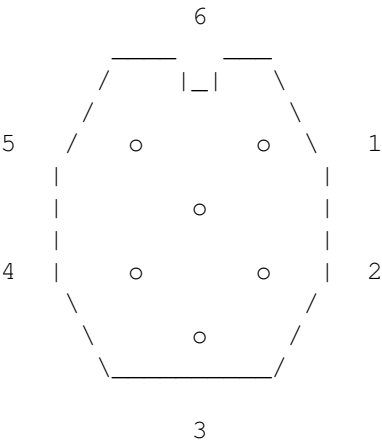

End.

Back To Main Menu
Back To Projects Menu