

**Amstrad\_Monitor**

<b>COLLABORATORS</b>
----------------------

	<i>TITLE :</i> Amstrad_Monitor		
<i>ACTION</i>	<i>NAME</i>	<i>DATE</i>	<i>SIGNATURE</i>
WRITTEN BY		August 24, 2024	

<b>REVISION HISTORY</b>
-------------------------

NUMBER	DATE	DESCRIPTION	NAME

# Contents

<b>1</b>	<b>Amstrad_Monitor</b>	<b>1</b>
1.1	Connecting an Amstrad Monitor to your Amiga . . . . .	1

## Chapter 1

# Amstrad\_Monitor

### 1.1 Connecting an Amstrad Monitor to your Amiga

Connecting An Amstrad Monitor To Your Amiga

Typed in by PARASITE of LSD.

#### WHAT YOU NEED

1 female 23 pin D-connector.  
 1 Amstrad CPC 8-pin DIN connector.  
 Cable length as required (5 core).  
 Soldering iron.  
 Solder.  
 Small screwdriver.

#### ASSEMBLY


Connect the following pins;

AMIGA		AMSTRAD
Pin 3	to	Pin 1 (red)
Pin 4	to	Pin 2 (green)
Pin 5	to	Pin 3 (blue)
Pin 10	to	Pin 4 (sync)
Pin 16	to	pin 5 (ground)

#### THE AMIGA SOCKET



THE AMSTRAD SOCKET (This is really round, which is hard to draw in text)

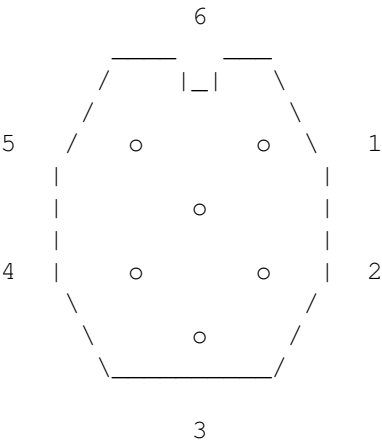

End.

Back To Main Menu  
Back To Projects Menu