


Last modified: June 20, 1996

### Bridging IPX Between Two Prestiges

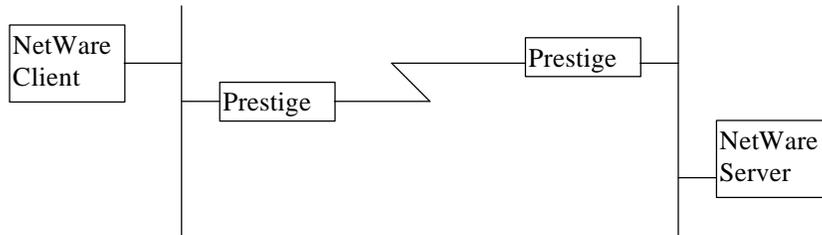

Note: The IPX network numbers shown above are examples only!

This configuration note explains how to set up a workstation on a network to use a Prestige to make a connection to another Prestige to bridge IPX. In this configuration, the workstation has NetWare client software so that you will be able to log into the NetWare server on the remote network. There will be three items that you need to set up. These are the workstation and the two Prestiges.

#### I. Workstation Setup (NetWare Client)

To set up the workstation (W/S), you will need to set the following parameters:

- **IPX Frame Type** - First determine the frame type that the NetWare server that you wish to login to is using, and set the same frame type on the NetWare client workstation.
- **Server Name** - In some cases, you may need the name that has been configured for the NetWare server you wish to login to. In the previous example, that would be 'Server\_1'.

The procedure for configuring these parameters for your workstation may differ depending on the type of IPX client software you are using on your workstation. If you are unfamiliar with how to set these parameters, you can refer to the technical notes corresponding to your software.

- DOS workstation w/ NetWare Client (VLM) software
- Windows 95/NT LAN Setup

#### II. Prestige 2 Setup

In order to configure the Prestige on the NetWare client side for this application, make sure you have the following menus configured correctly.

Note that the fields are indicated in **bold** type.

## Menu 1:

```
Menu 1 - General Setup

System Name= Pres_2
Location= San Jose
Contact Person's Name= CC

Route IP= No
Route IPX= N/A
Route AppleTalk= N/A
Bridge= Yes

Press ENTER to Confirm or ESC to Cancel:
```

- In menu 1, make sure the **Bridge** field is set to 'Yes'.

## Menu 2:

```
Menu 2 - ISDN Setup

Switch Type= Northern Telecom Custom

B Channel Usage= Switch/Switch
1st Phone #= 5551212
  SPID #= 408555121200
  Analog Call= Modem
2nd Phone #= 5551213
  SPID #= 408555121300
  Analog Call= Voice

Press ENTER to Confirm or ESC to Cancel:
```

- In menu 2, set your switch type, phone numbers, and SPIDs (if necessary).
- After saving this menu, you will be asked if you want to perform an ISDN connection test. Select 'Yes' to perform the test. If the test fails, refer to the User's Manual Troubleshooting section for corrective action.

## Menu 3.5:

```

Menu 3.5 - Bridge Ethernet Setup

Handle IPX= Client

Press ENTER to Confirm or ESC to Cancel:

```

- Set **Handle IPX** to 'Client'.

## Menu 11:

```

Menu 11 - Remote Node Profile

Rem Node Name= IPX_user           Route= None
Active= Yes                       Bridge= Yes
Call Direction= Outgoing         Encaps= PPP
                                  Edit PPP Options= No
Incoming:                         Rem IP Addr= N/A
  Rem Login=                      Edit IP/IPX/AppleTalk/Bridge= Yes
  Rem Password=
  Rem CLID=
  Call Back= N/A                 Telco Option:
                                  Transfer Rate= 64K or 56K

Outgoing:                         Session Options:
  My Login= username             Input Filter Sets=
  My Password= *****          Output Filter Sets=
  Pri Phone #= 5551212           Call Filter Sets=
  Sec Phone #=                   Idle Timeout(sec)= 300

Press ENTER to Confirm or ESC to Cancel:

```

- The **Call Direction** should be set to 'Outgoing'.
- Make sure the remote node is enabled by setting **Active** to 'Yes'.
- **My Login** and **My Password** is the login information that this Prestige will use to connect to the remote router.
- The **Pri Phone #** field should be set to the correct phone number to dial.
- **Route** should be set to 'None'.
- The **Bridge** field should be set to 'Yes'.
- Set **Edit IP/IPX/AppleTalk/Bridge** to 'Yes' and press ENTER.

## Menu 11.2:

```

Menu 11.2 - Remote Node Network Layer Options

```

```

IP Options:
  Rem IP Addr:
  Rem Subnet Mask= N/A
  My WAN Addr= N/A
  Metric= N/A
  Private= N/A
  RIP= N/A
IPX Options:
  Dial-On-Query= N/A
  Rem LAN Net #= N/A
  My WAN Net #= N/A
  Hop Count= N/A
  Tick Count= N/A
  W/D Spoofing(min)= N/A
  SAP/RIP Timeout(min)= N/A

AppleTalk Options:
  Dial-On-Query= N/A
  Rem LAN Net Range= N/A
  1st Zone Name= N/A
  2nd Zone Name= N/A
  My WAN Net #= N/A
  My WAN Node ID= N/A
  Metric= N/A
  ZIP Timeout(min)= N/A

Bridge Options:
  Dial-On-Broadcast= Yes
  Ethernet Addr Timeout(min)= 3

Enter here to CONFIRM or ESC to CANCEL:

```

- **Dial-On-Broadcast** should be 'Yes'.

### III. Prestige 1 Setup

In order to configure the Prestige on the NetWare server side, make sure you have the following menus configured correctly.

Note that the fields are indicated in **bold type**.

#### Menu 1:

```

Menu 1 - General Setup

System Name= Pres_1
Location= San Jose
Contact Person's Name= CC

Route IP= No
Route IPX= N/A
Route AppleTalk= N/A
Bridge= Yes

Press ENTER to Confirm or ESC to Cancel:

```

- In menu 1, make sure the **Bridge** field is set to 'Yes'.

#### Menu 2:

```

Menu 2 - ISDN Setup

Switch Type= Northern Telecom Custom

B Channel Usage= Switch/Switch
1st Phone #= 5551214

```

```
SPID #= 408555121400
Analog Call= Modem
2nd Phone #= 5551215
SPID #= 408555121500
Analog Call= Voice

Press ENTER to Confirm or ESC to Cancel:
```

- In menu 2, set your switch type, phone numbers, and SPIDs (if necessary).
- After saving this menu, you will be asked if you want to perform an ISDN connection test. Select 'Yes' to perform the test. If the test fails, refer to the User's Manual Troubleshooting section for corrective action.

#### Menu 3.5:

```
Menu 3.5 - Bridge Ethernet Setup
Handle IPX= Server

Press ENTER to Confirm or ESC to Cancel:
```

- Set **Handle IPX** to 'Server'.

## Menu 11:

```

Menu 11 - Remote Node Profile

Rem Node Name= IPX_user           Route= None
Active= Yes                       Bridge= Yes
Call Direction= Incoming         Encaps= PPP
                                  Edit PPP Options= No
Incoming:                          Rem IP Addr= N/A
  Rem Login= username            Edit IP/IPX/AppleTalk/Bridge= Yes
  Rem Password= *****
  Rem CLID=
  Call Back= N/A                Telco Option:
                                  Transfer Rate= 64K or 56K

Outgoing:                          Session Options:
  My Login=                      Input Filter Sets=
  My Password=                   Output Filter Sets=
  Pri Phone #= N/A               Call Filter Sets=
  Sec Phone #= N/A               Idle Timeout(sec)= 300

Press ENTER to Confirm or ESC to Cancel:

```

- The **Call Direction** should be set to 'Incoming'.
- Make sure the remote node is enabled by setting **Active** to 'Yes'.
- **Rem Login** and **Rem Password** is the login information that this Prestige will expect from the remote router.
- **Route** should be set to 'None'.
- The **Bridge** field should be set to 'Yes'.
- Set **Edit IP/IPX/AppleTalk/Bridge** to 'Yes' and press ENTER.

## Menu 11.2:

```

Menu 11.2 - Remote Node Network Layer Options

IP Options:                         AppleTalk Options:
  Rem IP Addr:                     Dial-On-Query= N/A
  Rem Subnet Mask= N/A             Rem LAN Net Range= N/A
  My WAN Addr= N/A                 1st Zone Name= N/A
  Metric= N/A                      2nd Zone Name= N/A
  Private= N/A                     My WAN Net #= N/A
  RIP= N/A                          My WAN Node ID= N/A
IPX Options:                         Metric= N/A
  Dial-On-Query= N/A               ZIP Timeout(min)= N/A
  Rem LAN Net #= N/A
  My WAN Net #= N/A
  Hop Count= N/A
  Tick Count= N/A
  W/D Spoofing(min)= N/A
  SAP/RIP Timeout(min)= N/A

Bridge Options:
  Dial-On-Broadcast= No
  Ethernet Addr Timeout(min)= 3

Enter here to CONFIRM or ESC to CANCEL:

```

- **Dial-On-Broadcast** should be 'No'.